


# NT(A)855-C S10 零件图册

NT(A)855-C S10 PARTS CATALOG

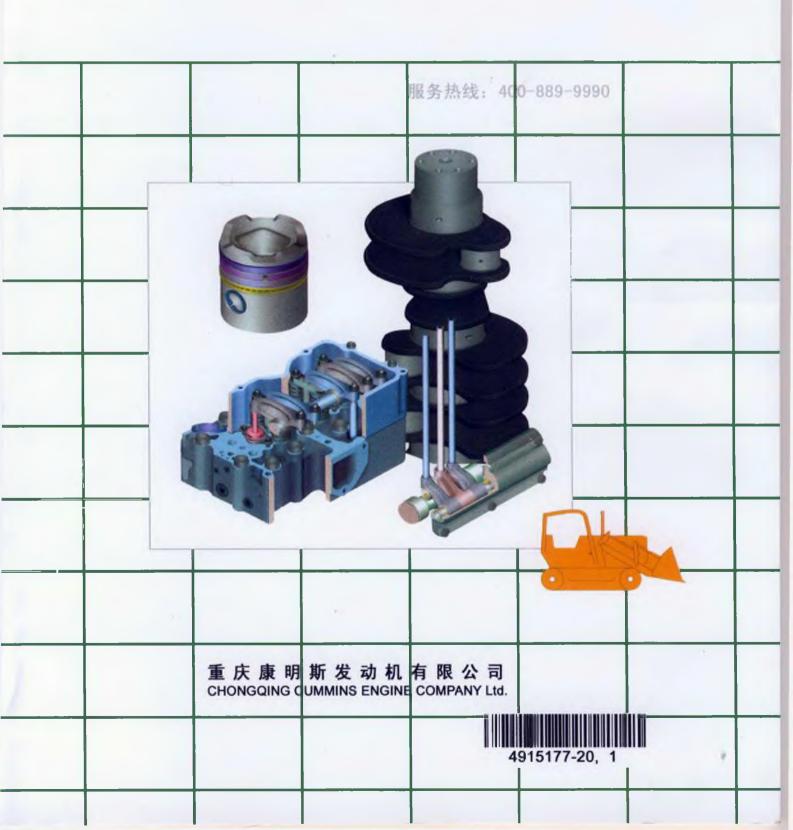

## NT(A)855-C S10 零件图册

适用于 NT(A)855-C S10 发动机 零件号: 4915177

### 重庆康明斯发动机零件图册 适用机型 NT(A)855-C S10

### 使 用 说 明

本图册是根据公司 NT(A)855-C S10发动机需要而编制的工程机械类发动机零件图册,它以直观的形式显现出了发动机的易损零件和一般零件。是用户选购零部件指导性的资料。

随着发动机的不断改进,图册所示零件号和实际装配零件号可能有出入,请用户在选购零件时尽可能提供以下情况;

- 一. 发动机铭牌或合格证上的机型和生产指令号(S.O)、以及发动机出厂序号。
- 二. 写明图册中的图册零件号(最好注明页次)。

我公司可根据用户提供的以上资料, 查到对应的实际零件号。

用户在使用此图册过程中, 如有问题, 可随时向我公司提出, 我们会尽快的作出答复。

重庆康明斯发动机有限公司 2008 年 9 月

### INSTRUCTION

The catalog is compiled for NT(A)855-C S10 engine, which used on engineering engine, It's very easy for you to find what kinds of engine parts should be ordered and replaced by using this catalog, and it is also a guideline for our customers to order the parts he/she wants.

With improvement of engine producing, the part no. in the catalog may be different from that in present production.

The following information should be supplied when you order the parts:

\*Engine model and shop order no. (s.o.) on the nameplate of your engine or the certificate, and also the series no. of engine.

\*\*The exact part no. in the catalog (it's better to put down the page no. in the catalog).


We can find out the present part no. upon your correct information, then we'll take prompt action to resolve your problems.

Chongqing Cummins Engine Company ltd. 2008.9


项 目	Description	Page	页次
辅助驱动皮带轮	PULLEY,ACCESSORY DRIVE	1	
气缸体	CYLINDER BLOCK	2	
曲轴	CRANKSHAFT	4	
活塞和连杆	PISTON & CONN ROD	6	
凸轮轴	AMSHAFT	8	
出水管安装	COVER, COMPONENT	10	)
通风口位置	BREATHER AND VENT COVER	12	2
发动机前支架	ENGINE SUPPORT	14	ļ
发电机及安装	MTG,ALTERMATOR	16	5
减振器	DAMPER VIBRATION	18	3
磁力开关	SWITCH MAGNETIC	20	)
风扇布置	FAN ARRANGEMENT	20	)
燃油滤清器	FILTER,FUEL	22	2
燃油滤清器接头	FUEL FILTER HOSE	24	ŀ
飞轮壳	FLYWHEEL HOUSING	26	;
手孔盖	COVER HEAD HOLE	28	}
附件驱动安装	ACCESSORY DRIVE MTG	30	)
燃油管路	FUEL PLUMBING	32	<u> </u>
飞轮	FLYWHEEL	34	ŀ
机油泵及安装	MTG,OIL PUMP	36	;
机油冷却器	LUBRICATING OIL COOLER	40	)
机油尺	DIPSTICK	42	2
进气管	TUBE,AIR INLET	44	ŀ
机油盘	IOL PAN	48	}
增压器	TURBOCHARGER	50	)
气缸盖	CYLINDER HEAD	52	2
喷油器	INJECTOR	54	ŀ
摇臂室	HOUSING ROCKER	56	5
马轮从动件总成	HOUSING,CAM FLLE	58	3
启动马达及安装	STARTING MOTOR & MTG	59	)
排气管布置	EXHAUST MANIFOLD ARRANGEMENT	60	)
油门拉杆	LEVER THROTTLE	61	
然油泵总成	PUMP,FUEL	62	<u>}</u>
曾压器回油管	TUBE,OIL DRAIN	63	}
水滤器座	HEAD, CORROSION RESISTOR	66	;
进水接头	WATER INLET CONN	68	3
出水管联接	OUT WATER MANIFOLD	70	)
水泵	WATER PUMP	72	)

### 辅助驱动皮带轮 Pulley,Accessory Drive

选用件号: AD 115 Option No: AD 115

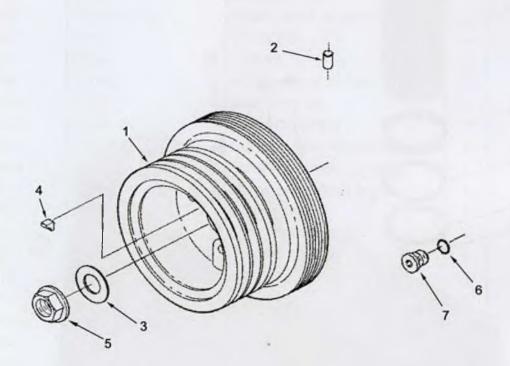

图上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
1	3013538	附件驱动皮带轮	PULLEY, ACCESSORY DRIVE	1	
	3012602	附件驱动皮带轮安装	PULLEY, ACCESSORY MOUNTING	1	
2	70550	定位销	DOWEL, PIN	1	
3	193136	平垫圈	WASHER, PLAIN	1	
4	3008947	键槽密封	SEAL, KEYWAY	1	
5	3012526	六角螺母	NUT, HEXAGON FLANGE	1	
6	3037537	O型密封圈	SEAL, O RING	1	
7	3040813	螺塞	PLUG THREADED	1	
	i.				

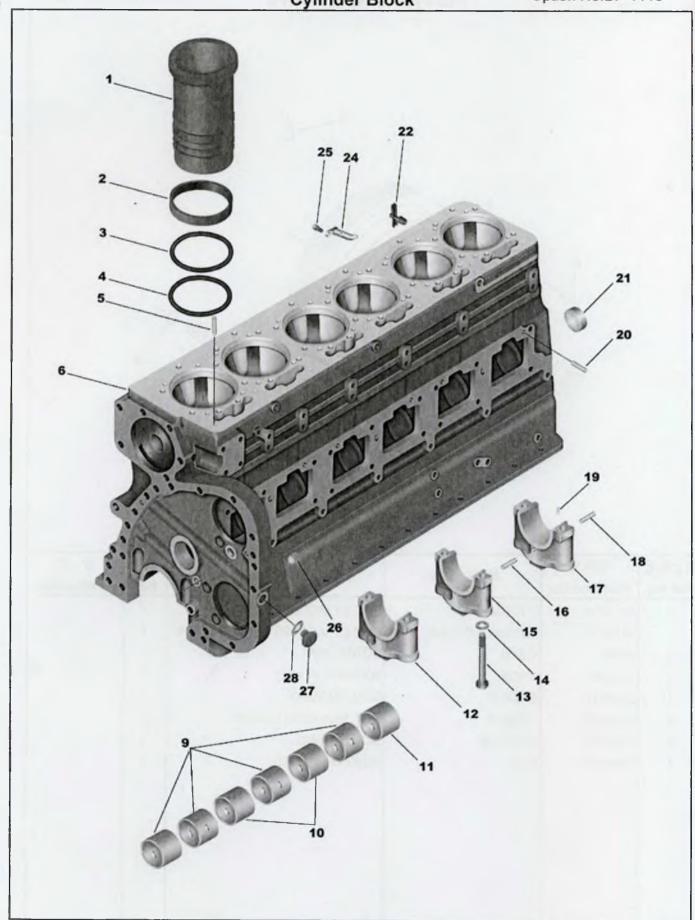


气缸体

Cylinder Block


选用件号: BP 1115 Option No: BP 1115

图上标号	零件号	Cyl	THE STOCK	数量	备注
Ref No	Part Number	零件名称	Part Name	Req	Remarks
	3081283	缸体总成	BLOCK CYLINDER	1	
19	67211	后主轴承定位销	DOWEL, REAR MAIN BEARING	2	
5	68585	定位销	DOWEL,PIN	6	
18	202903	<b>园型销</b>	PIN POLL	2	
13	208346	六角螺栓	SCREW,HEX HEAD CAP	14	
14	3046246	平垫圈	WASHER PLAIN	14	
6	3081281	汽缸体	BLOCK CYLINDER	1	
12	3008047	主轴承盖	CAP MAIN BEARING(1# 3# 5)	3	
15	3008048	主轴承盖	CAP MAIN BEARING(2# 4# 6)	3	
17	3008049	主轴承盖	CAP MAIN BEARING 7#	1	
11	3011951	村套	BUSHING(7#)	1	
9	3028075	衬套	BUSHING(1# 2# 4# 6#)	4	
10	3028269	衬套	BUSHING(3# 5#)	2	
6	3081281	汽缸体	BLOCK CYLINDER	1	
22	3087690	放水开关	DRAINCOCK	1	
	AR 9759	汽缸套总成	LINER,CYLINDER	6	
2	215090	缝隙密封圈	SEAL	1	
3,4	3032874	O型密封圈	SEAL O RING	2	
1	3055099	气缸套	LINER,CYLINDER	1	
24	3013591	活塞冷却喷嘴	NOZZLE PISTON COOLING	6	
25	3033822	带垫閥螺栓	SCREW CAPTIVE WAS	6	
	3054948	气缸体密封环	SEAL	6	
				M	
			11		
	0	(40)	1		
			1		
			(		

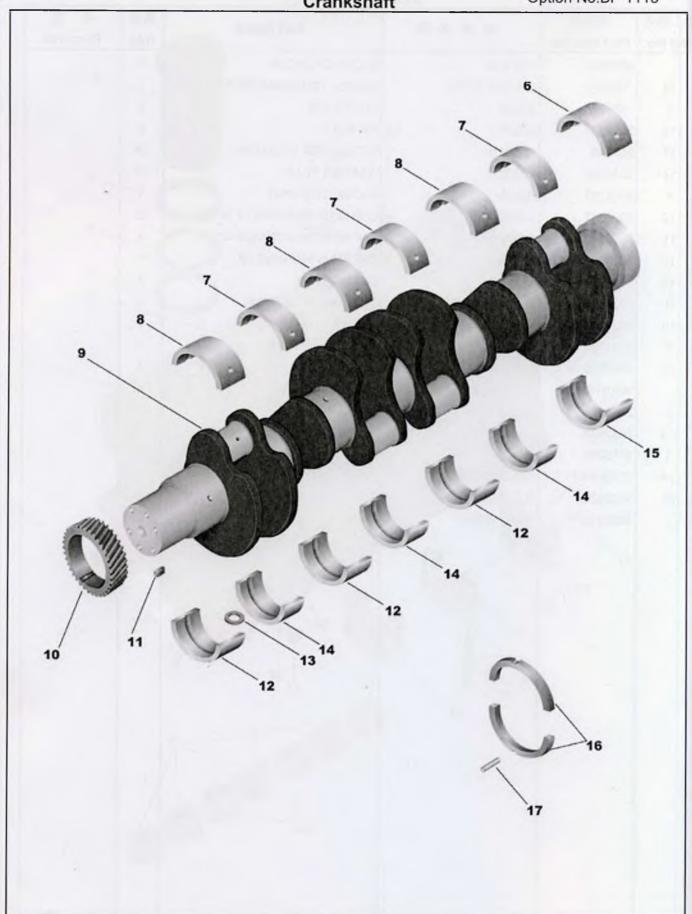

曲轴 Crankshaft 选用件号: BP 1115 Option No: BP 1115

		Option No:	BF 1113		
图上标号	零件号	零件名称	Part Name	数量	备 注
Ref No	Part Number	3 11 14 14		Req	Remarks
9	3054866	整体式曲轴总成	CRANKSHAFT	1	
11	210179	曲轴齿轮键	KEY, RECTANGULAR	1	
10	3014614	曲轴齿轮	GEAR, CRANKSHAFT	1	
9	3608833	曲轴	CRANKSHAFT ENGINE	1	
	3037046	主轴瓦组件	SHELL, MAIN BEARING	1	
8	3019174	主轴瓦 (1,3,5上瓦)	BEARING, MAIN	3	
12	3019180	主轴瓦 (1,3,5下瓦)	BEARING, MAIN	3	
7	3019186	主轴瓦 (2,4,6上瓦)	BEARING, MAIN	3	
14	3019192	主轴瓦 (2,4,6下瓦)	BEARING, MAIN	3	
6	3019198	主轴瓦 (7上瓦)	BEARING,MAIN	1	
15	3019204	主轴瓦 (7下瓦)	BEARING,MAIN	1	
13	3037045	主轴承定位圈	DOWEL,RING	7	
16	3067568	止推片	BEARING, THRUST	4	
17	202903	销钉	PIN,ROLL	2	
				÷	

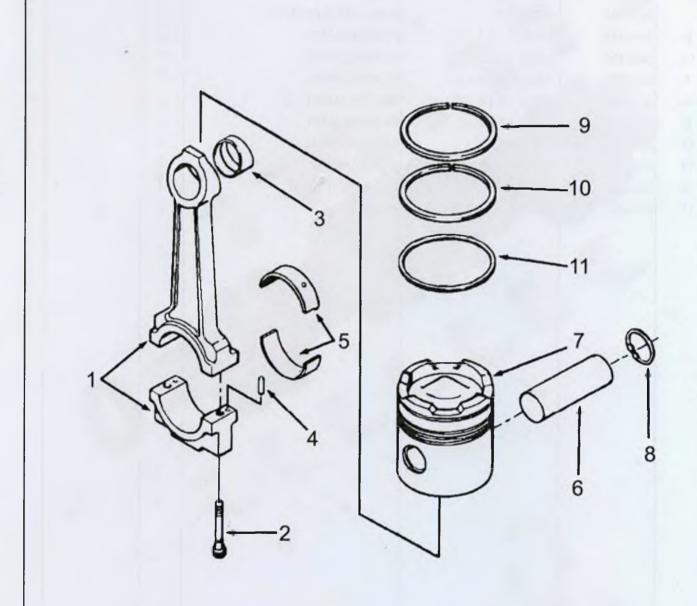


### 活塞和连杆 Piston and CONN Rod

选用件号: PPCQ151/153 Option No:PPCQ151/153

零件号 Part Number 3046267 175755 191970 214950	活塞连杆总成 挡圈	PISTON & CONN ROD	数量 Req	Remarks
175755 191970	挡圈		6	
191970		DINIO DETAINING		
	har the fold	RING RETAINING	2	
214950	活塞销	PIN PISTON	1	
	连杆瓦	BEARING,ROD	2	
4058967	压缩环	RING,COMPRESSION	1	
4058968	压缩环	RING,COMPRESSION	1	
4058969	油环	RING OIL PISTON	1	
3013930	连杆总成	ROD ENGINE CONNECTING	1	
70550	定位销	DOWEL,PIN	2	
187420	连杆衬套	BUSHING	1	
219153	连杆螺栓	BOLT, CONNECTING ROD	2	
218808	连杆	ROD,CONNECTING	1	
3076811	活塞	PISTON ENGINE	1	
			-	
	-6			
	3013930 70550 187420 219153 218808	3013930     连杆总成       70550     定位销       187420     连杆衬套       219153     连杆螺栓       218808     连杆	3013930       连杆总成       ROD ENGINE CONNECTING         70550       定位销       DOWEL,PIN         187420       连杆衬套       BUSHING         219153       连杆螺栓       BOLT,CONNECTING ROD         218808       连杆       ROD,CONNECTING	3013930       连杆总成       ROD ENGINE CONNECTING       1         70550       定位销       DOWEL,PIN       2         187420       连杆衬套       BUSHING       1         219153       连杆螺栓       BOLT,CONNECTING ROD       2         218808       连杆       ROD,CONNECTING       1


凸轮轴 Camshaft 选用件号: PPCQ151/153 Option No: PPCQ151/153

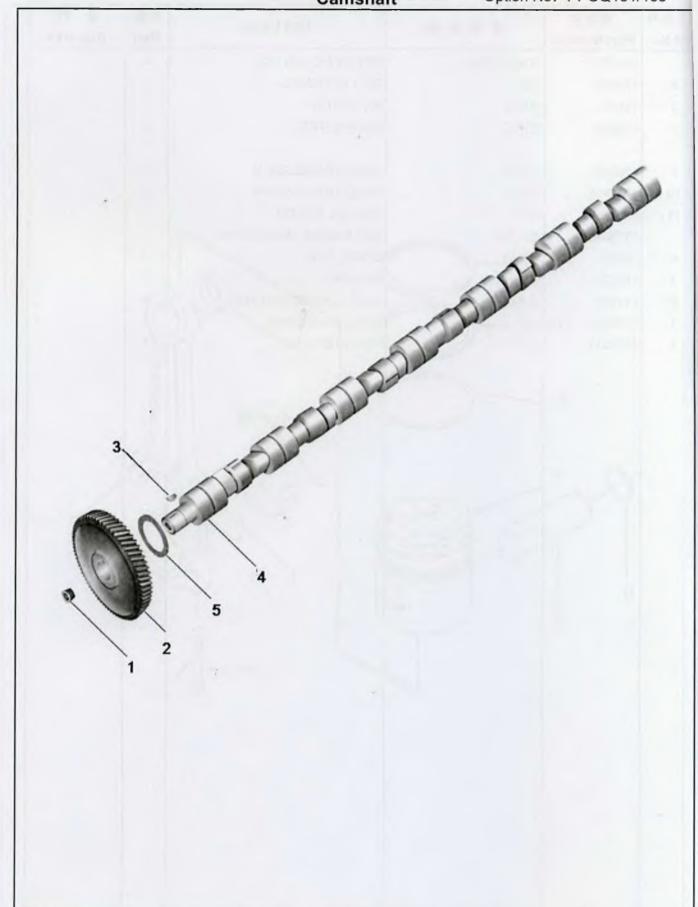

凸轮轴 Camshaft 选用件号: PPCQ151/153 Option No: PPCQ151/153

Ref No	CAMSHAFT 1 PLUG PIPE 1 GEAR CAMSHAFT 1 KEY PLAIN WOODRVF 1 CAMSHAFT 1 BEARING, THRUST 1	图上标号	零件号	零件名称	Part Name	数量	备注
1 68193	PLUG PIPE GEAR CAMSHAFT KEY PLAIN WOODRVF 1 CAMSHAFT BEARING, THRUST 1  1	(et No				_	Remarks
2 4914078	GEAR CAMSHAFT  KEY PLAIN WOODRVF  CAMSHAFT  BEARING, THRUST  1						
3 3021601	KEY PLAIN WOODRVF CAMSHAFT BEARING, THRUST  1					1	
4 4913963 凸轮轴 上推轴承 CAMSHAFT 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	CAMSHAFT BEARING,THRUST  1  1					1	
5 215233 止推轴承 BEARING,THRUST 1	BEARING, THRUST 1					1	
					CAMSHAFT	1	
		5	215233	止推轴承	BEARING,THRUST	1	
					100		
				- 1			
					4		
				and the second			
				The Paris	7111		
					N		
			- 1	-			
						4	


选用件号: BP1728 Option No: BP1728

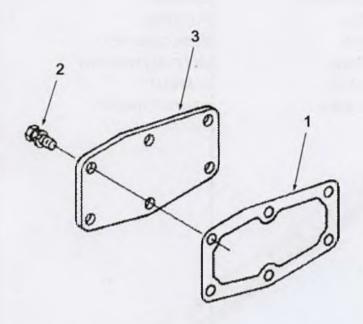

图上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
1	3069098	盖板衬垫	GASKET COVER PLATE	1	
2	3013904	带垫螺拴	SCREW CAPTIVE WAHER	6	
3	132019	总水管盖	COVER WATER HEAD	1	
		7.			

通风口位置 Breather and Vent Cover


选用件号: BR 1087 Option No: BR 1087

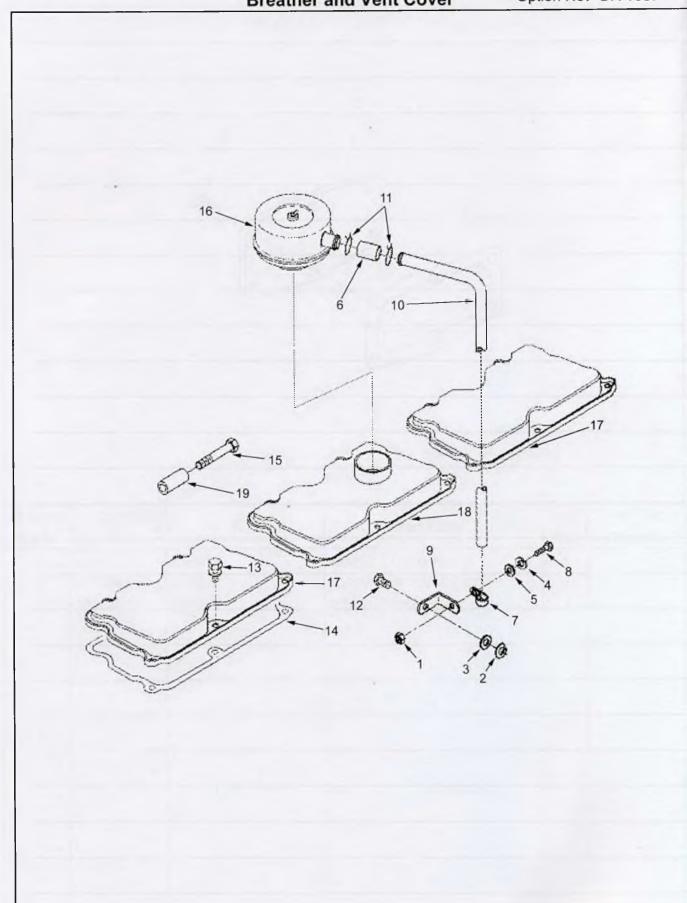


通风口位置 Breather and Vent Cover

选用件号: BR 1087 Option No: BR 1087

	Breather and Vent Cover Option No. BR 1087							
图上标号		零件名称	Part Name	数量	备 注			
Ref No	Part Number			Req	Remarks			
17	3006183	据臂室盖	COVER ROCKER LEVER	2				
	3260666	通风管组件	TUBE VENT	1				
1	S 223	六角厚螺母	NUT HEAVY HEXAGON	1				
6	64775	软管	HOSE	1				
7	69911 A	夹子	CLIP	2				
8	3022589	带垫螺栓	SCREW CAPTIVE WASHER	1				
9	214096	隔音板支架	SUPPORT NOISE PA	1 1				
10	3250977	通风管	TUBE BREATHER	1				
11	43828	软管夹	AMP HOSE	2				
12	3010596	带垫螺栓	SCREW CAPTIVE WASHER	1				
15	3012476	带垫螺栓	SCREW CAPTIVE WASHER	1				
	MP 3887	摇臂室盖安装	COVER ROCKER HOUSING MTG	3				
13	3038076	带垫螺栓	SCREW CAPTIVE WASHER	5				
14	3067459	摇臂室盖密封垫	GASKET ROCKER COVER	1				
	4913633	曲轴箱通风器总成	BREATHER CRANKCASE	1				
16	255180	曲轴箱通风器	BREATHER CRANKCASE	1				
18	3006358	摇臂室盖	COVER ROCKER LEVER	1 1				
19	62906 C	隔套	SPACER	1 1				

 


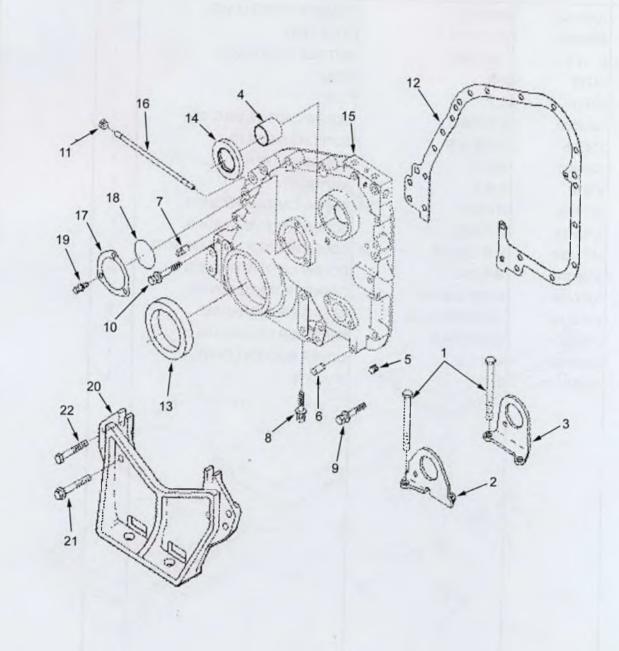

发动机前支架 Engine Support

选用件号: EM 113 Option No: EM 113

A上标号				数量	备 注
Ref No	零件号 Part Number	零件名称	Part Name	Req	帝 在 Remarks
	EM 113	发动机前支架	ENGINE SUPPORT	1	Kemarks
	S 176	六角螺栓	SCREW,HEX HEAD CAP	2	
	170226	起吊支架	BRACKET LIFTING		
	3001726	后起吊支架	BRACKET LIFTING		
4	132770	衬套	BUSHING		
5	S 911 B	管塞	PLUG PIPE	1	
6	60408	定位销	DOWEL,PIN	1	
7	70653	定位销	DOWEL,PIN	1	
8	3011712	带垫螺栓	SCREW CAPTIVE WAS	9	
9	3011713	带垫螺栓	SCREW CAPTIVE WAS	1	
10	3011714	带垫螺栓	SCREW CAPTIVE WAS	3	
11	3013786	<b>管</b> 塞	PLUG PIPE	1	
12	3021704	垫片	SHIM	1	
13	3020186	油封	SEAL,OIL	1	
14	3020185	油封	SEAL,OIL	1	
15	3418659	正时齿轮室盖	COVER GEAR	1	
17	65259 C	调整垫片	SHIM	1	
17	4913819	调整垫片	SHIM	1	
17	4913820	调整垫片	SHIM	1	
18	215705	O型密封圈	SEAL O RING	1	
19	3011715	带垫螺栓	SCREW CAPTIVE WAS	3	
20	214306	发动机前支架	SUPPORT FRONT ENGINE	1	
21	3054889	六角螺栓	HEX HEAD CAP	4	
22	3058664	十二角螺栓	SCREW TWELVE POINT	2	
		1.0			

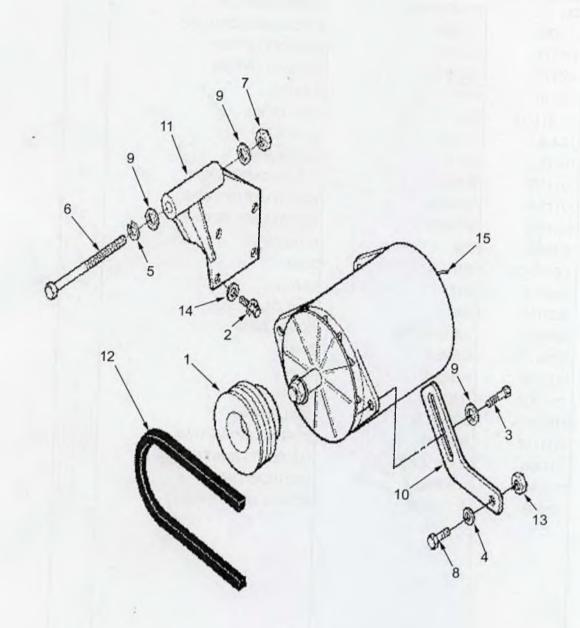


### 发电机及安装 MTG Alternator

选用件号: EE 801/1155 Option No: EE 801/1155


	2222	IM I	G,Alternator Option	Option No: EE 801/115		
A上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks	
15	4060811	充电机	ALTERNATOR	1		
	1000011	76.676	, LETERAL TOTAL			
1	213326	发电机皮带轮	PULLEY,ALTERNATOR	1		
	3261135	发电机安装	MTG,ALTERNATOR	1		
7	70897	锁紧螺母	NUT,LOCK	1		
6	158829	六角螺栓	SCREW,HEXAGONHEAD	1		
9	203310	平垫圈	WASHER, PLAIN	3		
4	203760	平垫圈	WASHER, PLAIN	1		
11	3010373	支架	SUPPORT, ALTERNATOR	1		
8	S 183 A	六角螺栓	SCREW, HEXAGON HEAD	1		
				2		
10	3250968	调节杆	LINK,ADJUSTING	1		
2	010595	带垫螺栓	SCREW,CAPTIVE WAS	4		
3	S 145	六角螺栓	SCREW,HEXAGON HEAD	1		
5	S 608	弹簧垫圈	WASHER,LOCK	1		
12	3040292	多槽皮带	BELT,V	2		
13	S 230 A	螺母	NUT	1		
			May Yaranja -			
	9-11-11	110	0 (2000)			
		17				
			0 - 0 - 0			
		100				
	- 0					

选用件号: DA1136/1137 Option No: DA1136/1137

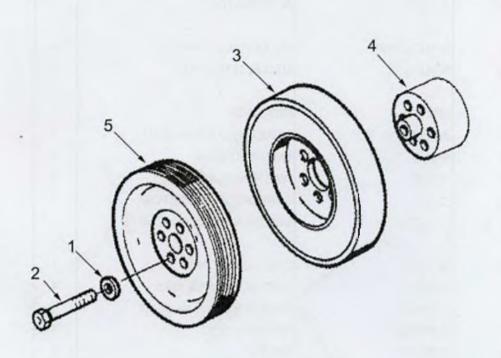


图上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
5	3326153	曲轴皮带轮	PULLEY CRANKSHAFT	1	用于NT855-C280S10
5	3326140	曲轴皮带轮	PULLEY CRANKSHAFT	1	用于NTA855-C360S10
3	211915	12'减振器	DAMPER VIBRATION	1	用于NT855-C280S10
3	217323	13'减振器	DAMPER VIBRATION	1	用于NTA855-C360S10
1	127316	平垫圈	WASHER PLAIN	6	
2	212114	二角螺栓	SCREW HEAD LOCKIN	6	
4	3326141	曲轴隔套	SPACER, CRANKSHAFT	1	
	- 111				

选用件号: ES8003 Option No: ES8003

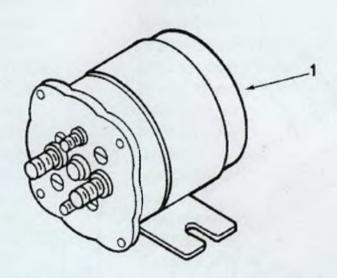

图上标号 Ref No	零件号 Part Number	零	件	名称	Part Name	数量 Req	备 注 Remarks
1	3050692	电磁开关			SWITCH MAGNETIC	1	
				·			
	115	1					
		-				-	
	- 1						

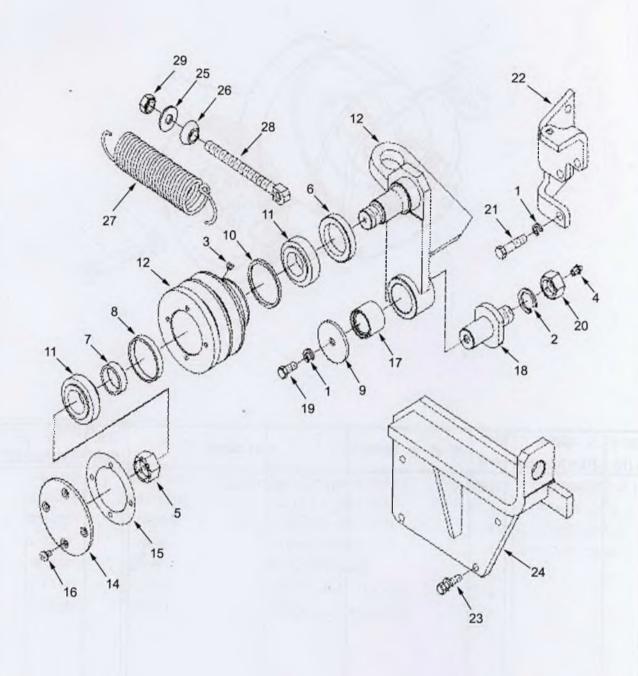


### 风扇布置

Fan Arrangement

选用件号: FA 109 Option No: FA 109

Fan Arrangement Option No: F					: FA 109
图上标号	零件号	零件名称	Part Name	数量	备 注
Ref No	Part Number	令什么你	Part Name	Req	Remarks
	FA 109	风扇布置	FAN ARRANGEMENT	1	
4-20	4915200	风扇张紧轮总成	IDLER, FAN HUB	1	
	3260625	调整支架	BRACKET PIOVT	1	
23	3011715	带垫螺栓	SCREW CAPTIVE WASHER CAP	3	
24	3326154	张紧轮支架	BRACKET IDLER PULLEY	1	
	3260626	弹簧拉紧机构	SPRING TENSION	1	
25	146163	平垫圈	WASHER PLAIN	1	
26	423280	平垫图	WASHER PLAIN	1	
27	3250956	拉紧弹簧	SPRING	1	
28	3325952	螺栓	вогт ноок	1	
29	3335066	螺母	NUT	2	
	3418996	支架安装	BRACKET SHIPPING	1 1	
	3600283	平垫圈	WASHER PLAIN	2	
22	3655343	支架	BRACKET	1 1	
	S 108 A	六角螺栓	SCREW,HEX HEAD CAP	1 1	
	S 140	六角螺栓	SCREW,HEX HEAD CAP	1 1	
1	S 610	弹簧垫圈	WASHER LOCK		
•	S 622	平垫圈	WASHER PLAIN	2	

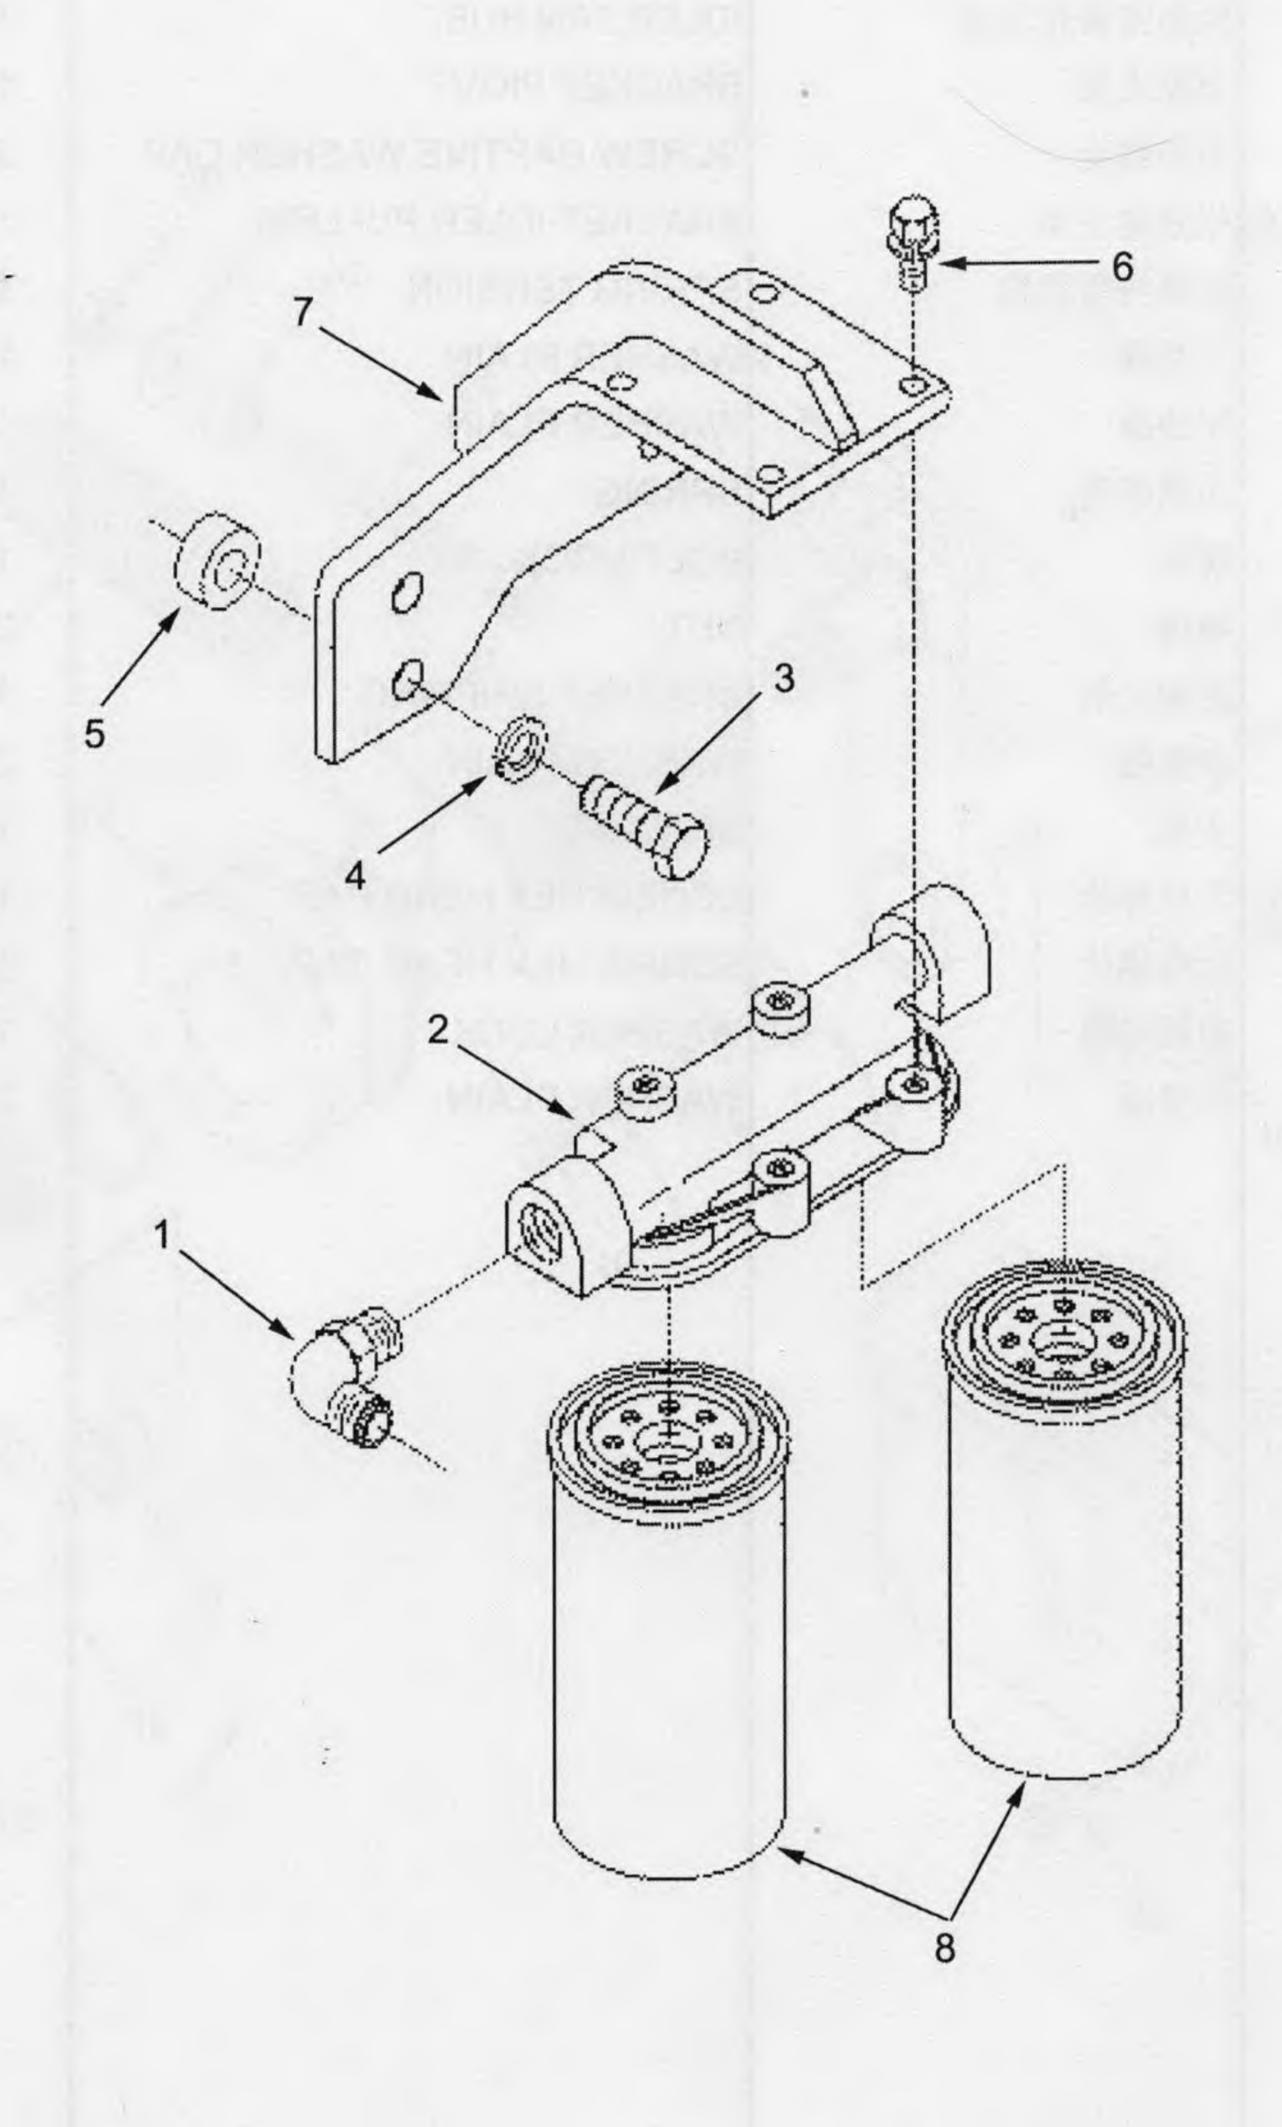


# 燃油滤清器

Ilter,Fuel


选用件号: FF102 Option No: FF102

上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
1		阳性接头	ELBOW, MALE UNOIN	1	
2	212013	燃油滤清器座	HEAD FUEL FILTER	1	
3	S 187 A	六角螺栓	SCREW, HEX HEAD CAP	3	
4	S 609	弹簧垫圈	WASHER LOCK	3	
	S 689	平垫圈	WASHER PLAIN	3	
5	68252 A	隔套	SPACER EXH MANF	3	
6	3010595	带垫螺栓	SCREW, CAPTIVE WASHER CAP	4	
	S 602	平垫圈	WASHER PLAIN	4	
7	3250969	滤清器支架	BRACKET FILTER	1	
8	3315843	燃油滤清器	FILTER, FUEL	2	
			- 10		

选用件号: FF1707 Option No: FF 1707

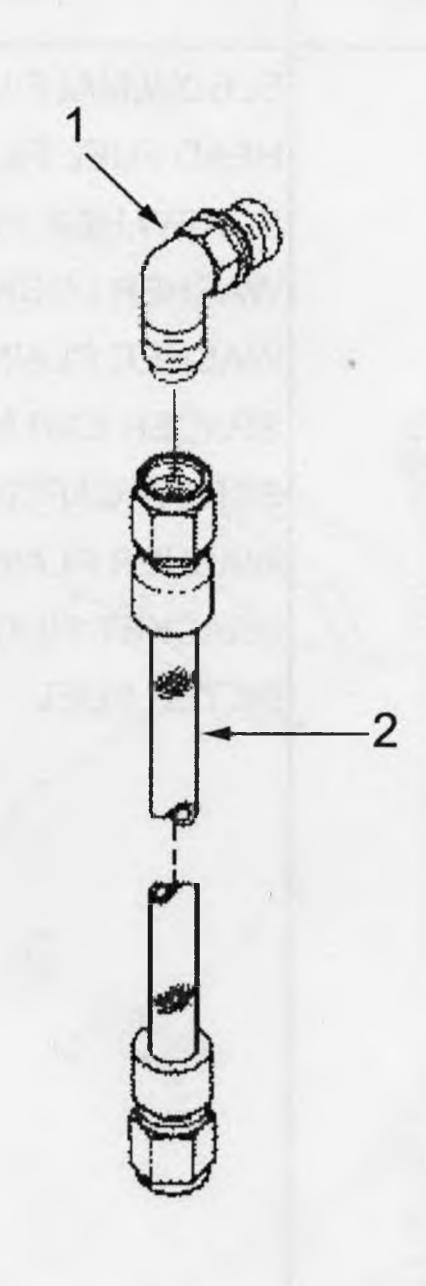

图上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
	FF 1707	燃油滤清器接头	FUEL FILTER HOSE	1	
1	129859	阳性接头	ELBOW, MALE UNOIN	1	
2	AS10020 SS	软管	HOSE FLEXIBLE	1	

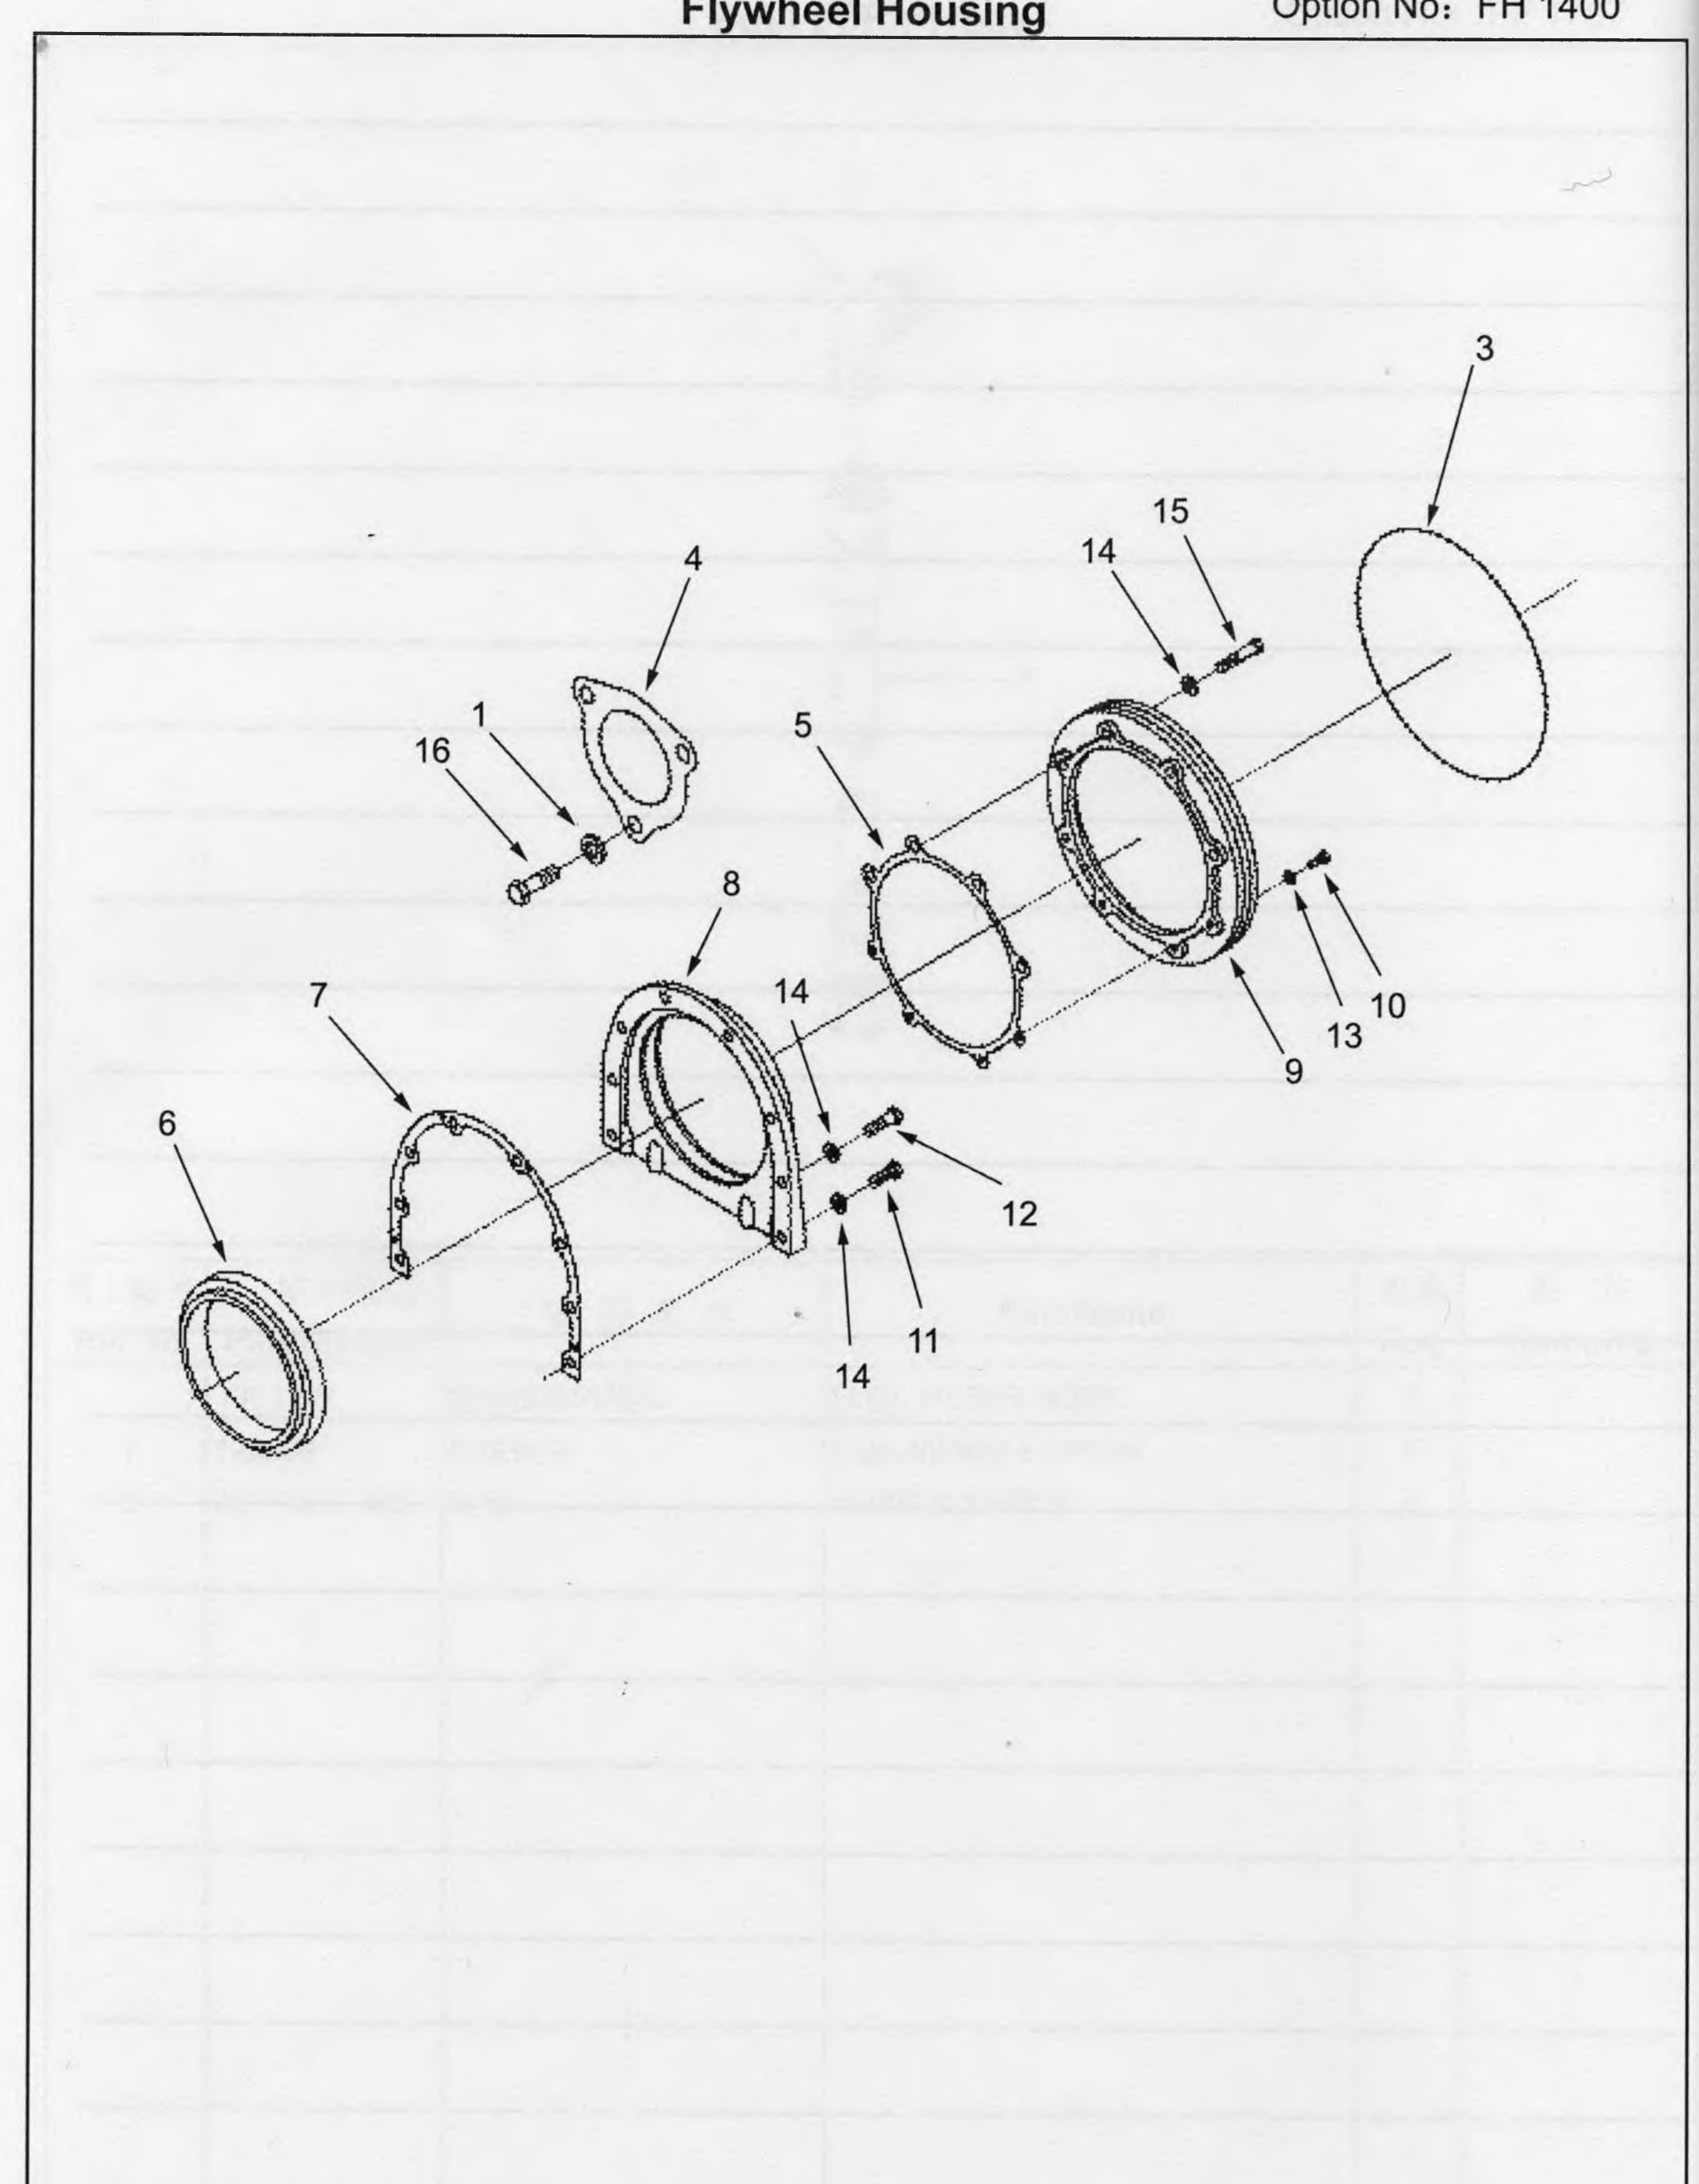


飞轮壳 Flywheel Housing


选用件号: FH 1400 Option No: FH 1400

图上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
3	409191	O型圈	SEAL O RING	1	
4	3031007	衬垫	GESKET STARTER	1	
16	3165857	螺栓	SCREW	3	
	3260620	后盖板	REAR COVER	1	
6	3001772	油封	SEAL OIL	1	
8	3350448	后盖板	REAR COVER	1	
	3260621	后盖板安装	MTG REAR COVER PL	1	
7	3067616	垫片	SHIM	1	
15	106549	六角螺栓	SCREW, HEX HEAD CAP	4	
5	400540	后盖垫片	SHIM	1	
9	3350832	油封座护圈	RETAINER SEAL	1	
10	S 121	六角螺栓	SCREW, HEX HEAD CAP	4	
11	S 129	六角螺栓	SCREW, HEX HEAD CAP	2	
12	S 194	六角螺栓	SCREW, HEX HEAD CAP	2	
13	S 600	弹簧垫圈	WASHER LOCK	4	
14	S 604	弹簧垫圈	WASHER LOCK	8	
1	S 603	弹簧垫圈	WASHER LOCK	3	
		amili, has			
		COLUMN TO THE REAL PROPERTY.			

DIMIR DAGE

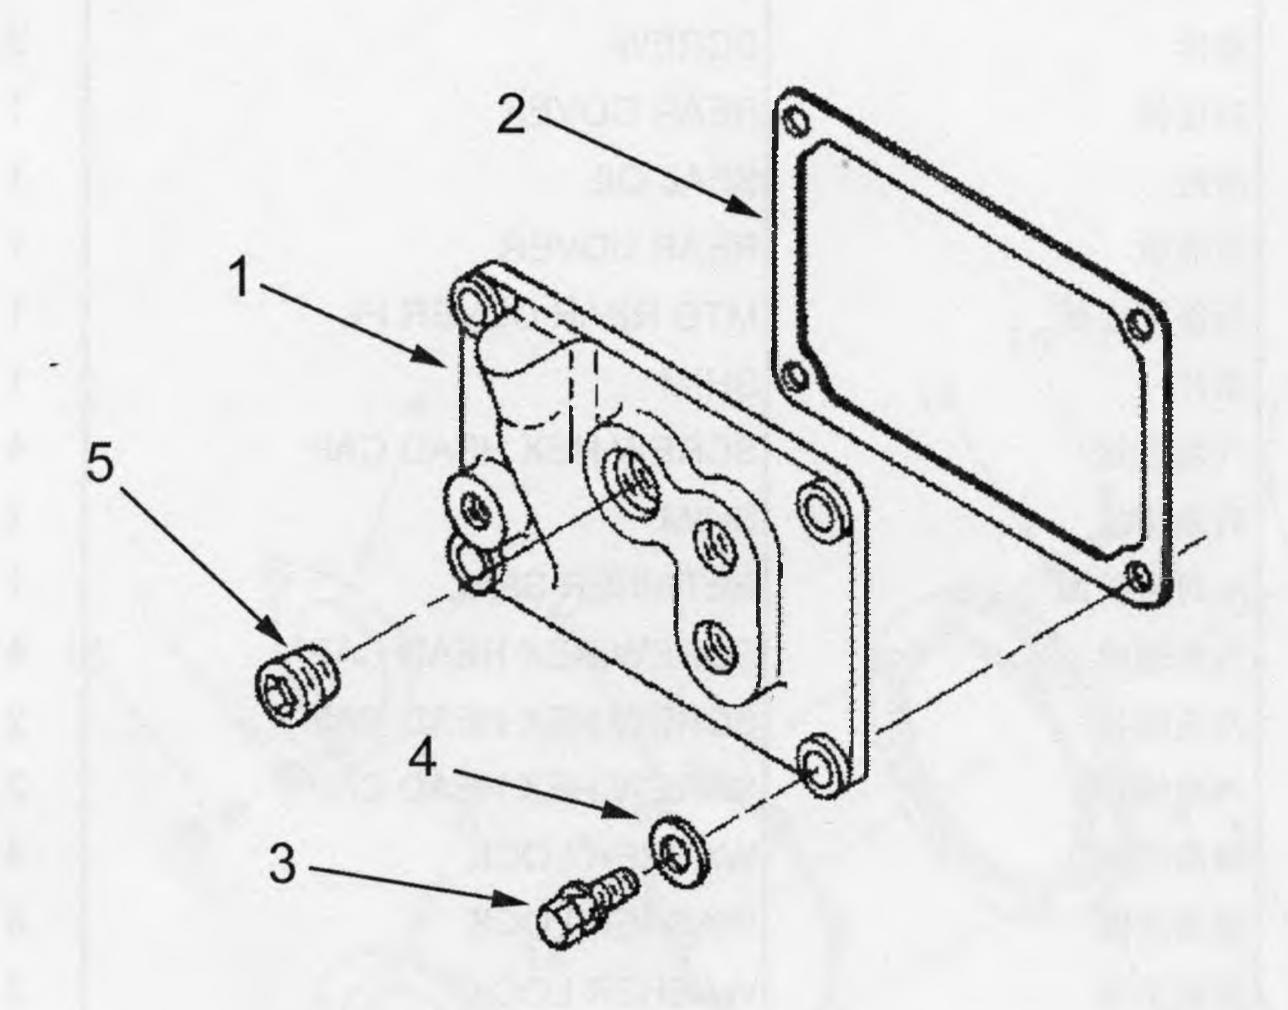

图上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
1	186239	手孔盖	COVER HEAD HOLE	1	
2	3069097	手孔盖衬垫	GASKET HADE HOLE	1	
3,4	3010595	带垫螺栓	SCREW, CAPTIVE WASHER CAP	4	
5	3008469	管塞	PLUG PIPE	1	

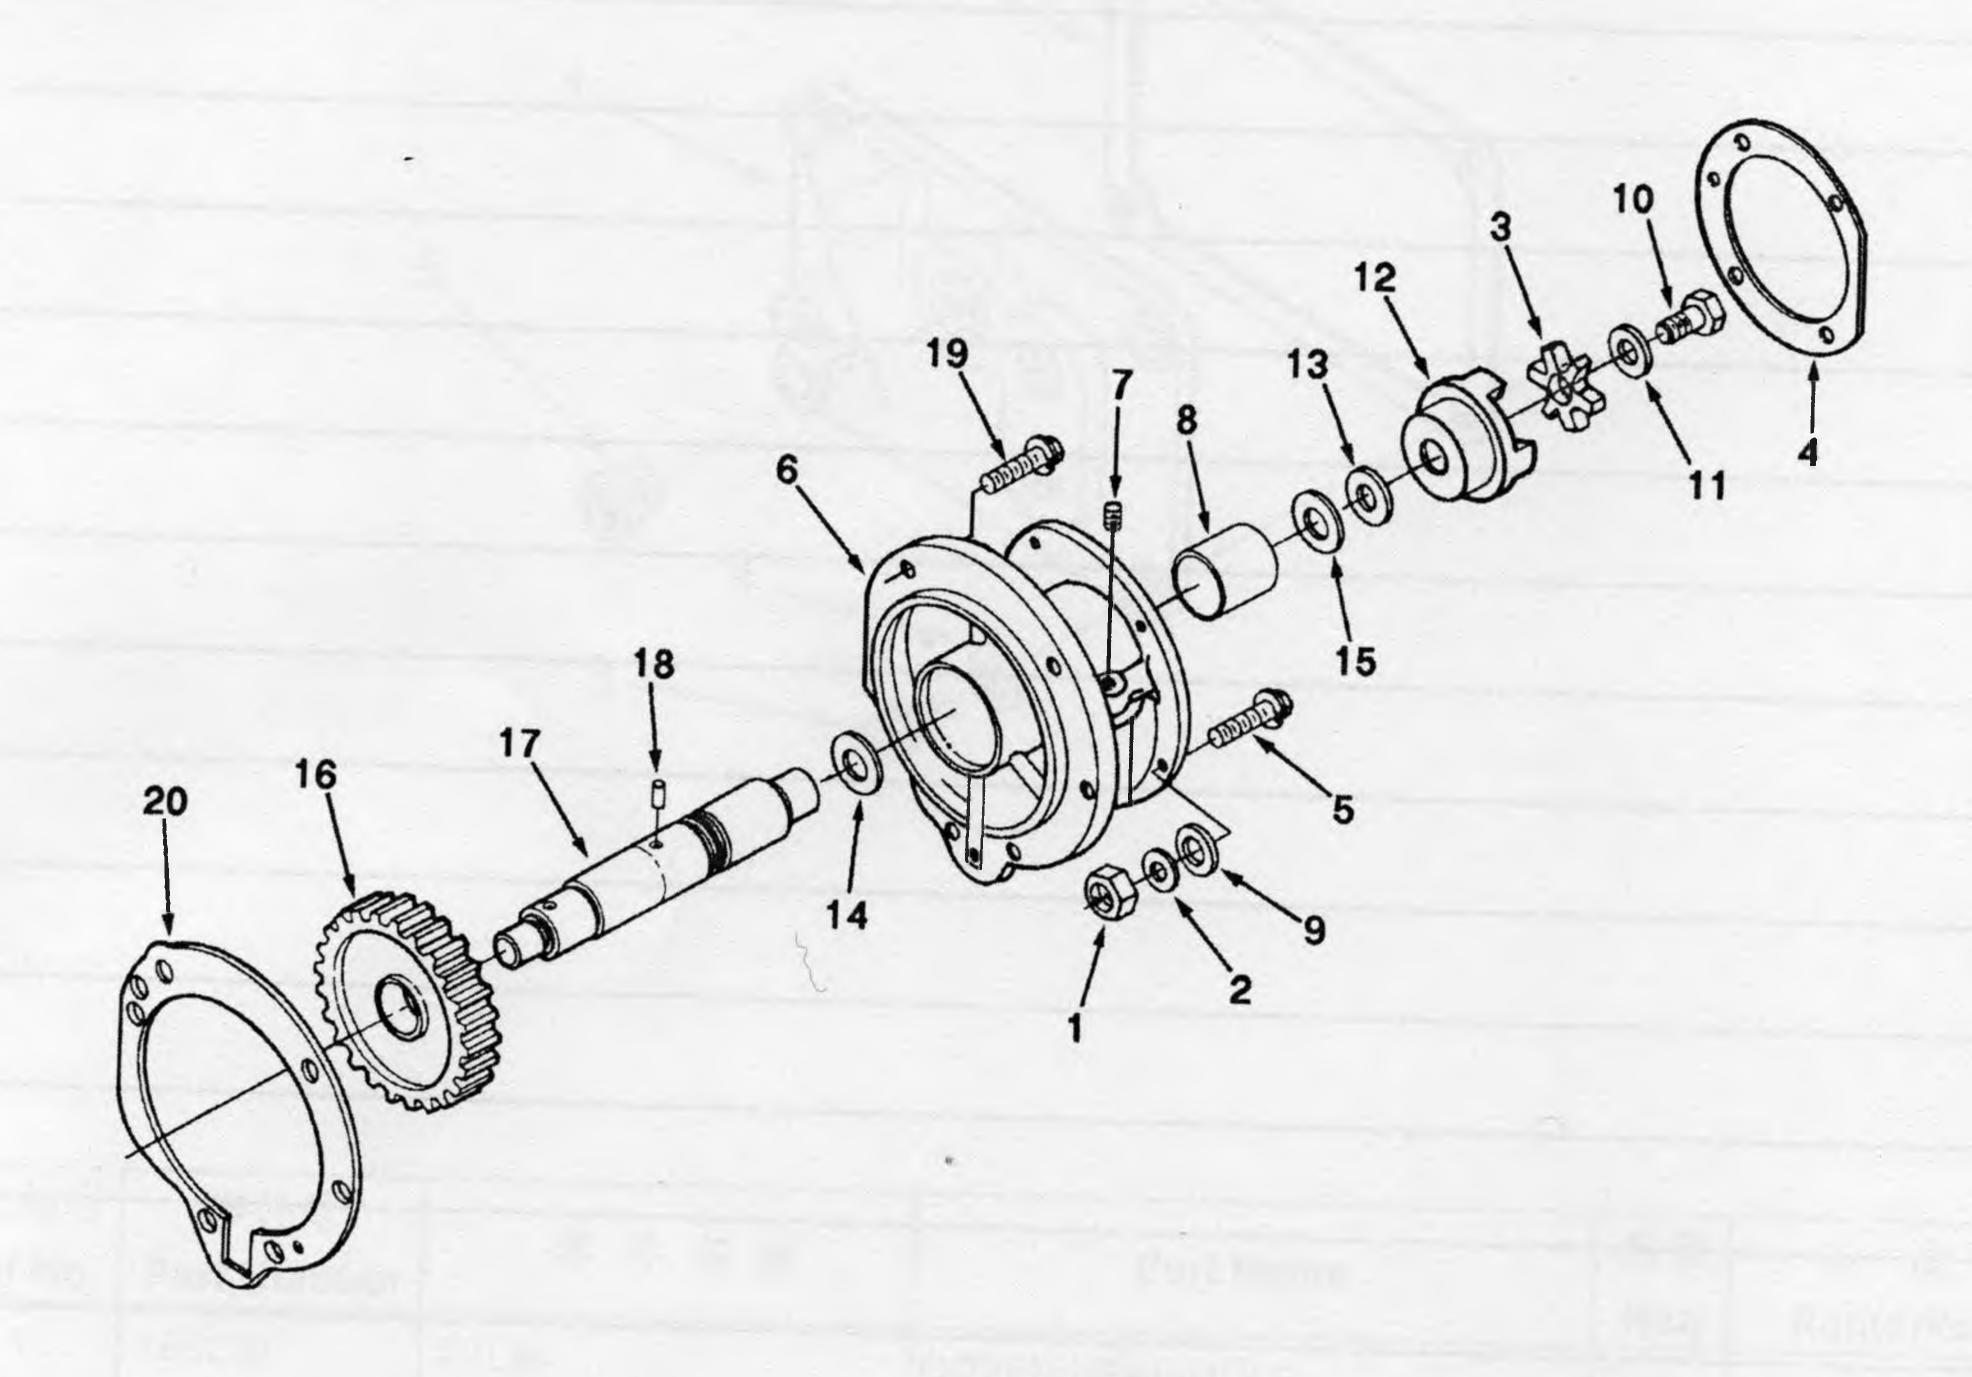

### 附件驱动安装


**Accessory Drive MTG** 

选用件号: FP 1519 Option No: FP 1519

图上标号	零件号	Acces	sory Drive MTG	数量	FP 1519 备 注
Ref No	Part Number	零件名称	Part Name	Req	帝 注 Remarks
	BM95029	燃油泵安装	PUMP FUEL MTG	1	
1	S 274	螺母	NUT HEAVY HEXAGON	4	
2	69324	平垫圈	WASHER PLAIN	4	
3	3046200	爪式联轴节缓冲片	SPIDER JAW COUPLING	1	
4	4026171	燃油泵衬垫	GASKET	1	
5	3818599	螺栓	SCREW	4	
	3005131	辅助驱动总成	DRIVE ACCESSORY	1	
6	3002170	辅助驱动支承	SUPPORTFUELPUMP	1	
7	S 911 B	管塞	PLUG PIPE	1	
8	116391	衬套	BUSHING	1	
9	S 690	平垫圈	WASHER PLAIN	1	
10	129510	六角螺栓	SCREW,HEX HEAD CAP	1	
11	170664	平垫圈	WASHER PLAIN	1	
12	3000175	燃油泵传动轴接合爪	COUPLING,F P DRI	1	
13	3014103	挡圈	WASHER, PLAIN	1	
14	3026556	止推片	THRUST	1	
15	3026557	止推片	THRUST	1	
16	142689	齿轮	GEAR ACCESSORY DRIVE	1	
17	3000171	辅助驱动轴	SHAFT ACCESSORY DRIVE	1	
18	3034438	定位销	DOWEL PIN	1	
	3007821	辅助驱动安装	MTG ACCESSORY DRIVE	1	
19	3010590	带垫螺栓	SCREW CAPTIVE WAS	5	
20	3076225	辅助传动室垫片	SHIM	1	
	17 = 7/4				
	N = 11				
	1			W.	
	100				
			Jes Town		
			William S		

燃油管路 Plumbing Fuel


选用件号: FT 107/116 Option No: FT 107/116

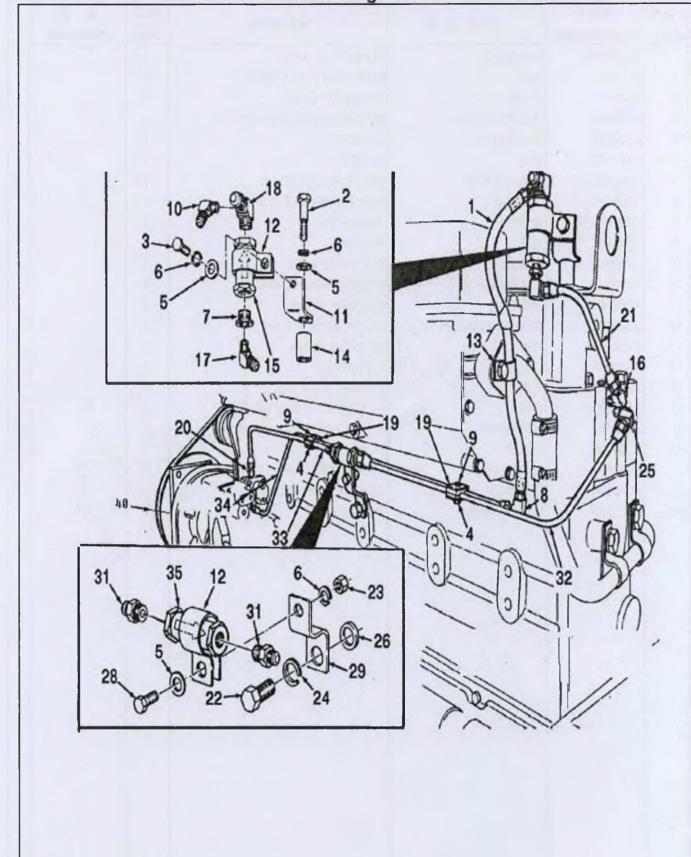


燃油管路 Plumbing Fuel

选用件号: FT 107/116 Option No: FT 107/116

图上标号	零件号	零件名称	Part Name	数量	备 注
Ref No	Part Number	令什名林	rart Name	Req	Remarks
20	116936	阳性弯管接头	ELBOW MALE ADAPTER	1	
	3165641	回油管	TUBE FUEL DRUIN	1	
34	3165648	燃油回油管	TUBE FUEL DRAIN	1	
	3166082	燃油供油管安装	MTG.TUBE FUEL	1	
14	63385	隔套	SPACER	1	
12	180372	夹子	CLIP	1	
33	3165639	供油管	TUBE FUEL SUPPLY	1	
2	S 137	六角螺栓	SCREW, HEX HEAD CAP	1	
5	S 602	平垫圈	WASHER PLAIN	1	
6	S 604	弹簧垫圈	WASHER LOCK	1	
	3166087	旁通油管安装	MTG BYSS TUBE	1	
	68368 B	隔套	SPACER	1	
8	116936	阳性弯管接头	ELBOW MALE ADAPTER	1	
3	177020	带垫螺栓	SCREW HEXAGON HEAD CAP	1	
	3007025	夹子	CLIP	6	
18	3165833	三通接头	TEE	1	
21	3165646	燃油回油管	TUBE FUEL DRAIN	1	
16	3165837	回油接头	CONPNECT, DRINN	1	
	3166088	单向阀总成	ASYY VALVE	1	
10	116936	阳性弯管接头	ELBOW MALE ADAPTER	2	
15	178079	单向阀	VALVE CHECK	1	
17	203071	弯管接头	ELBOW MALE ADAPTER	1	
19	3165643	夹板	CLAMP	2	
7	S 929 B	缩紧管衬套	BUSHING REDUCING PIPE	1	
1	4061202	回油软管	HOSE,FUEL	1	
	S 223	六角厚螺母	NUT HEAVY HEXAGON	1	
4	S 251	六角锁紧螺母	NUT REGULAR HEXAGON JAM	3	
5	S 602	平垫圈	WASHER PLAIN	2	
6	S 604	弹簧垫圈	WASHER LOCK	2	
9	S 1315	螺栓	SCREW,HEX HEAD CAP	3	
	4061471	供油管路安装	NTG.FUEL SUPLY	1	
26	65434	减压支架隔套	SPACER MOUTING	1	
28	69793	六角螺栓	SCREW,HEX HEAD CAP	1	
29	113710	油管支架	BRACKET OIL GAUGE	1	
25	3165835	弯接头	ELBOW MALE ADAPTER	1	
32	3165640	供油管	TUBE FUEL SUPPLY	1	
22	S 151 C	六角螺栓	SCREW,HEX HEAD CAP	1	
23	S 205	六角螺母	NUT REGULAR HEXAGON	1	
24	S 609	弹簧垫圈	WASHER LOCK	1	
35	185505	单向阀	VALVE CHECK	1	
31	3165864	接头	ADAPTER	2	
12	107460	夹子	CLIP	1	

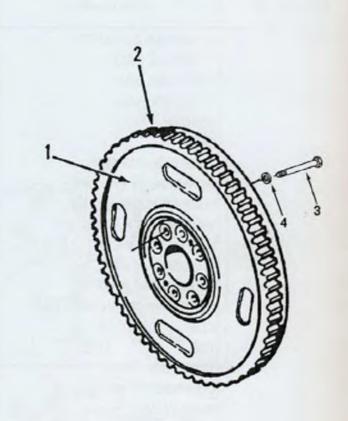


图上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
2	3251188	飞轮	FLYWHEEL	1	
3	213883	螺栓	SCREW, HEXAGON HEAD CAP	6	
4	200861	平垫圈	WASHER PLAIN	6	
	7.0	200			
			V. C.		

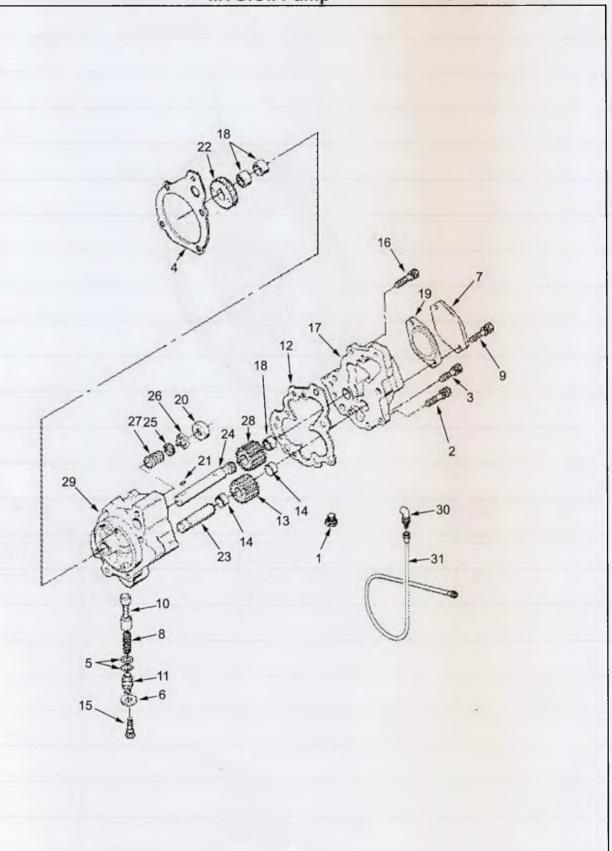

机油泵及安装 MTG Oil Pumr

选用件号: HD 102 Option No: HD 102

4 306 382 5 145 6 146 7 204 8 301 9 301 10 388 11 301 12 301 13 301 14 683 15 302 16 302 17 301 18 695	2589	零件名称 机油泵 机油泵 O型密封圈 平垫圈 盖板 压缩弹簧 带垫螺栓 压力调节柱塞 挡塞 油泵盖衬垫 齿轮	Part Name  GASKET LUB OIL PUMP PUMP LUB OIL SEAL O RING SHER PLAIN PLATE COVER SPRING COMPRESSION SCREW,CAPTIVE WASHER CAP PLUNGER PRS REGULATOR PLUG RETAINING GASKET LUB OIL PUMP COVE GEAR LUB OIL PUMPING	数量 Req 1 1 2 1 1 1 2 1 1 1	备注 Remarks 用于NT855-C280S10
382 5 145 6 146 7 204 8 301 9 301 10 388 11 301 12 301 13 301 14 683 15 302 16 302 17 301 18 695	21579 5504 5161 5048 50146 50595 54126 52726 54778 54965 52589	机油泵 〇型密封圈 平垫圈 盖板 压缩弹簧 带垫螺栓 压力调节柱塞 挡塞 油泵盖衬垫 齿轮	PUMP LUB OIL SEAL O RING SHER PLAIN PLATE COVER SPRING COMPRESSION SCREW,CAPTIVE WASHER CAP PLUNGER PRS REGULATOR PLUG RETAINING GASKET LUB OIL PUMP COVE GEAR LUB OIL PUMPING	1 2 1 1 1 2 1 1	用于NT855-C280S10
5 145 6 146 7 204 8 301 9 301 10 388 11 301 12 301 13 301 14 683 15 302 16 302 17 301 18 695	5504 5161 5048 50146 50595 54126 52726 54778 54965 52589 52589	机油泵 〇型密封圈 平垫圈 盖板 压缩弹簧 带垫螺栓 压力调节柱塞 挡塞 油泵盖衬垫 齿轮	SEAL O RING SHER PLAIN PLATE COVER SPRING COMPRESSION SCREW,CAPTIVE WASHER CAP PLUNGER PRS REGULATOR PLUG RETAINING GASKET LUB OIL PUMP COVE GEAR LUB OIL PUMPING	2 1 1 1 2 1 1	用于NT855-C280S10
6 146 7 204 8 301 9 301 10 388 11 301 12 301 13 301 14 683 15 302 16 302 17 301 18 695	0146 0146 0595 04126 2726 4778 4965 02589	O型密封圈 平垫圈 盖板 压缩弹簧 带垫螺栓 压力调节柱塞 挡塞 油泵盖衬垫 齿轮	SHER PLAIN PLATE COVER SPRING COMPRESSION SCREW,CAPTIVE WASHER CAP PLUNGER PRS REGULATOR PLUG RETAINING GASKET LUB OIL PUMP COVE GEAR LUB OIL PUMPING	1 1 1 2 1 1 1 1	
7 204 8 301 9 301 10 388 11 301 12 301 13 301 14 683 15 302 16 302 17 301 18 695	048 0146 0595 04126 2726 4778 4965 065 22589	盖板 压缩弹簧 带垫螺栓 压力调节柱塞 挡塞 油泵盖衬垫 齿轮 机油泵衬套	PLATE COVER SPRING COMPRESSION SCREW,CAPTIVE WASHER CAP PLUNGER PRS REGULATOR PLUG RETAINING GASKET LUB OIL PUMP COVE GEAR LUB OIL PUMPING	1 1 2 1 1 1 1	
8 301 9 301 10 388 11 301 12 301 13 301 14 683 15 302 16 302 17 301 18 695	0146 0595 34126 2726 4778 4965 365 22589	压缩弹簧 带垫螺栓 压力调节柱塞 挡塞 油泵盖衬垫 齿轮 机油泵衬套	SPRING COMPRESSION SCREW,CAPTIVE WASHER CAP PLUNGER PRS REGULATOR PLUG RETAINING GASKET LUB OIL PUMP COVE GEAR LUB OIL PUMPING	1 2 1 1 1	
9 301 10 388 11 301 12 301 13 301 14 683 15 302 16 302 17 301 18 695	0595 34126 2726 4778 4965 365 22589	带垫螺栓 压力调节柱塞 挡塞 油泵盖衬垫 齿轮 机油泵衬套	SCREW,CAPTIVE WASHER CAP PLUNGER PRS REGULATOR PLUG RETAINING GASKET LUB OIL PUMP COVE GEAR LUB OIL PUMPING	1 1 1	
10 388 11 301 12 301 13 301 14 683 15 302 16 302 17 301 18 695	24126 2726 4778 4965 365 22589	压力调节柱塞 挡塞 油泵盖衬垫 齿轮 机油泵衬套	PLUNGER PRS REGULATOR PLUG RETAINING GASKET LUB OIL PUMP COVE GEAR LUB OIL PUMPING	1 1 1	
11 301 12 301 13 301 14 683 15 302 16 302 17 301 18 695	2726 4778 4965 365 22589	挡塞 油泵盖衬垫 齿轮 机油泵衬套	PLUG RETAINING GASKET LUB OIL PUMP COVE GEAR LUB OIL PUMPING	1 1	
12 301- 13 301- 14 683 15 302- 16 302- 17 301- 18 695	4778 4965 865 22589 22590	油泵盖衬垫 齿轮 机油泵衬套	GASKET LUB OIL PUMP COVE GEAR LUB OIL PUMPING	1	
13 301 14 683 15 302 16 302 17 301 18 695	4965 865 22589 22590	齿轮 机油泵衬套	GEAR LUB OIL PUMPING	1	
14 683 15 302 16 302 17 301 18 695	2589 22590	机油泵衬套		4	
15 302 16 302 17 301 18 695	2589			1	
16 302 17 301 18 695	22590	恭执幄栓	BUSHING	2	
17 301 18 695	A CONTRACTOR OF THE PARTY OF TH	THE SECULE	SCREW CAPTIVE WASHER	1	
18 695		带垫螺栓	SCREW CAPTIVE WASHER	7	
	4777	泵盖	COVER LUB OIL PUMP	1	167
28 301	521	衬套	BUSHING	1	
	4784	齿轮	GEAR LUB OIL PUMPING	1	
19 300	)4242	液压泵盖板衬垫	GASKET HYD PUMP COVER	1	
695	519	定位销	DOWEL PIN	1	
20 179	0063	挡塞	PLUG RETAINING	1	
21 183	8695	半圆键	KEY,PLAIN WOODRUFF	1	
22 204	1832	机油泵驱动齿轮	GEAR LUBRICATING OIL PUM	1	
23 301	2531	从动轮轴	SHAFT IDLER	1	
24 301	2532	机油泵驱动轴	SHAFT LUB OIL PUMP DRIVE	1	100
25 301	4754	平垫圈	SHER PLAIN	1	
26 301	14755	园盘阀	DISC VALVE	1	
27 301	14756	压缩弹簧	SPRING COMPRESSION	1	
28 301	14783	齿轮	GEAR LUB OIL PUMPING	1	
29 382	21577	机油泵壳体	BODY LUBRICATING OIL PUM	1	
1 303	37536	螺塞	PLUG THREADED	1	
2 S	142 A	六角螺栓	SCREW HEXAGON HEAD	2	
3 S	108 A	六角螺栓	SCREW HEXAGON HEAD	3 -	
30 681	138	阳性管接头	UNION,MALE	1	
31 30	82622	信号管	HOSE,FLEXIBLE	1	

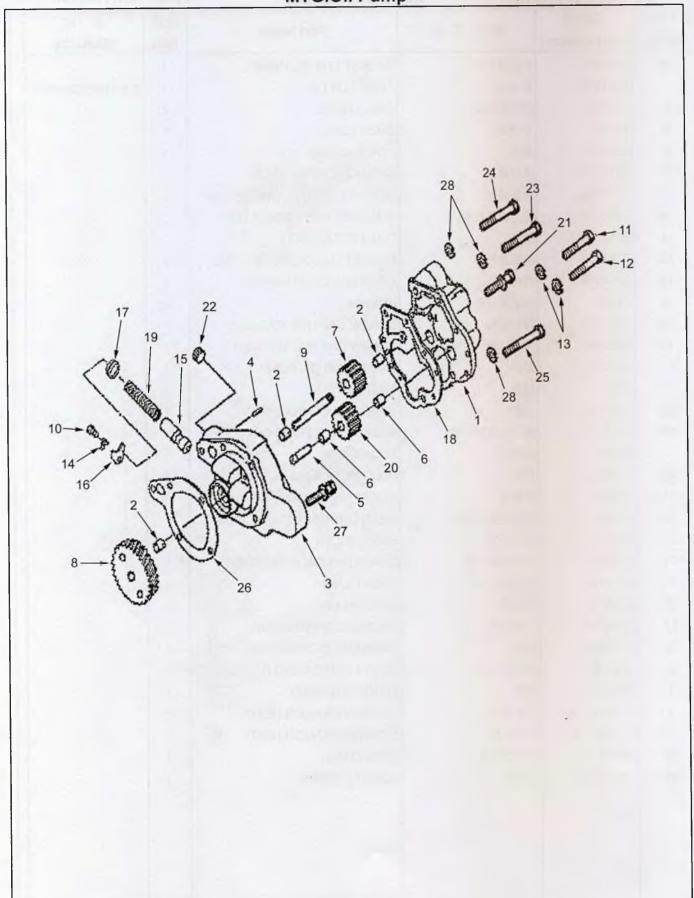


## 机油泵及安装 MTG.Oil Pump

选用件号: HD 1025 Option No: HD 1025

图上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
	3023217	螺塞	PLUG,THREADED	1	
	3042378	机油泵	PUMP LUB OIL	1	用于NTA855-C360S10
	177432	盖子总成	COVER	1	
1	177414	机油泵盖	COVER LUB PUMP	1	
2	69521	衬套	BUSHING	1	
	211938	壳体和衬套	BODY & BUSHING LUB PUMP	1	
3	211929	売体	BODY LUBRICATING OIL PUM	1	
2	69521	衬套	BUSHING	2	- /
4	69519	定位销	DOWEL PIN	1	
5	177419	机油泵轴	SHAFT LUB OIL PUMP	1	7
6	68365	机油泵衬套	BUSHING	2	Salar Salar
7	3014783	齿轮	GEAR LUB PUMPING	1	
8	3025281	齿轮	GEAR LUB PUMPING	1	
9	177417	机油泵驱动轴	SHAFT LUB PUMP DRIVE	1	
10	S 109	六角螺栓	SCREW,HEX HEAD CAP	1	I FA
11	S 103	六角螺栓	SCREW,HEX HEAD CAP	1	
12	S 111	六角螺栓	SCREW,HEX HEAD CAP	1	4.00
13	S 605	弹簧垫圈	WASHER LOCK	2	
14	109319	锁片	LOCKPLATE	1	
15	109333	调整柱塞	PLUNGER	1	
16	126304	固定夹	CLAMP RETINING	1	
17	134596	旁通阀塞子	PLUG BY-PASS VALVE LUB	1	
18	203145	衬垫	GASKET LUB OIL PUMP COVE	1	
19	211939	压缩弹簧	SPRING COMPRESSION	1	
20	3014784	齿轮	GEAR LUB OIL PUMPING	1	
21	3022590	带垫螺栓	SCREW CAPTIVE WASHER	6	
22	3008469	管塞	PLUG PIPE	2	
23	S 140 C	六角螺栓	SCREW, HEX HEAD CAP	1	
24	S 119 C	六角螺栓	SCREW,HEX HEAD CAP	1	
25	S 136 B	六角螺栓	SCREW,HEX HEAD CAP	1	
26	3067613	机油泵衬垫	GASKET LUB OIL PUMP	1	
27	3012479	带垫螺栓	SCREW CAPTIVE WASHER	2	
28	S 610	弹簧垫圈	WASHER LOCK	3	

选用件号: LF1085/1181 Option No: LF1085/1181

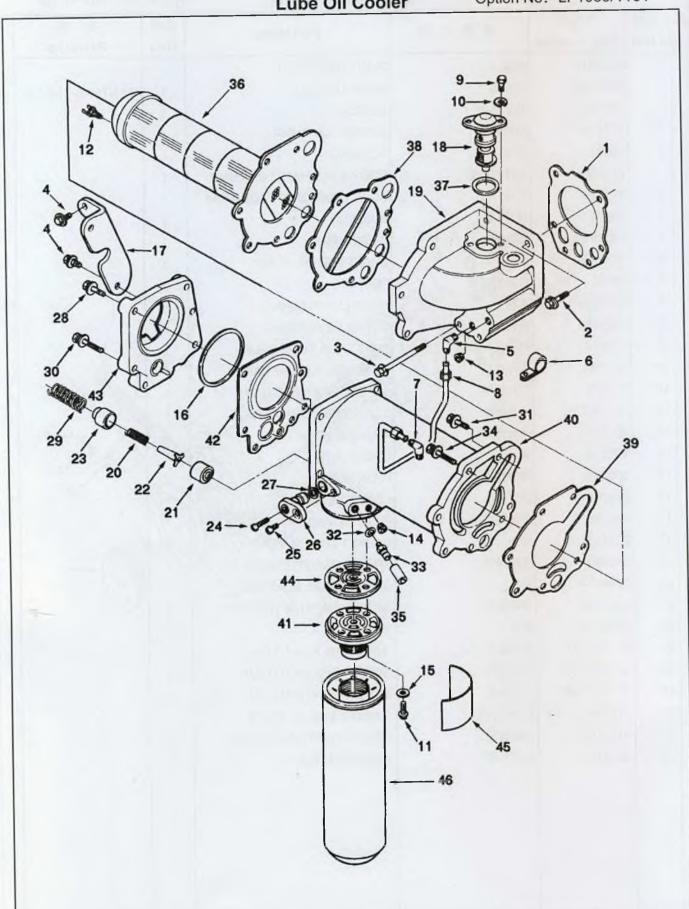


机油冷却器


选用件号: LF1085/1181 Option No: LF 1085/1181

		Lu	ibe Oil Cooler Option	on No:	LF 1085/1181
图上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
	3031956	机油冷却器安装	COOLER LUB OIL MTG	1	
1	3008017	机油冷却器衬垫	GASDET, OIL COOLER SUPPORT	1	
2	3010596	带垫圈螺栓	SCREW, CAPTIVE WASHER CAP	3	
3	3010597	带垫圈螺栓	SCREW, CAPTIVE WASHER CAP	3	
4	3044901	带垫圈螺栓	SCREW, CAPTIVE WASHER CAP	2	
	3053393	机油冷却器	OIL COOLER ,ENGINE	1	用于NT855-C280S10
	3260651	机油冷却器	OIL COOLER ,ENGINE	1	用于NTA855-C360S10
46	3401544	机油滤清器芯总成	FILTER FULL FLOW OIL	1	
		and to			
	1	A S	10000		
			and the	-	
	V	-			

选用件号: OB1142 Option No: OB1142

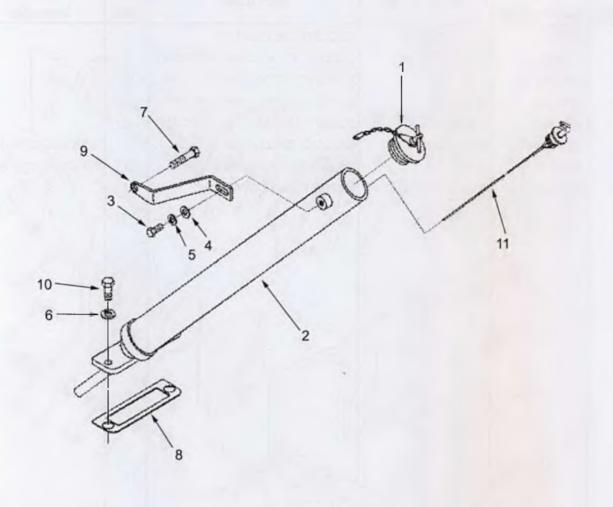

图上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
1	3418519	加机油口盖总成	CAP,FILLER	1	
2	3250939	油标尺管及支架总成	BRACKET OIL TUBE	1	
3	3038076	带垫螺栓	SCREW	1	
6	S 608	弹簧垫圈	WASHER LOCK	2	
8	421541	机油尺衬垫	GASKET OIL GAUGE	1	
9	3251004	导管支撑	BRACE TUBE	1	
10	3335005	六角螺栓	SCREW,HEX HEAD CAP	2	
11	3326078	机油尺 -	CAP,FILLER	1	

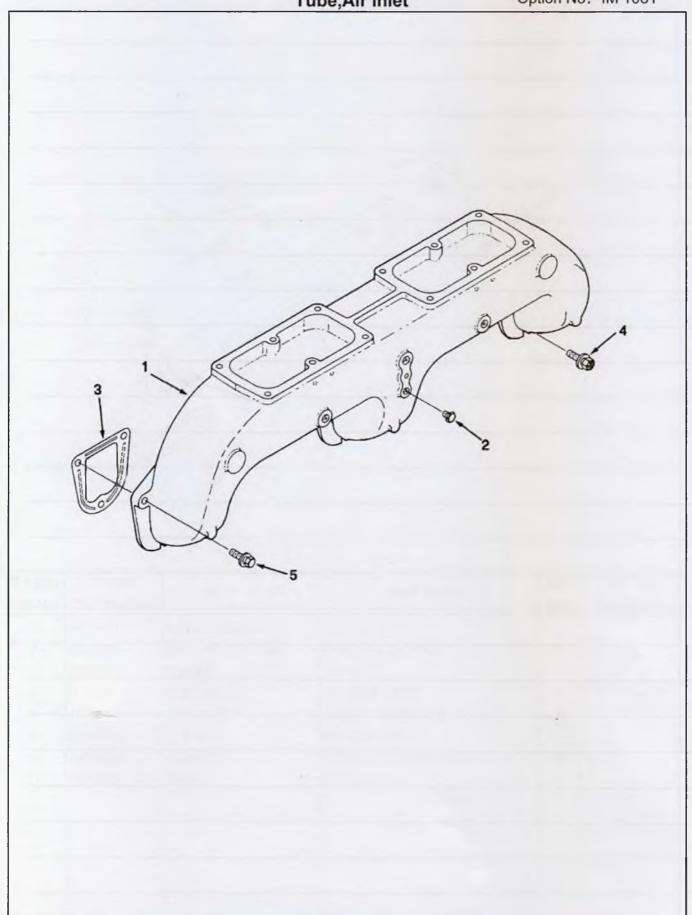


进气管 Tube,Air Inlet

选用件号IM 1081

Option No: IM 1081

图上标号	零件号			数量	备注
Ref No	Part Number	零件名称	Part Name	Req	
1	3325483	进气管	TUBE,AIR INLET	1	用于NT855-C280S10
	3261151	进气歧管安装	MTG AIR INTAKE	1	
2	70295	管塞	PLUG PIPE	2	
3	3008591	进气管衬垫	GASKEK	3	
4	3011715	带垫螺栓	SCREW, CAPTIVE WASHER CAP	6	
5	3011716	带垫螺栓	SCREW,CAPTIVE WASHER CAP	3	
		71.11			
	- ,0				
	0	-1/14			
					- 91
		7 1 9			MA - 8
					2/1

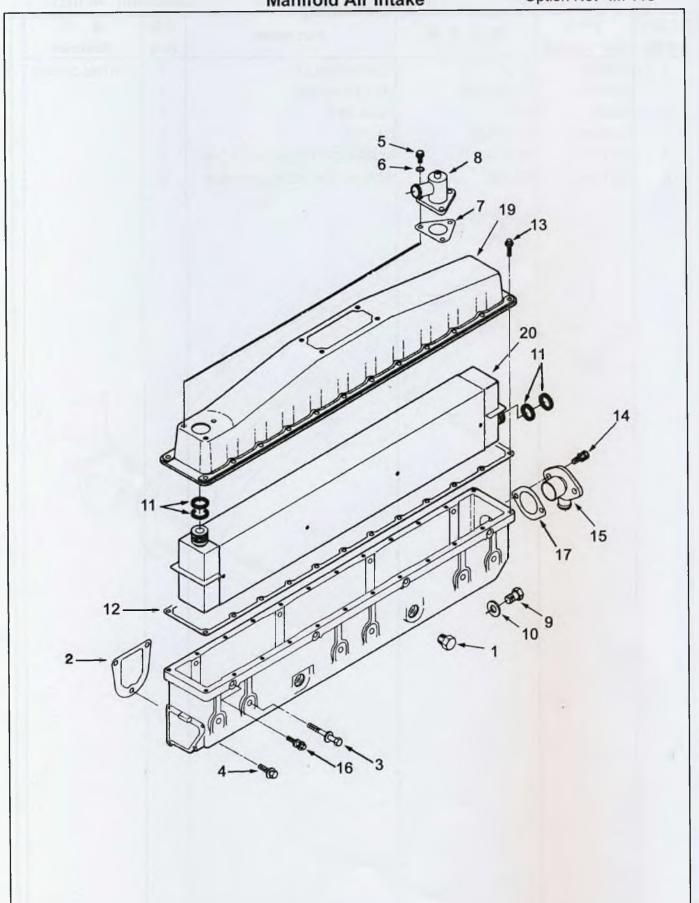


# 进气管 Manifold Air Intake

选用件号IM 118

Option No: IM 118


Wanifold Air Intake Option No: INV 110								
图上标号		零件名称	Part Name	数量	备 注			
Ref No	Part Number			Req	Remarks			
	3008790	进气管安装	MTG AIR MANIFOLD	1	用于NTA855-C360S10			
1	3008470	管塞	PLUG,PIPE	1				
2	3008591	进气管衬垫	GASKEK	3				
4	3011716	带垫螺栓	SCREW,CAPTIVE WASHER	3				
3	3028967	带垫螺栓	SCREW,CAPTIVE WASHER	6				
1 4	S 911 B	管塞	PLUG,PIPE	1				
520	4914540	中冷器总成	INTERCOOLER,AIR INTAKE	1	总成装配件			
0 20		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	INTERCOOLER, AIR INTARE		NEW SKILL			
				1				
	7.0							
	100							
					V.			
-								
	1							
	111		lan-					
				-				
		101		11-11				
				-	V == 1			
1								
1 - :								
		-34			11			
	17.5							
					100			
					-			
1			the state of the s					

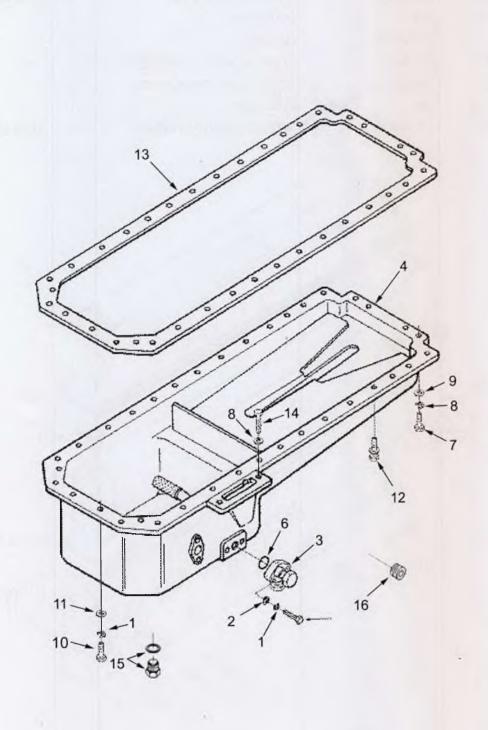

机油盘 Oil Pan 选用件号: OP102/103 Option No: OP 102/103

图上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
	· urt rumbor	机油盘及安装	OIL PAN	1	, to marko
1	S 610	弹簧垫圈	WASHER LOCK	3	
2	S 622	平垫圈	WASHER, PLAIN	3	
3	3325064	截流阀	VALVE SHUTOFF	1	
4	3655194	机油盘	IOL PAN	1	
5	3335003	六角螺栓	SCREW,HEX HEAD CAP	2	
6	3655315	O型密封圈	SEAL O RING	1	
7	S 142	六角螺栓	SCREW,HEX HEAD CAP	4	
8	S 605	弹簧垫圈	WASHER LOCK	5	
9	3600283	平垫圈	WASHER,PLAIN	1	
10	103009	六角螺栓	SCREW,HEX HEAD CAP	3	
11	104856	垫圈	SPACER	4	
12	3008069	带垫螺栓	SCREW CAPTIVE WAS	26	
13	3099083	机油盘衬垫	GASKET OIL PAN	1	
14	3335001	六角螺栓	SCREW,HEX HEAD CAP	1	
15	3046942	放油塞	PLUG PIPE	1	
16	3008470	管塞	PLUG PIPE	2	
	3165957	垫圈	SPACER	2	
	3165976	弹簧垫圈	WASHER LOCK	2	
	4931643	管塞	PLUG PIPE	1	

选用件号: PP CQ151/153 Option No: PP CQ151/153

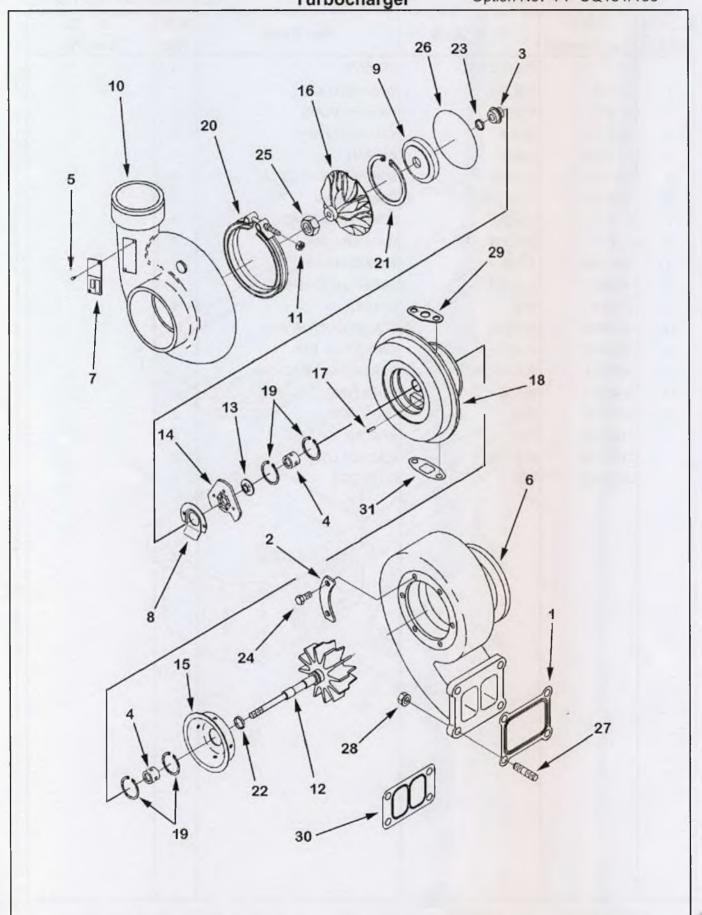


增压器 Turbocharger

选用件号: PP CQ151/153 Option No: PPCQ151/153

Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
1	3072919	增压器衬垫	GASKET,TURBOCHARGER	1	
	3529041	增压器总成	TURBOCHARGER		用于NT855-C280S10
	3529040	增压器总成	TURBOCHARGER		用于NTA855-C360S1
2	3502017	夹板	PLATE, CLAMPING	3	
3	3052231	O型密封圈	RETAINER, INJECTOR LINK	1	
4	3504413	增压器轴承	BEARING, TURBOCHARGER	2	
5	3519163	自攻螺钉	SCREW,DRIVE	2	
6	3522065	涡轮壳	HOUSING, TURBINE	1	
7	3527619	<b>名牌</b>	DATAPLATE	1	
8	3528094	油封隔板	BAFFLE,OIL	1	
9	3828096	油封板	PLATE,OIL SEAL	1	
- 1	4050424	压气机壳	HOUSING,COMPRESSOR	1	
11	3529372	六角螺母	NUT, REGULAR HEXAGON	1	
12	3531763	涡轮与轴	SHAFT & WHEEL	1	10.4
13	3531868	止推垫圈	COLLAR, THRUST	1	
14	3591655	涡轮止推轴承	BEARING, TUR THRUST	1	
15	3533038	增压器隔热罩	SHIELD, TURBOCHARGER HEA	1	
16	3593686	压气机叶轮	IMPELLER, TUR COMPRESSOR	1	
17	3522597	滚卷肖	PIN,ROLL	2	
18	3593303	增压器轴承壳	HOUSING, TUR BEARING	1	
19	3709753	卡环	RING, RETAINING	4	
20	3715174	V形抱箍	CLAMP, V BAND	1	111
21	3723863	卡环	RING, RETAINING	1	
22	3756754	开口密封环	SEAL, SPLIT RING	1	
23	3758848	开口密封环	SEAL, SPLIT RING	1	
24	3759917	六角调整螺钉	SCREW, HEXAGON HEAD SET	6	
25	3760250	锁紧螺母	NUT,LOCK	1	a contract of
26	3762915	O型密封圈	SEAL,O RING	1	
27	3818823	螺柱	STUD	4	
	3818824	六角螺母	NUT, HEXAGON FLANGE	4	*

气缸盖 Cylinder Head

选用件号: PPCQ151/153 Option No: PPCQ151/153

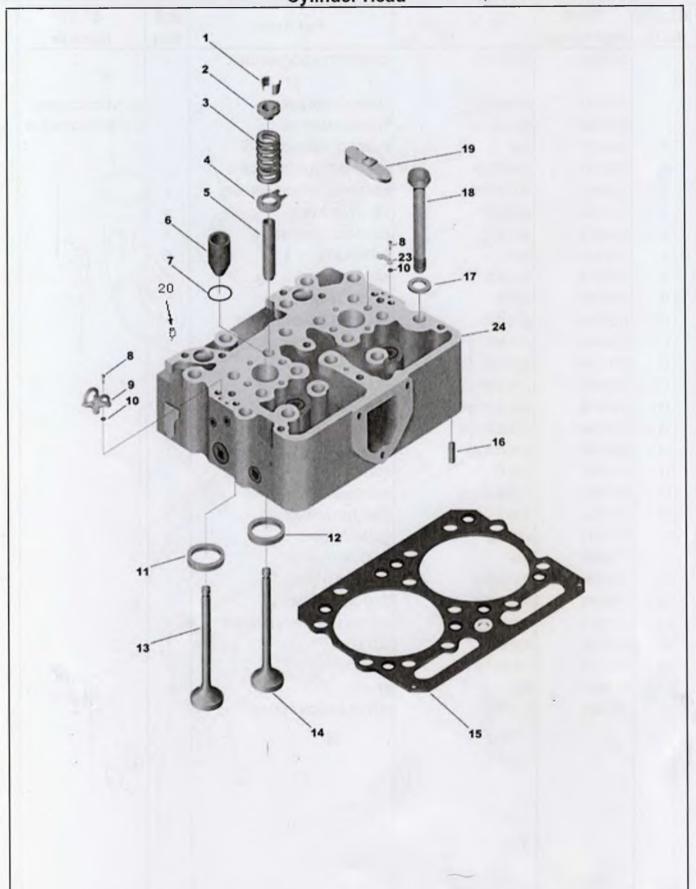

气缸盖

Cylinder Head

选用件号: PPCQ151/153 Option No: PPCQ151/153

Ref No	me 数量 Req	备 注 Remarks
17   3071075   平垫圏   WASHER,PLAIN   SCREW,HEXAGON HE   GASKET,CYLINDER HI   4058790   紅垫   GASKET,CYLINDER HI   HEAD,CYLINDER   WALVE,EXHAUST   GUIDE,VALVE SPRING   SPRING,VALVE   SPRING,VALVE   GUIDE,VALVE SPRING   HEAD,CYLINDER   HEAD,CYLINDER   HEAD,CYLINDER   HEAD,CYLINDER   INSERT,VALVE   INSERT,VALVE   INSERT,VALVE   INSERT,VALVE   GUIDE,VALVE STEM   HEAD,CYLINDER   GUIDE,VALVE STEM   HEAD,CYLINDER   GUIDE,VALVE STEM   HEAD,CYLINDER   GUIDE,VALVE STEM   HEAD,CYLINDER   SEAL,O RING   PLUG,PIPE   STEEVE,INJECTOR   SPI1 B   管塞   PLUG,PIPE   STEEVE,INJECTOR   SPI1 B   FR   PLUG,PIPE   STEEVE,INJECTOR   SPI1 B   MASSISTE   STEEVE,INJECTOR   STEEVE,INJECTOR   PLUG,PIPE   STEEVE,INJECTOR   ST	1	Remarks
18   3071161   強力螺栓   GASKET,CYLINDER HE	36	
15 4058790		
1 127554 气门锁夹 COLLET, VALVE VALVE, INTAKE VALVE, INTAKE VALVE, INTAKE VALVE, EXHAUST GUIDE, VALVE, EXHAUST GUIDE, VALVE SPRING SPRING, VALVE SPRING SPRIN		
1 127554 气门锁夹	1	
14	16	
13	4	
2       170296       气门弹簧上座       GUIDE,VALVE SPRING         3       211999       气门弹簧       SPRING,VALVE         4       4913845       气门弹簧下座       GUIDE,VALVE SPRING         4915441       气缸盖       HEAD,CYLINDER         67861       螺塞       PLUG,PIPE         11       127930       排气门座圈       INSERT,VALVE         12       200354       进气门座圈       INSERT,VALVE         5       3006456       气门导管       GUIDE,VALVE STEM         4       4913691       气缸盖       HEAD,CYLINDER         7       3007759       O型密封圈       SEAL,O RING         9       1008469       管塞       PLUG,PIPE         3008469       管塞       PLUG,PIPE         3008470       管塞       STEEVE,INJECTOR         8       9       TOTTE       CROSSOVER,FUEL         8       70772       回头带槽及带垫螺栓       CROSSOVER,FUEL         10       131026       O型密封圈       SEAL,O RING         9       147100       燃油跨越管       CROSSOVER,FUEL	4	
3       211999       气门弾簧下座       SPRING,VALVE         4       4913845       气门弹簧下座       GUIDE,VALVE SPRING         4915441       气缸盖       HEAD,CYLINDER         67861       螺塞       PLUG,PIPE         11       127930       排气门座圈       INSERT,VALVE         12       200354       进气门座圈       INSERT,VALVE         5       3006456       气门导管       GUIDE,VALVE STEM         6       4913691       气缸盖       HEAD,CYLINDER         7       3007759       O型密封圈       SEAL,O RING         9       1008,PIPE       PLUG,PIPE         3008469       管塞       PLUG,PIPE         3008470       管塞       STEEVE,INJECTOR         9       9       PLUG,PIPE         19       4061141       气门压板       CROSSOVER,FUEL         8       70772       因头带槽及带垫螺栓       CROSSOVER,FUEL         10       131026       O型密封圈       SEAL,O RING         23       135308       盖板       PLATE,COVER         9       147100       燃油跨越管       CROSSOVER,FUEL		
4       4913845       气门弹簧下座       GUIDE,VALVE SPRING         4915441       气缸盖       HEAD,CYLINDER         67861       螺塞       PLUG,PIPE         11       127930       排气门座圈       INSERT,VALVE         12       200354       进气门座圈       INSERT,VALVE         5       3006456       气门导管       GUIDE,VALVE STEM         6       4913691       气缸盖       HEAD,CYLINDER         7       3007759       O型密封圈       SEAL,O RING         3008469       管塞       PLUG,PIPE         3008470       管塞       PLUG,PIPE         6       3406702       喷嘴铜套       STEEVE,INJECTOR         8       9       PLUG,PIPE         4061141       气门压板       CROSSHEAD,VALVE         CROSSOVER,FUEL       SCREW,FILLISTER HE         10       131026       O型密封圈       SEAL,O RING         135308       造板       PLATE,COVER         147100       燃油跨越管       CROSSOVER,FUEL	8	
4915441   气缸盖		
11	1	
11       127930       排气门座圈       INSERT,VALVE         12       200354       进气门座圈       INSERT,VALVE         5       3006456       气门导管       GUIDE,VALVE STEM         24       4913691       气缸盖       HEAD,CYLINDER         7       3007759       O型密封圈       SEAL,O RING         3008469       管塞       PLUG,PIPE         3008470       管塞       PLUG,PIPE         6       3406702       喷嘴铜套       STEEVE,INJECTOR         S 911       B       管塞       PLUG,PIPE         19       4061141       气门压板       CROSSHEAD,VALVE         BM73331       燃油跨越管       CROSSOVER,FUEL         8       70772       园头带槽及带垫螺栓       SCREW,FILLISTER HE         10       131026       O型密封圈       SEAL,O RING         23       135308       盖板       PLATE,COVER         9       147100       燃油跨越管       CROSSOVER,FUEL	3	
12       200354       进气门座圈       INSERT,VALVE         5       3006456       气门导管       GUIDE,VALVE STEM         24       4913691       气缸盖       HEAD,CYLINDER         7       3007759       O型密封圈       SEAL,O RING         3008469       管塞       PLUG,PIPE         3008470       管塞       PLUG,PIPE         6       3406702       喷嘴铜套       STEEVE,INJECTOR         8       911       B       气门压板       CROSSHEAD,VALVE         CROSSOVER,FUEL       CROSSOVER,FUEL         8       70772       园头带槽及带垫螺栓       SCREW,FILLISTER HE         10       131026       O型密封圈       SEAL,O RING         23       135308       盖板       PLATE,COVER         9       147100       燃油跨越管       CROSSOVER,FUEL	4	
5       3006456       气门导管       GUIDE,VALVE STEM         24       4913691       气缸盖       HEAD,CYLINDER         7       3007759       O型密封圈       SEAL,O RING         3008469       管塞       PLUG,PIPE         3008470       管塞       PLUG,PIPE         6       3406702       喷嘴铜套       STEEVE,INJECTOR         S 911       B       管塞         19       4061141       气门压板       CROSSHEAD,VALVE         BM73331       燃油跨越管       CROSSOVER,FUEL         8       70772       园头带槽及带垫螺栓       SCREW,FILLISTER HE         10       131026       O型密封圈       SEAL,O RING         23       135308       盖板       PLATE,COVER         9       147100       燃油跨越管       CROSSOVER,FUEL	4	
24       4913691       气缸盖       HEAD,CYLINDER         7       3007759       O型密封圈       SEAL,O RING         3008469       管塞       PLUG,PIPE         3008470       管塞       PLUG,PIPE         6       3406702       喷嘴铜套       STEEVE,INJECTOR         S 911       B       管塞       PLUG,PIPE         19       4061141       气门压板       CROSSHEAD,VALVE         BM73331       燃油跨越管       CROSSOVER,FUEL         8       70772       园头带槽及带垫螺栓       SCREW,FILLISTER HE         10       131026       O型密封圈       SEAL,O RING         23       135308       盖板       PLATE,COVER         9       147100       燃油跨越管       CROSSOVER,FUEL	8	
7 3007759 O型密封圈 SEAL,O RING 9LUG,PIPE 3008470 管塞 PLUG,PIPE 9LUG,PIPE 9LUG,PIPE STEEVE,INJECTOR 9H1 B 管塞 PLUG,PIPE STEEVE,INJECTOR 9H1 B 管塞 PLUG,PIPE CROSSHEAD,VALVE CROSSOVER,FUEL SCREW,FILLISTER HE SEAL,O RING 9H1 SEAL,O RING PLATE,COVER CROSSOVER,FUEL SCREW,FILLISTER HE SEAL,O RING 9H1 SEAL,O RING PLATE,COVER CROSSOVER,FUEL SCREW,FILLISTER HE SEAL,O RING 9H1 SEAL,O RING PLATE,COVER CROSSOVER,FUEL	1	
3008469   管塞	2	
6 3406702 喷嘴铜套 STEEVE,INJECTOR PLUG,PIPE 19 4061141 气门压板 CROSSHEAD,VALVE BM73331 燃油跨越管 CROSSOVER,FUEL SCREW,FILLISTER HE 10 131026 O型密封圈 SEAL,O RING PLATE,COVER 9 147100 燃油跨越管 CROSSOVER,FUEL	6	
S 911 B       管塞       PLUG,PIPE         19 4061141       气门压板       CROSSHEAD,VALVE         BM73331       燃油跨越管       CROSSOVER,FUEL         8 70772       园头带槽及带垫螺栓       SCREW,FILLISTER HE         10 131026       O型密封圈       SEAL,O RING         23 135308       盖板       PLATE,COVER         9 147100       燃油跨越管       CROSSOVER,FUEL	2	
19       4061141       气门压板       CROSSHEAD,VALVE         BM73331       燃油跨越管       CROSSOVER,FUEL         8       70772       园头带槽及带垫螺栓       SCREW,FILLISTER HE         10       131026       O型密封圈       SEAL,O RING         23       135308       盖板       PLATE,COVER         9       147100       燃油跨越管       CROSSOVER,FUEL	2	
BM73331       燃油跨越管       CROSSOVER,FUEL         8       70772       远头带槽及带垫螺栓       SCREW,FILLISTER HE         10       131026       O型密封圈       SEAL,O RING         23       135308       盖板       PLATE,COVER         9       147100       燃油跨越管       CROSSOVER,FUEL	5	
8       70772       园头带槽及带垫螺栓       SCREW,FILLISTER HE         10       131026       O型密封圈       SEAL,O RING         23       135308       盖板       PLATE,COVER         9       147100       燃油跨越管       CROSSOVER,FUEL	12	
10       131026       O型密封圈       SEAL,O RING         23       135308       盖板       PLATE,COVER         9       147100       燃油跨越管       CROSSOVER,FUEL	1	
23     135308     盖板     PLATE,COVER       9     147100     燃油跨越管     CROSSOVER,FUEL	EAD CAP 12	
9 147100 燃油跨越管 CROSSOVER,FUEL	12	
	2	
20 68445 带槽圆柱销 PIN,GROOVE	2	
	6	

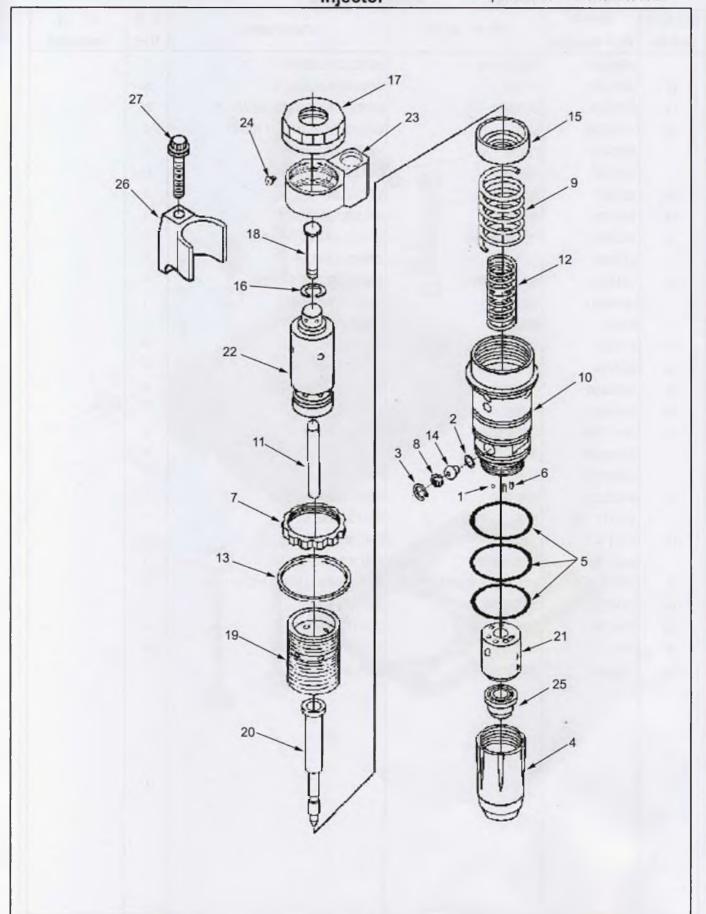



表29

喷油器 Injector 选用件号: PPCQ151/153 Option No: PPCQ151/153

图上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	
	4914505 4914537	喷油器总成 喷油器总成	INJECTOR INJECTOR	6	用于NT855-C280S10 用于NTA855-C360S10
	4914337	"更有用·奋奋·克克·利义	INJECTOR	0	H-T-N1A655-C360510
					- 100

摇臂室 Rocker Housing

选用件号: BP1115 Option No: BP1115

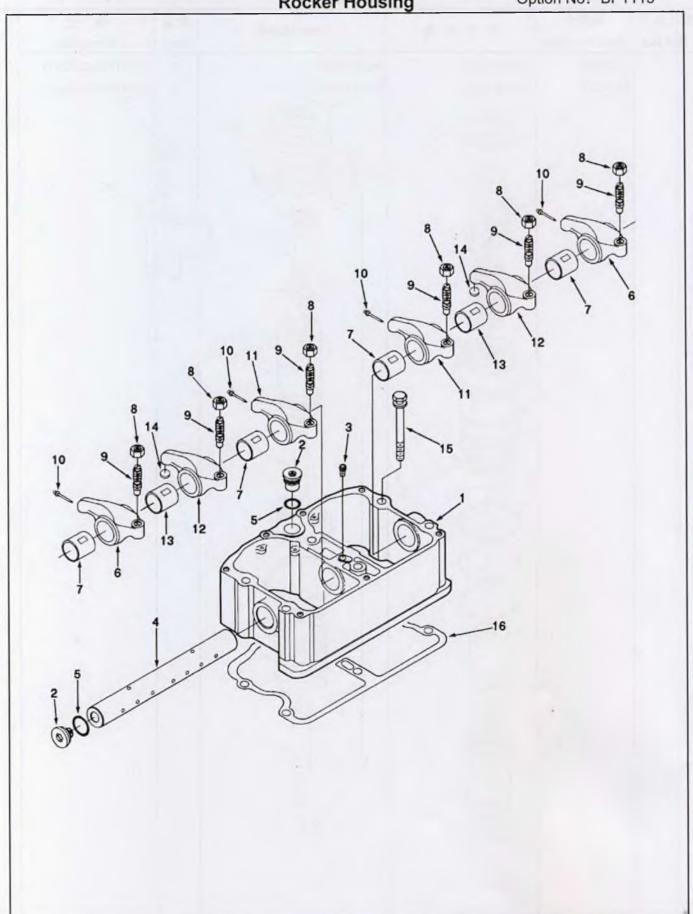


选用件号: BP1115 Option No BP1115

摇臂室 Rocker Housing

图上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
	3012238	摇臂室及安装	HOUSING ROCKER ARM	1	
1	3044788	摇臂室	HOUSING RKR	1	
2	3038903	摇臂轴堵塞	PLUG ROCKER LEVER SHAFT	2	
3	168319	摇臂轴固定螺钉	SET SCREW	1	
4	3038904	揺臂轴	SHAFT ROCKER LEVER	1	
5	3058653	O型密封圈	SEAL O RING	2	
6	BM95162	揺臂	LEVER ROCK	2	总成
1	3044787	揺臂室	HOUSING RKR	1	
	BM95161	摇臂	LEVER ROCK	2	总成
12	AR 2308	喷油摇臂	LEVER ROCKER	2	总成
11	BM95161	摇臂	LEVER ROCK	2	总成
15	3010589	带垫螺栓	SCREW	6	1
16	3017750	摇臂室衬垫	GASKET RKR LEVER HOUSING	1	-
		101			
		- 11-711-9			
				*	
		- 7			


选用件号: BP1115 Option No: BP1115

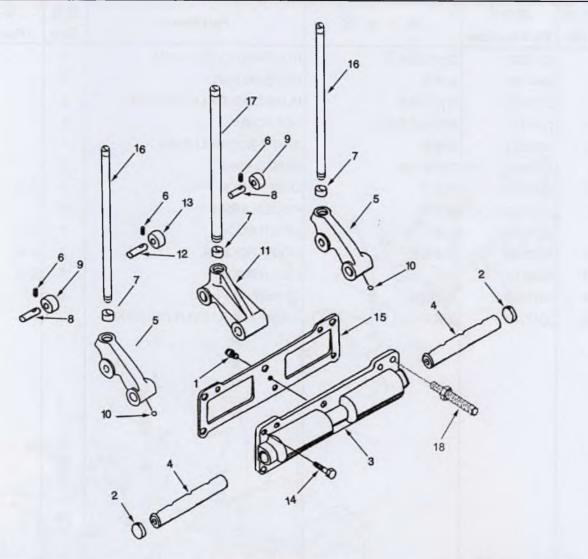

图上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
1-13	3081251	凸轮从动件总成	HOUSING, CAM FLLE	3	
		凸轮从动件室安装	MOUNTIING, HOUSING	1	
14	S 120 A	六角螺栓	SCREW, HEX HEAD CAP	15	
15	3068473	村垫	GASKET, CAM FOLLOWER HSG	3	
16	3046420	推杆	ROD PUSH	12	
17	3046430	推杆	ROD PUSH	6	
18	3081278	带垫螺栓	SCREW HEXAGON HEAD CAP	3	


#### 启动马达及安装 Starting Motor And MTG

选用件号: ST4028 Option No: ST4028

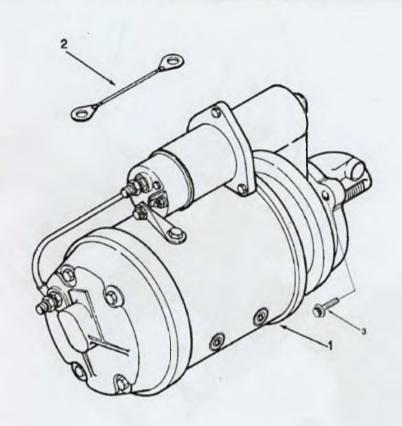


图上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
1	3004699	起动马达	MOTOR, STARTING	1	
2	3018924	接地线	WIRE, GROUND	1	
3	3600596	十二角螺栓	SCREW,TWELVE POINT CAP	3	
			0.00		

排气管布置 选用件号: TB 127/116/1136 Exhaust Manifold Arrangement Option No: TB 116/1136

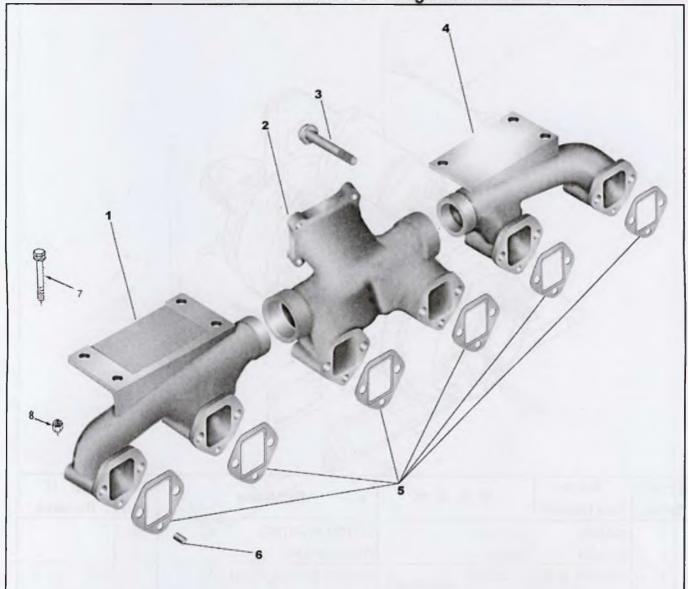


图上标号 零件号 Ref No Part Number		零件名称	Part Name	数量 Req	备 注 Remarks
	3014945	排气管及安装	MANIFOLD, EXHAUST	1	
6	105199	槽销	PIN,GROOVE	6	
5	3020943	排气管衬垫	GASKET, EXHAUST MANIFOLD	6	
3	3043647	六角螺栓	SCREW, HEXAGON HEAD CAP	10	
1	3165310	排气管(前段)	MANIFOLD, EXHAUST	1	
4	3165312	排气管 (后段)	MANIFOLD, EXHAUST	1	
2	3252046	排气管(中段)	GENERATOR, MAIN	1	
7	113226	六角螺栓	SCREW, HEXAGON HEAD CAP	4	
8	219138	六角螺母	NUT, REGULAR HEXAGON	4	

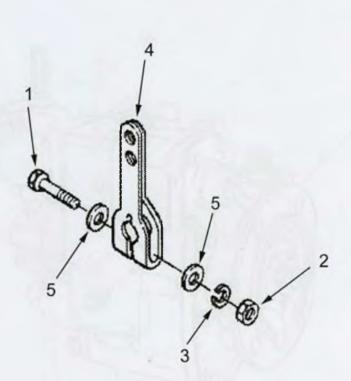

图上标号 零件号 Ref No Part Number		李 任 名 林 Part Name		数量 Req	备 注 Remarks
	BM73106	节流轴拉杆	LEVEL,THROTTLE	1	
1	S 159 B	六角螺栓	SCREW, HEX HEAD CAP	1	
2	S 270	六角螺母	NUT, REGULAR HEXAGON	1	
3	S 600	弹簧垫圈	WASHER,LOCK	1	
4	44680	油门拉杆	LEVER THROTTLE	1	
5	70704	垫圈	WASHER,PLAIN	2	


选用件号: TLN2144 Option No: TLN2144

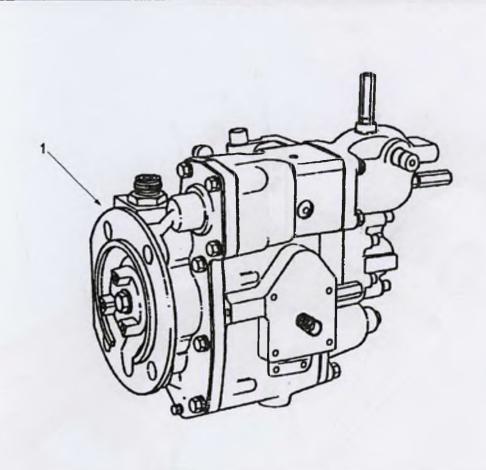

图上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
1	4951501	燃油泵总成	PUMP,FUEL	1	用于NT855-C280S10
	4951495	燃油泵总成	PUMP,FUEL	1	用于NTA855-C360S10

### 增压器回油管 Tube,Turbo drain


选用件号: PPCQ151 Option No: PPCQ151

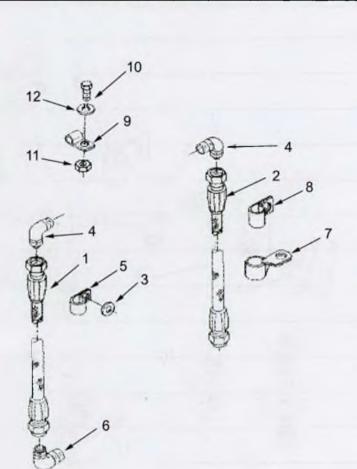

图上标号 Ref No	李 仟 名 称 Part Name		零件名称 Part Name		麥 仵 名 称 Part Name		零件名称 Part Name 数量 Req		备 注 Remarks
1	4914213	增压器回油管	TUBE,OIL DRAIN	1	用于NT855-C280S10				
2	209958	柔性软管	FXLUB	1					
3	S 602	平垫圈	WASHER PLAIN	2					
4	3037535	接头	ADAPTER	1					
5	67950	夹子	CLIP	1					
6	4913978	阳性接头	ADAPTER, ELBOW MALE	1					
7	69465	夹子	CLIP	1					
9	108722	夹子	CLIP	1					
10	69793	六角螺栓	SCREW,HEX HEAD CAP	1					
11	S 205	六角螺母	NUT REGULAR HEXAGON	1					
12	S 604	弹簧垫圈	WASHER LOCK		1 1000				
					10 7 10				

#### 增压器回油管 Tube,Turbo drain


选用件号: PPCQ153 Option No: PPCQ153

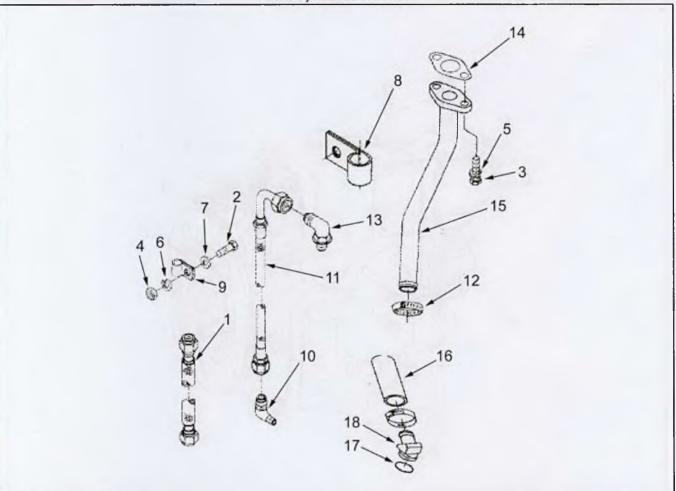

图上标号 Ref No	零件号 Part Number	零件名称 Part Name		数量 Req	备 注 Remarks
1	AS16020 NF	回油软管	HOSE FIEXIBLE	1	用于NTA855-C360S10
2	69793	六角螺栓	SCREW,HEX HEAD CAP	1	2. 3.5 mm 1 c
3	3010596	带垫圈螺栓	SCREW CAPTIVE WASHER CAP	2	
4	S 205	六角螺母	NUT REGULAR HEXAGON	1	
5	S 602	平垫圈	WASHER PLAIN	2	
6	S 604	弹簧垫圈	WASHER LOCK	1	
7	S 602	平垫圈	WASHER PLAIN	1	
8	67950	夹子	CLIP	1 *	
9	69465	夹子	CLIP	1	
10	68645	阳性连接弯管	ELBOW MALE ADAPTER	1	
11	209958	柔性软管	FXLUB	1	
12	43828 A	软管卡箍	CLAMP,HOSE	2	
13	3037535	接头	ADAPTER	1	
14	3202117	衬垫	GASKET CONNECTION	1	
15	3200178	增压器回油管	TUBE TUR OIL DRAIN	1	
17	3035228	O型圈	SEAL O RING	1	
18	3071061	接头	ADAPTER	1	

水滤器座 Head ,Corrosion Resistor

选用件号: WF 107 Option No: WF 107

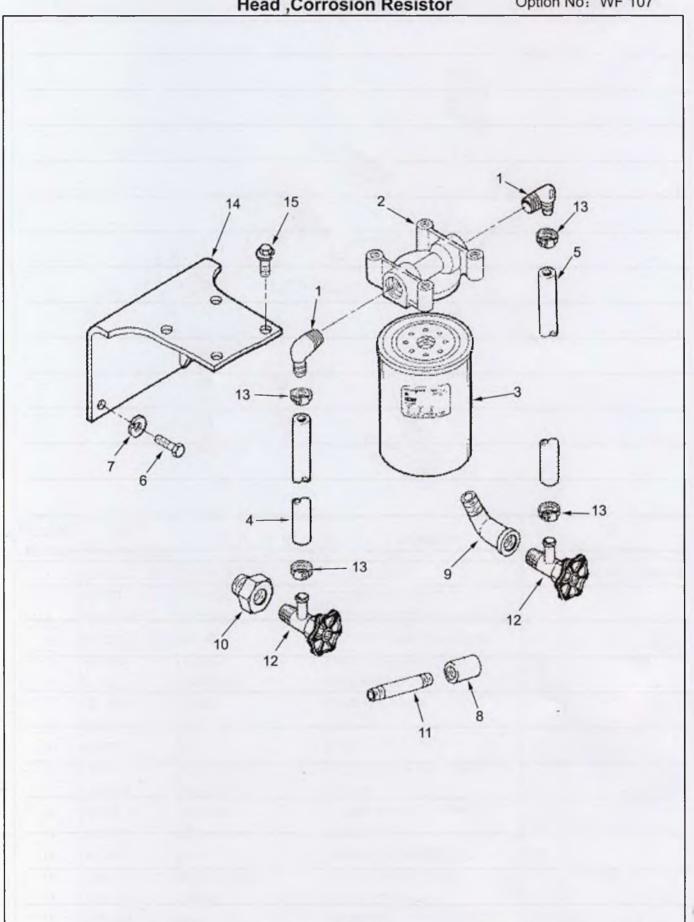


### 水滤器座

Head, Corrosion Resistor

选用件号: WF 107 Option No: WF 107

图上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
	3827107	滤器带盖总成	RESISTOR, CORROSING	1	
2	204163	水滤器座	HEAD CORROSION RESISTOR	1	
3	4058965	水滤清器	RESISTOR, CORROSION	1	
4	179917	软管	HOSE	1	
5	179915	软管	HOSE	1	
	4061511	水滤器支架及安装	MTG,RESISTOR CORROSION	1	
8	69911 A	夹子	CLIP	1	
6	S 199 A	六角螺栓	SCREW,HEX HEAD CAP	3	
7	S 604	弹簧垫圈	WASHER LOCK	3	
9	4060794	接头	ADAPTER	1	
10	187317	接头	ADAPTER	1	
12	179901	切断阀	VALVE SHUTOFF	1	
13	179904	软管夹	CLAMP,HOSE	4	
14	3325493	支架	BRACKET CRN RESISTOR	1	
15	3010596	带垫圈螺栓	BRACKET CRN RESISTOR	4	
1	179902	软管接头	COUPLING PLAIN HOSE	1	
1	179903	联接弯管	COUPLING ELBOW HOSE	1	
		1			
				-	

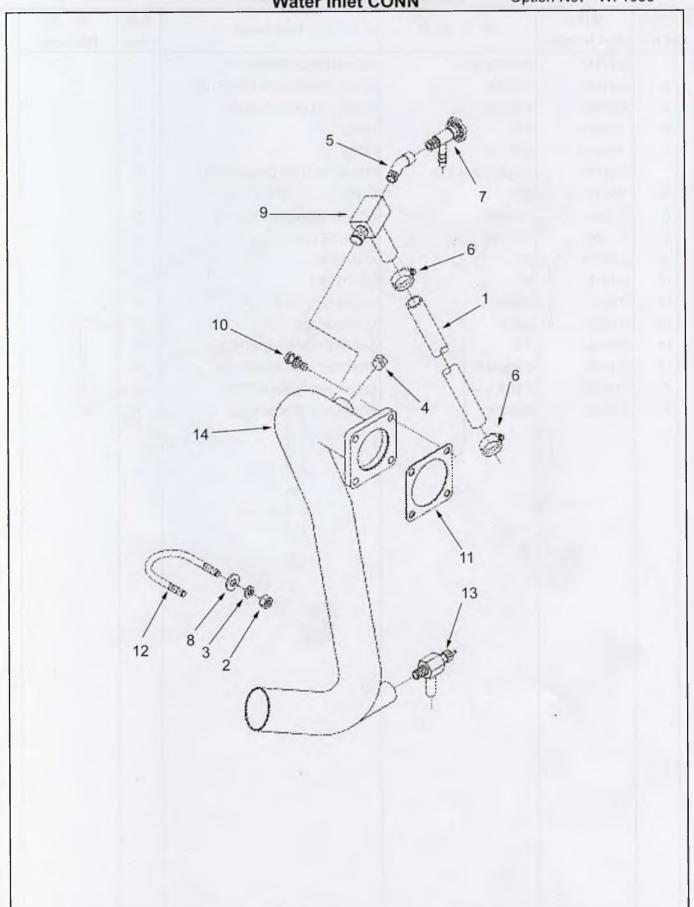


#### 进水接头 Water Inlet CONN

选用件号: WI 1039 Option No: WI 1039

图上标号	零件号	零件名称	Part Name	数量	备 注
Ref No	Part Number	र ।। या गर	T dr. Hame	Req	Remarks
	WI 1039	进水接头	WATER INLET CONN	1	用于NT855-C280S10
1	179913	软管	HOSE	1	
4	3008468	管塞	PLUG PIPE	1	
5	S 973	弯管	ELBOW PLAIN STREET PIPE	1	
6	179904	软管夹	CLAMP,HOSE	2	
7	179901	切断阀	VALVE SHUTOFF	2	
9	403520	三通	MALE BRANCH PIPE	1	
10	3010596	带垫圈螺栓	CAPTIVE WASHER CAP	4	
11	3024960	接头垫片	SHIM	1	
13	S 921 D	衬套接头	BUSHING REDUCING PIPE	1	
14	3326208	进水管	CONNECTION WATER INLET	1	
	WI 1042	进水管及安装	MTG & CONN WATER INLET	1	用于NTA855-C360S1
4	3008468	管塞	PLUG PIPE	1	
10	3010596	带垫圈螺栓	CAPTIVE WASHER CAP	4	
11	3024960	接头垫片	SHIM	1	
14	3419048	进水管	CONNECTION WATER INLET	1	

选用件号: WO 1038 Option No: WO 1038

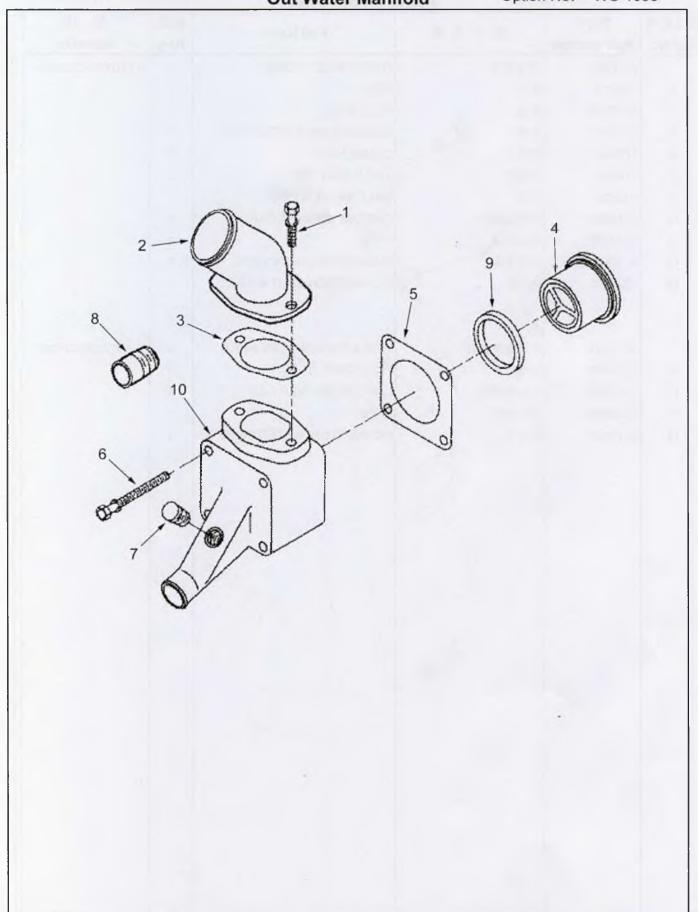

## 出水管联接 Out Water Manifold

Option No: WO 1038


选用件号: WO 1038

图上标号	零件号	零件名称	Part Name	数量	备 注
Ref No	Part Number	रामा	T art Name	Req	Remarks
	WO 1037	出水管联接	OUT WATER MANIFOLD	1	用于NT855-C280S10
1	3012472	带垫圈螺栓	CAPTIVE WASHER CAP	2	
2	3325939	接头	ADAPTER	1	
3	4914260	垫片	WASHER	1	
4	3076489	节温器	THERMOSTAT	1	
5	208128	节温器壳垫片	SHIM	1	
6	3010597	带垫螺栓	SCREW CAPTIVE WASHER CAP	4	
7	3013786	管塞	PLUG PIPE	1	
9	186780	节温器密封圈	SEAL THERMOSTAT	1	
10	3013612	节温器壳	HOUSING THERMOST TA	1	
	WO 1038	出水管联接	OUT WATER MANIFOLD		用于NTA855-C360S10
1	3010596	带垫圈螺栓	CAPTIVE WASHER CAP	2	
2	3250952	接头	ADAPTER	1	3.1
3	4914260	垫片	WASHER	1	
4	3076489	节温器	THERMOSTAT	1	
5	208128	节温器壳垫片	SHIM	1	
6	3010597	带垫螺栓	SCREW CAPTIVE WASHER CAP	4	
7	3013786	管塞	PLUG PIPE	1	
9	186780	节温器密封圈	SEAL THERMOSTAT	1	
10	3013612	节温器壳	HOUSING THERMOST TA	1	

#### 出水管联接 Out Water Manifold

选用件号: WO 1038 Option No: WO 1038

图上标号	零件号	零件名称	Part Name	数量	备 注
Ref No	Part Number	AL AMOUNT IN		Req	Remarks
	WO 1037	出水管联接	OUT WATER MANIFOLD	1	用于NT855-C280S10
1	3012472	带垫圈螺栓	CAPTIVE WASHER CAP	2	
2	3325939	接头	ADAPTER	1	
3	4914260	垫片	WASHER	1	
4	3076489	节温器	THERMOSTAT	1	
5	208128	节温器壳垫片	SHIM	1	
6	3010597	带垫螺栓	SCREW CAPTIVE WASHER CAP	4	
7	3013786	管塞	PLUG PIPE	1	
9	186780	节温器密封圈	SEAL THERMOSTAT	1	
10	3013612	节温器壳	HOUSING THERMOST TA	1	
	WO 1038	出水管联接	OUT WATER MANIFOLD		用于NTA855-C360S1
1	3010596	<b>带垫圈螺栓</b>	CAPTIVE WASHER CAP	2	
2	3250952	接头	ADAPTER	1	
3	4914260	垫片	WASHER	1	
4	3076489	节温器	THERMOSTAT	1	
5	208128	节温器壳垫片	SHIM	1	31
6	3010597	带垫螺栓	SCREW CAPTIVE WASHER CAP	4	
7	3013786	管塞	PLUG PIPE	1	
9	186780	节温器密封圈	SEAL THERMOSTAT	1	
10	3013612	节温器壳	HOUSING THERMOST TA	1	20
			36		
				-	
			111-		

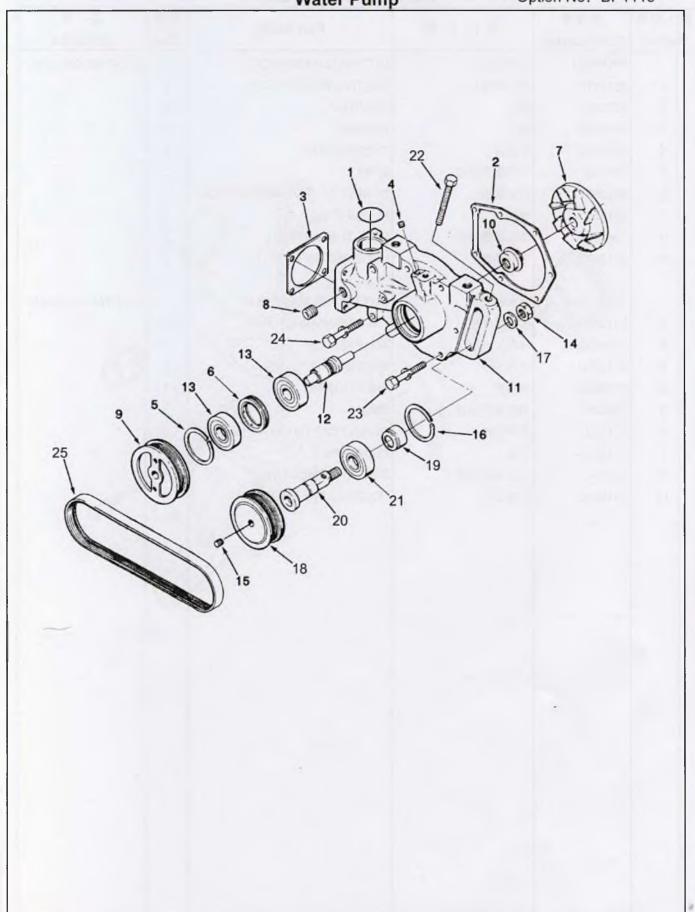

水泵 Water Pump 选用件号: BP1115 Option No: BP1115

		W	Option No:		
图上标号 Ref No	零件号 Part Number	零件名称	Part Name	数量 Req	备 注 Remarks
	3051409	水泵及惰轮安装	WATER & IDLER	1	
	3051408	水泵	PUMP WATER	1	
1	43463 A	O性密封圈	SEAL, O RING	1	
2	3076522	水泵衬垫	GASKET, WATER PUMP	1	
3	3024960	衬垫	GASKET CONNECTION	1	
4	S 911 B	管塞	PLUG, PIPE	2	
5	S 16255	挡圈	RING RETAINING	1	
6	196844	陽套	SPACER	1	
7	3000888	水泵叶轮	IMPELLER WATER PUMP	1	
8	3013786	管塞	PLUG, PIPE	1	
10	4060899	水封	SEAL,WATER	1	
11	3045163	水泵壳体	BODY WATER PUMP	1	
12	3050394	水泵轴	BEARING BALL	1	
13	3063246	轴承	BEARING BALL	2	
14	S 201	六角螺母	NUT HEAVY HEXAGON	1	
15	S 965 E	管塞	PLUG PIPE	1	
16	S 16255	挡圈	RING RETAINING	1	
	3064919	水泵惰轮	IDLER WATER PUMP	1	
17	213082	平垫圈	WASHER PLAIN	1	
18	215397	张紧轮	PULLEY IDLER	1	
19	3050395	隔套	SPACER	1	
20	3050396	张紧轮轴	SHAFT IDLER	1	
21	3063246	轴承	BEARING BALL	1	
22	182706	六角螺栓	SCREW, HEX HEAD CAP	1	
23	3012468	带垫螺栓	SCREW CAPTIVE WAS	4	
24	3012469	带垫螺栓	SCREW CAPTIVE WAS	2	
9	3025861	水泵皮带轮	PULLEY WATER PUMP	1	
25	217638	多槽皮带	BEIF,V RIBED	1	
				-	

地 址: 重庆市沙坪坝区壮志路(烈士墓)

电 话: 023-65335888 (总机) 023-65333444 (服务热线)

400-889-9990 电报: 0221 (重庆) 传真: 023-65315379 邮编: 400031

零件号: 4915177-00 CCEC 文印中心印刷 ADD: ZHUANGZHI ROAD, SHAPINGBA, CQ

PHONE: 023-65335888 023-65333444 400-889-9990

Fax:023-65315379

P.C:400031

PARTS NO:4915177-00

		*	
		ı.	
	-		
本图册如有更改	, 恕不通知!		* !