



Ben Liu

Mobile/ WeChat: +86-13705041170

FUZHOU SUNSHINE MACHINERY CO.,LTD

NO.6 Gulouyuan, Juyuanzhou Industrial Zone,
Jinshan Development Area, Fuzhou, Fujian, China.

Email: sales@primepowergenset.com

<http://www.gensetengine.com>

Cummins QSB5.9 engine Spare parts catalog

Part number	Description
3978818	Bearing, Main (Upper: Standard)
5259499	SEAL OIL
3934486	KITSEAL
4076930	SWITCH, PRESSURE
3963983	WASHERSEALING
3922794	SEAL,O RING
3940735	VALVE, INTAKE
S224	NUT,HEAVY HEXAGON
131584	PIN,ROLL
3902332	KEYPLAIN WOODRUFF
3902425	WASHERSEALING
3910739	BEARINGBALL
4891178	SUPPORTCAMSHAFT THRUST
3927692	NUTHEAVY HEXAGON
3071050	HOSEFLEXIBLE
3802967	VALVE,EXHAUST
3923044	RETAINERFAN HUB
3519807	GASKETTURBOCHARGER
3938157	GASKETFLANGE
3007632	PLUGEXPANSION
3008400	GASKETHYDRAULIC PUMP
3008465	PLUGPIPE
3008468	PLUGPIPE
3008469	PLUGPIPE
3037236	SEAL,O RING
3052061	SCREWHEXAGON HEAD CAP
3018309	CLIP

3029820	SEALO RING
3035960	RINGRETAINING
3066211	SEALO RING
3069053	CLAMPV BAND
3089238	PLUGTHREADED
3089240	SEAL,O RING
3093923	SCREWHEX FLANGE HEAD CAP
3093930	SCREWHEX FLANGE HEAD CAP
3093956	SCREWHEX FLANGE HEAD CAP
3200782	PLATE,COVER
3282081	SCREWHEX FLANGE HEAD CAP
3282266	PLUGTHREADED
3282942	BRACETUBE
3284623	GASKETPUSH ROD COVER
3285949	SUPPORTFAN
3286499	HOSE,PLAIN
3289257	BELTV RIBBED
3330202	SEALO RING
3330478	SEALO RING
3408345	SENSOR,TEMPERATURE
3408438	SEALO RING
3412320	CLAMPHOSE
3503100	BEARINGTURBOCHARGER
3504967	WASHERPLAIN
3519163	SCREWDRIVE
3519302	SHIELDTURBOCHARGER HEAT
3519336	WHEELTURBOCHARGER H2
3522597	PINROLL
3527566	RINGRETAINING
3527619	DATAPLATE
3527759	CONNECTIONADAPTER
3528104	BAFFLEOIL
3528121	COUPLINGELBOW HOSE
3528177	END, ADJUSTING LINK
3528204	NUTLOCK
3528221	RINGRETAINING
3528933	SEALO RING
3530556	SCREWHEXAGON HEAD SET
3530923	PLATEOIL SEAL
3530924	SLINGEROIL
3532195	SPACERMOUNTING
3532196	SPACERMOUNTING
3532217	COLLARTHURST
3532299	HOUSINGTURBINE
3533163	RINGRETAINING

3534291	SCREWHEXAGON HEAD SET
3534309	PLATECLAMPING
3535001	GASKETTURBOCHARGER
3535215	CLAMPHOSE
3538468	HOSEPLAIN
3539209	SCREWHEXAGON HEAD SET
3595651	BEARINGTUR THRUST
3596402	NUTLOCK
3615745	CLAMPWIRE TIE
3617959	WASHERLOCK
3654215	COVERPROTECTIVE
3658544	COVERPROTECTIVE
3678603	SEAL,O RING
3678912	SEAL,O RING
3678921	PLUGTHREADED
3678923	PLUGTHREADED
3678925	SEAL,O RING
3709861	GASKETTURBOCHARGER
3756754	SEALSPLIT RING
3758848	SEALSPLIT RING
3759917	SCREWHEXAGON HEAD SET
3762259	RINGRETAINING
3800330	BEARING,CRANKSHAFT THRUST
3802070	MAIN BEARING SET
3802071	SET,MAIN BEARING (010) (3802071/4955860)
3802072	SET,MAIN BEARING (020)
3802073	GUIDE VALVE
3802074	SET,MAIN BEARING (040)
3802820	KITSEAL
3802917	SETPISTON RING
3802918	SETPISTON RING
3802919	SETPISTON RING
3802925	KITENGINE PISTON
3802926	KITENGINE PISTON
3802927	KIT,ENGINE PISTON
3802928	KITENGINE PISTON
3802929	KITENGINE PISTON
3804899	KITFRONT SEAL SERVICE
3818823	STUD
3818824	NUTREGULAR HEXAGON
3863104	PANOIL
3863451	CONNECTIONOIL SUCTION
3863456	DIPSTICK
3867043	SEALO RING
3883284	SEAL,O RING

3900068	DOWELRING
3900227	SCREWHEXAGON HEAD CAP
3900240	NUTREGULAR HEXAGON
3900257	DOWELPIN
3900269	WASHERPLAIN
3900626	SCREWHEX FLANGE HEAD CAP
3900630	SCREWHEX FLANGE HEAD CAP
3900632	SCREW,HEX FLANGE HEAD CAP
3900633	SCREWHEX FLANGE HEAD CAP
3900677	SCREWHEXAGON HEAD CAP
3900687	PLUGEXPANSION
3900955	PLUGEXPANSION
3900956	PLUGEXPANSION
3900958	PLUGEXPANSION
3969562	Bearing, Connecting Rod (Standard)
3901249	SCREWHEX FLANGE HEAD CAP
3901356	GASKETTURBOCHARGER
3901395	SCREWHEXAGON HEAD CAP
3901445	SCREW,HEX FLANGE HEAD CAP
3901447	SCREWHEX FLANGE HEAD CAP
3901865	SCREWHEX FLANGE HEAD CAP
3902023	SCREWHEX FLANGE HEAD CAP
3902114	SCREWHEX FLANGE HEAD CAP
3902343	DOWELRING
3902460	SCREW,HEX FLANGE HEAD CAP
3902662	NUTHEXAGON FLANGE
3903035	SCREW,BANJO CONNECTOR
3903105	SCREWHEX FLANGE HEAD CAP
3903210	NUTHEXAGON FLANGE
3903475	SEALRECTANGULAR RING
3903652	CLAMPV BAND
3903826	PULLEYCRANKSHAFT
3903857	SCREWHEX FLANGE HEAD CAP
3904181	PLUGTHREADED
3904483	PINROLL
3904519	BRACETUBE
3904711	BRACETUBE
3905427	GEARFLYWHEEL RING
3906216	NUTHEXAGON FLANGE
3906619	PLUGPIPE
3906697	SEALRECTANGULAR RING
3906698	SEALRECTANGULAR RING
3907769	SCREWHEXAGON HEAD CAP
3907860	SCREWHEX FLANGE HEAD CAP
3908612	SCREWDRIVE

3909409	TOOL, SEAL INSTALLATION
3910128	SPACERFAN PILOT
3910131	SPACERFAN PILOT
3910248	PLUGO RING
3910260	SEALO RING
3911915	VALVECHECK
3911924	HUB,FAN
3911925	COUPLINGPLAIN HOSE
3912072	SCREWHEXAGON HEAD CAP
3912473	SEALO RING
3913638	SCREWHEX FLANGE HEAD CAP
3915787	PLUGTHREADED
3916348	CONNECTIONTUR OIL DRAIN
3917716	BRACETUBE
3917717	BRACETUBE
3917746	ISOLATORVIBRATION
3917747	ISOLATORVIBRATION
3918108	SCREWHEX FLANGE HEAD CAP
3918109	SCREWHEX FLANGE HEAD CAP
3918327	PIPEAIR TRANSFER
3918428	PLUNGERPRS REGULATOR
3919294	BRACETUBE
3919359	ISOLATORVIBRATION
3919864	SCREWHEX FLANGE HEAD CAP
3920400	SCREWHEX FLANGE HEAD CAP
3920447	SCREWHEX FLANGE HEAD CAP
3920691	RINGRETAINING
3920706	PLUGEXPANSION
3920773	WASHERSEALING
3920854	SCREWCAPTIVE WASHER CAP
3921816	SCREWHEX FLANGE HEAD CAP
3921836	CONNECTIONAIR INTAKE
3922072	PLUGEXPANSION
4940183	CONNECTOR, MALE
3923041	NUTLOCK
3923527	CLAMPHOSE
3924962	SCREWHEX FLANGE HEAD CAP
3925009	SPRINGCOMPRESSION
3925234	PLATECOVER
3925852	PULLEYADJ ALTERNATOR
3925883	SCREWHEX FLANGE HEAD CAP
3926047	SEALO RING
3926051	BRACETUBE
3926703	CLAMPSRING HOSE
3926846	SCREWHEX FLANGE HEAD CAP

3927063	SCREWHEX FLANGE HEAD CAP
3927948	SCREW,HEX FLANGE HEAD CAP
3928759	SEALGROMMET
3929017	BEARING,MAIN (010)
4938934	BEARING, MAIN (0,50 mm)
3929019	BEARING,MAIN (030)
3929020	BEARING,MAIN (040)
3929021	Bearing, Main (Standard)
4938937	Bearing, Main (0,25 mm)
4938938	
3929024	BEARING, MAIN
3929025	BEARING, MAIN
3929027	GEARCRANKSHAFT
3929269	PULLEYFAN
3929457	SEALO RING
3929751	GASKETACC DRIVE COVER
3930834	DAMPERRUBBER VIBRATION
3931824	SEALO RING
3931973	TUBETUR OIL DRAIN
3932296	PLUGO RING
3932513	PLATECOVER
3934047	PIN,PISTON
3935032	SEALRECTANGULAR RING
3935878	GASKETVALVE COVER
3935892	SHAFTROCKER LEVER
3935945	
3935946	SOCKET, ROCKER LEVER
5259022	TENSIONER,BELT
3936236	SPACERCIRCUIT BOARD
3936365	VALVEPRESSURE RELIEF
3936895	COVERREAR
3936953	CONNECTORMALE
3937123	STUD
3937142	SEALINJECTOR
3937214	NOZZLEPISTON COOLING
3937216	HOSEFLEXIBLE
3937219	LEVERROCKER
3937220	LEVERROCKER
3937404	PUMP,LUBRICATING OIL (3937404/4939587)
3937613	CLAMPSRING HOSE
3937706	GASKET,OIL DRAIN
3937736	
3938152	GASKETINT MANIFOLD COVER
3938156	GASKETGEAR HOUSING
3938706	GASKETCOVER PLATE

3939357	GASKETCOVER PLATE
3939695	
3939826	INJECTOR
3939914	HEATERENGINE
3940059	BUSHING
3940123	COLLET, VALVE
3940288	BRACKETLIFTING
3940639	CLAMPINJECTOR
3940817	SCREWHEX FLANGE HEAD CAP
3941153	CONNECTORBANJO
3941156	VALVECHECK
3941253	RODPUSH
3941437	COVERINTAKE MANIFOLD
3941927	
3941928	
3941975	DOWELDIAMOND
3941981	SCREWHEX FLANGE HEAD CAP
3942143	SCREWBANJO CONNECTOR
3942366	HEADLUB OIL FILTER
3942372	BRACETUBE
3942441	RINGSPEED INDICATOR
3942565	TAPPETVALVE
3942567	CAMSHAFT
3942598	TUBEFUEL DRAIN
3942659	ISOLATORNOISE
3942730	BALL, ROCKER LEVER
3942734	LEVER, ROCKER
3942735	LEVER, ROCKER
3942755	GEARCAMSHAFT
3942758	BRACETUBE
3942821	BRACEALTERNATOR
3942914	GASKET, OIL COOLER CORE B
3942915	GASKETFILTER HEAD
3942966	TUBEFUEL DRAIN
3942989	SEALVALVE STEM
3943198	RETAINERVEALVE SPRING
3943215	BRACKETLIFTING
3943300	CONNECTIONWATER OUTLET
3943449	INSERTVALVE
3943450	INSERT, VALVE
3943626	CROSSHEADVALVE
3943735	BRACKETWIRING RETAINER
3943745	COUPLINGPLAIN HOSE
3943765	TUBEINJECTOR FUEL SUPPLY
3943767	TUBEINJECTOR FUEL SUPPLY

3943769	TUBEINJECTOR FUEL SUPPLY
3943771	TUBEINJECTOR FUEL SUPPLY
3943773	TUBEINJECTOR FUEL SUPPLY
3943775	TUBEINJECTOR FUEL SUPPLY
3943875	MANIFOLDEXHAUST
3943990	CONNECTIONWATER INLET
3944061	SCREWSTUDED FLANGE CAP
3944203	SCREWFLAT HEAD CAP
3944243	CRANKSHAFTENGINE
3944593	SCREWHEX FLANGE HEAD CAP
3944649	TUBEFUEL SUPPLY
3944653	TUBEFUEL SUPPLY
3944654	HOSEPLAIN
3944655	SCREWSTUDED FLANGE CAP
3944657	TUBEFUEL SUPPLY
3944816	SCREWSTUDED FLANGE CAP
3944833	CONNECTOR,MALE
3944961	BREATHERCRANKCASE
3944989	COVERGEAR
3944990	COVERGEAR
3945094	PLUGEXPANSION
3945095	PLUGEXPANSION
3945201	BRACEFUEL PUMP
3945252	SPACERMOUNTING
3945268	HOSEMOLDED
3945280	GEARFUEL PUMP
3945438	SEALVALVE STEM
3945520	SCREWROUND HEAD CAP
3945573	BRACEFUEL PUMP
3945798	COVERVALVE
3946168	SCREWCPY ISOLATOR CAP
3946191	BRACKETTRANSFER PUMP
3946275	GASKETEXHAUST MANIFOLD
3946440	BRACETUBE
3948541	CONNECTIONFUEL DRAIN
3954829	SEAL, THERMOSTAT
3955393	SEALVALVE STEM
3957544	CORECOOLER
3957592	MOTORSTARTING
3958224	HARNESSWIRING
3959052	GASKETOIL PAN
3959128	SCREWWRKR LEVER ADJUSTING
3963988	WASHERSEALING
3964646	TUBEFUEL SUPPLY
3964908	SUPPORTROCKER LEVER

3965057	SPACERSTARTING MOTOR
3965818	CLAMPTUBE
3968471	SCREWTWELVE POINT CAP
3968984	TUBEOIL GAUGE
3969697	SEALO RING
3969988	GASKETCONNECTION
3970976	FLYWHEEL
3971212	ROD,ENGINE CONNECTING
3971615	MOTORSTARTING
3972080	TUBEFUEL DRAIN
3975770	TEESTREET PIPE
3977063	GASKETCYLINDER HEAD
3977913	SET, LUB OIL COOLER GASKET
3979515	HOUSINGFLYWHEEL
3990084	SEAL,O RING
3990127	SCREWHEX FLANGE HEAD CAP
3990517	MODULEELECTRONIC CONTROL
3990751	COVERPUSH ROD
3991306	SCREWHEX FLANGE HEAD CAP
3991773	HEADCYLINDER
4010519	SEALO RING
4022547	NUTREGULAR HEXAGON
4025402	TURBOCHARGERHX35 WASTEGA
4954905	SENSOR,TEMPERATURE
4891179	SCREWCONNECTING ROD CAP
4892795	BEARING,CON ROD (010)
4892796	Bearing, Connecting Rod (0,50 mm)
4893693	Bearing, Connecting Rod (Standard)
4921597	SENSOR,POSITION
4921601	SENSOR,POSITION
4932124	GASKET,OIL COOLER CORE
4933652	HEAD,FUEL FILTER
4938948	BEARING,CRANKSHAFT THRUST
4946649	ADAPTER, FUEL CONNECTOR
4955158	TURBOCHARGER,HX35 WASTEGA
5268950	COMPRESSOR, AIR (1 CYL)
3924338	HEAD, LUB OIL FILTER
3678924	PLUG, THREADED
3089239	PLUG, THREADED
3678922	PLUG, THREADED
3938159	GASKET, REAR COVER
3937072	GASKET, OIL PAN
3928832	GASKET, PUSH ROD COVER
3928493	GASKET, REAR COVER
3931349	GASKET, FLANGE

3935959	SEAL, OIL
3904351	TOOL, SEAL INSTALLATION
3904352	TOOL, SEAL INSTALLATION
3936791	CAP, MAIN BEARING
3936057	CAP, MAIN BEARING
3283065	BEARING, CRANKSHAFT THRUST
3283066	BEARING, CRANKSHAFT THRUST
3283067	BEARINGCRANKSHAFT THRUST
3283068	BEARING, CRANKSHAFT THRUST
3285946	SUPPORT, FAN
3357844	COVER, REAR
3971211	ROD, ENGINE CONNECTING
3283063	BEARING, CRANKSHAFT THRUST
3800331	BEARING, CRANKSHAFT THRUST
3283064	BEARING, CRANKSHAFT THRUST
3935936	BLOCK, CYLINDER
3533135	ACTUATOR, TURBOCHARGER
3532629	HOUSING, TUR BEARING
3533328	BRACKETACTUATOR
3916103	TAG, INSTRUCTION
3348747	SENSOR, PRESSURE
3348748	SENSOR, PRESSURE
3905368	PLUG, EXPANSION
3940182	GASKET, GEAR HOUSING
3942885	GASKET, COVER PLATE
3931342	DATAPLATE
4937942	DECAL
3935937	BLOCK, CYLINDER
3933220	KIT, CYL BLOCK HARDWARE
3932290	PLUG, O RING
3944204	CRANKSHAFT, ENGINE
3943380	HOUSING, GEAR
3967192	THERMOSTAT
3955179	SUPPORT, ALTERNATOR
3976651	FILTER, FUEL
3894519	SEPARATOR, FUEL WATER
3942453	ADAPTER, FILTER HEAD
3943235	DECAL
4089425	TOOL, SEAL INSTALLATION
3937690	PUMP, FUEL INJECTION
3990106	PUMP, FUEL TRANSFER
3970718	FLYWHEEL
3927335	TAG, INSTRUCTION
3942367	ADAPTER, FILTER HEAD
3937745	DECAL

3944730	BREATHER, CRANKCASE
3408346	SENSOR, TEMPERATURE
4921598	SENSOR, POSITION
3609867	DATAPLATE
4088750	SENSOR, TEMPERATURE
4921602	SENSOR, POSITION
3948465	PISTON, ENGINE
3948466	PISTON, ENGINE
3948467	PISTON, ENGINE
3948468	PISTON, ENGINE
3948469	PISTON,ENGINE
3882589	SEAL, O RING
3943776	TUBE, INJECTOR FUEL SUPPLY
3943777	TUBE, INJECTOR FUEL SUPPLY
3596633	TURBOCHARGER
3596629	TURBOCHARGER
3599650	IMPELLER, TUR COMPRESSOR
3538783	HOUSING, COMPRESSOR
3943161	SPRING,VALVE (3943161/5303406)
3991772	HEAD, CYLINDER
3991771	HEAD, CYLINDER
3958753	ASSEMBLY, ROCKER LEVER
3974277	VALVE, CHECK
3943871	MANIFOLD, EXHAUST
3968283	CAP, FILLER
3943991	CONNECTION, WATER INLET
3286279	KIT, WATER PUMP
3285415	PUMP, WATER