



Ben Liu
 Mobile/ WeChat: +86-13705041170
 FUZHOU SUNSHINE MACHINERY CO.,LTD
 NO.6 Gulouyuan, Juyuanzhou Industrial Zone,
 Jinshan Development Area, Fuzhou, Fujian, China.
 Email: sales@primepowergenset.com
<http://www.gensetengine.com>

Cummins QSB6.7 engine Spare parts catalog

Part number	Description
5301008	Crankshaft, Engine
4990848	
4955169	SET,PISTON RING
4921797	ECM, CM850
FF5421	PAC, FF
4934344	GASKET,OIL PAN
3978822	BEARINGCRANKSHAFT THRUST
3973233	FUEL FILTER
5263262	INJECTOR
3978818	Bearing, Main (Upper: Standard)
5259499	SEAL OIL
4076930	SWITCH, PRESSURE
5271613	ISOLATOR,NOISE
2872277	SENSORPOSITION
3963983	WASHERSEALING
3922794	SEAL,O RING
4946586	KIT, CYLINDER BLOCK
4076493	SENSORPRESSURE
4992206	CONNECTION, TUR OIL DRAIN
5264181	NUT,REGULAR HEXAGON
3940735	VALVE, INTAKE
131584	PIN,ROLL
145530	SEALO RING
3900625	SCREWHEX FLANGE HEAD CAP
3902425	WASHERSEALING
3910739	BEARINGBALL
3927692	NUTHEAVY HEXAGON

4934419	GEAR, CRANKSHAFT
201351	CLAMP, WIRE TIE
3802967	VALVE, EXHAUST
3923044	RETAINER FAN HUB
4938356	
4938355	
68152	CLIP
2830409	SEAL O RING
2830444	GASKET EXHAUST MANIFOLD
2830559	GASKET OIL COOLER CORE
2830977	SEAL, O RING
2831077	GASKET FILTER HEAD
3007632	PLUG EXPANSION
3007635	PLUG EXPANSION
3008465	PLUG PIPE
3033629	PIN, ROLL
2830411	SCREW HEX FLANGE HEAD CAP
2831066	COLLAR, SHAFT
2872395	CONNECTOR INJ FUEL SUPPLY
2881804	KIT WATER PUMP
3025806	SCREW SOCKET HEAD CAP
3035960	RING RETAINING
3069053	CLAMP V BAND
3085886	WASHER PLAIN
3089188	SCREW HEX FLANGE HEAD CAP
3089567	PLUG THREADED
3089568	PLUG THREADED
3093730	SCREW, HEX FLANGE HEAD CAP
3093775	SCREW HEX FLANGE HEAD CAP
3093828	NUT HEXAGON FLANGE
3093940	SCREW HEX FLANGE HEAD CAP
3093956	SCREW HEX FLANGE HEAD CAP
3102651	SCREW HEX FLANGE HEAD CAP
3282168	HOSE FLEXIBLE
3282266	PLUG THREADED
3285949	SUPPORT FAN
3287561	WASHER SEALING
4992207	CONNECTION, TUR OIL DRAIN
3287699	HARNESS, WIRING
3287727	CLIP
3289941	BELT V RIBBED
3290142	BELT V RIBBED
3503100	BEARING TURBOCHARGER
3504967	WASHER PLAIN
3519163	SCREW DRIVE

3519302	SHIELDTURBOCHARGER HEAT
3519336	WHEELTURBOCHARGER H2
3522597	PINROLL
3527566	RINGRETAINING
3527619	DATAPLATE
3527759	CONNECTIONADAPTER
3528104	BAFFLEOIL
3528121	COUPLINGELBOW HOSE
3528177	END, ADJUSTING LINK
3528221	RINGRETAINING
3528933	SEALO RING
3529882	HOUSINGTURBINE
3530923	PLATEOIL SEAL
3530924	SLINGEROIL
3531238	RINGRETAINING
3532195	SPACERMOUNTING
3532196	SPACERMOUNTING
3532217	COLLARTHURST
3532427	BAFFLE, TURBOCHARGER NOISE
3533163	RINGRETAINING
3534291	SCREWHEXAGON HEAD SET
3535001	GASKETTURBOCHARGER
3535215	CLAMPHOSE
3539209	SCREWHEXAGON HEAD SET
3592050	NUTHEXAGON FLANGE
3595651	BEARINGTUR THRUST
3596402	NUTLOCK
3678603	SEAL,O RING
3678610	PLUGTHREADED
3678786	SEAL,O RING
3678791	PLUG,THREADED
3678873	PLUGTHREADED
3678912	SEAL,O RING
3678921	PLUGTHREADED
3678923	PLUGTHREADED
3678925	SEAL,O RING
3679139	SEAL,O RING
3756754	SEALSPLIT RING
3758848	SEALSPLIT RING
3762259	RINGRETAINING
3818823	STUD
3818824	NUTREGULAR HEXAGON
3863948	ELBOWMALE ADAPTER
3863958	CONNECTORMALE
3864036	HOSEFLEXIBLE

3864170	ELBOWMALE ADAPTER
3864171	CONNECTORMALE
3864172	HOSEFLEXIBLE
3867646	SEAL, O RING
3883284	SEAL,O RING
3900068	DOWELRING
3900215	PLUGTHREADED
3900589	NUTHEXAGON FLANGE
3900628	SCREW,HEX FLANGE HEAD CAP
3900630	SCREWHEX FLANGE HEAD CAP
3900631	SCREWHEX FLANGE HEAD CAP
3900632	SCREW,HEX FLANGE HEAD CAP
3900633	SCREWHEX FLANGE HEAD CAP
3900637	SCREWHEX FLANGE HEAD CAP
3900677	SCREWHEXAGON HEAD CAP
3900679	SCREWHEX FLANGE HEAD CAP
3900955	PLUGEXPANSION
3900956	PLUGEXPANSION
3969562	Bearing, Connecting Rod (Standard)
3901249	SCREWHEX FLANGE HEAD CAP
3901445	SCREW,HEX FLANGE HEAD CAP
3901446	SCREWHEX FLANGE HEAD CAP
3901757	SCREWHEX FLANGE HEAD CAP
3901865	SCREWHEX FLANGE HEAD CAP
3902112	SCREWHEX FLANGE HEAD CAP
3902114	SCREWHEX FLANGE HEAD CAP
3902343	DOWELRING
3902451	SCREWHEX FLANGE HEAD CAP
3902460	SCREW,HEX FLANGE HEAD CAP
3903035	SCREW,BANJO CONNECTOR
3903096	SCREWHEX FLANGE HEAD CAP
3903112	SCREWHEX FLANGE HEAD CAP
3903464	SCREWHEX FLANGE HEAD CAP
3903652	CLAMPV BAND
3903990	SCREWHEX FLANGE HEAD CAP
3904167	KIT, LINER
3904181	PLUGTHREADED
3904325	TOOL, SEAL INSTALLATION
3904483	PINROLL
3905401	PLUGEXPANSION
5307960	SEAL,RECTANGULAR RING
3906391	SCREW SOCKET HEAD CAP
3906696	SEALRECTANGULAR RING
3906697	SEALRECTANGULAR RING
3906698	SEALRECTANGULAR RING

3907769	SCREWHEXAGON HEAD CAP
3908095	PLATECOVER
3908546	GEARFLYWHEEL RING
3909409	TOOL, SEAL INSTALLATION
3910130	SPACERFAN PILOT
3910248	PLUGO RING
3910260	SEALO RING
3910495	SCREWHEX FLANGE HEAD CAP
3912256	TUBEOIL FILLER
3913638	SCREWHEX FLANGE HEAD CAP
3914177	SCREWHEX FLANGE HEAD CAP
3914407	SCREWHEX FLANGE HEAD CAP
3914462	PULLEY,FAN
3914868	PLATECOVER
3915787	PLUGTHREADED
3917995	CLAMPHOSE
3918109	SCREWHEX FLANGE HEAD CAP
3918153	SCREWHEX FLANGE HEAD CAP
3918350	PIPEAIR TRANSFER
3918428	PLUNGERPRS REGULATOR
3918614	HOSEPLAIN
3919369	GASKETTURBOCHARGER
3919995	SCREWHEX FLANGE HEAD CAP
3920691	RINGRETAINING
3920706	PLUGEXPANSION
3920773	WASHERSEALING
3920854	SCREWCAPTIVE WASHER CAP
4940183	CONNECTOR, MALE
3922863	SCREWHEX FLANGE HEAD CAP
3923041	NUTLOCK
3925009	SPRINGCOMPRESSION
3925852	PULLEYADJ ALTERNATOR
3925883	SCREWHEX FLANGE HEAD CAP
3927063	SCREWHEX FLANGE HEAD CAP
3927948	SCREW,HEX FLANGE HEAD CAP
3928624	SEALO RING
3928873	SCREWHEX FLANGE HEAD CAP
3929017	BEARING,MAIN (010)
4938934	BEARING, MAIN (0,50 mm)
3929019	BEARING,MAIN (030)
3929021	Bearing, Main (Standard)
4938937	Bearing, Main (0,25 mm)
4938938	
3929024	BEARING, MAIN
3929457	SEALO RING

3930837	SCREWHEX FLANGE HEAD CAP
3931532	SCREWSELF TAPPING METAL
3935644	BEARINGROLLER
3935645	SHAFTACCESSORY DRIVE
3936352	SCREWSTUDDER FLANGE CAP
3936365	VALVEPRESSURE RELIEF
3937327	CONNECTIONEXHAUST OUTLET
3937613	CLAMPSRING HOSE
3937692	SCREWHEX FLANGE HEAD CAP
3937736	
3938655	GASKETACC DRIVE COVER
3939258	GASKETCOVER PLATE
3939357	GASKETCOVER PLATE
3939720	INSERT, VALVE
3940059	BUSHING
3940123	COLLET, VALVE
3941253	RODPUSH
3941927	
3941928	
3941929	CONNECTIONWATER INLET
3941981	SCREWHEX FLANGE HEAD CAP
3943198	RETAINERVEALVE SPRING
3943449	INSERTVALVE
3943450	INSERT, VALVE
3943626	CROSSHEADVALVE
3943670	FITTINGORIFICE
3944458	TUBEFUEL SUPPLY
3944593	SCREWHEX FLANGE HEAD CAP
3944655	SCREWSTUDDER FLANGE CAP
3945094	PLUGEXPANSION
3945095	PLUGEXPANSION
3945252	SPACERMOUNTING
3947269	SEALORING
3947270	SEALORING
3947530	GASKETINT MANIFOLD COVER
3947759	TAPPETVALVE
3948083	PLATECOVER
3949326	DOWELRING
3949419	STUDDDOUBLE END PLAIN
3949530	GASKETTURBOCHARGER
3949562	GASKETFLANGE
3949830	SCREWROUND HEAD CAP
3954099	CAMSHAFT
3954100	CAMSHAFT
3954111	DOWELRING

3954616	DOWELRING
3954829	SEAL, THERMOSTAT
3955030	DOWELPIN
3955069	RINGSPEED INDICATOR
3955075	SUPPORTFRONT ENGINE
3955080	CONNECTIONFUEL BLOCK
3955150	GEAR,CRANKSHAFT
3955152	GEARCAMSHAFT
3955153	GEARFUEL PUMP
3955171	COUPLINGPLAIN HOSE
3955393	SEALVALVE STEM
3957290	VALVECHECK
5341928	CONNECTIONWATER INLET
3957849	SCREWSOCKET HEAD CAP
3959128	SCREWRKR LEVER ADJUSTING
3959797	GASKETOIL PAN
3960514	CONNECTOR, MALE
3963988	WASHERSEALING
3963990	WASHER,SEALING
3964337	CONNECTORQCK DISCONNECT
3964817	SCREWBANJO CONNECTOR
3964908	SUPPORTROCKER LEVER
5267912	MOTORSTARTING
3965764	PLATECYL BLOCK STIFFNER
3965818	CLAMPTUBE
3966164	BREATHERCRANKCASE
3966354	SUPPORT,ALTERNATOR
3967353	TAG, INSTRUCTION
3968075	SCREWCAPTIVE WASHER CAP
3968470	SCREWTWELVE POINT CAP
3968786	TUBE, BREATHER
3968877	NOZZLE,PISTON COOLING
3969988	GASKETCONNECTION
3970042	SEAL, O RING
3971212	ROD,ENGINE CONNECTING
3971371	TUBE, BREATHER
3971615	MOTORSTARTING
3972800	PLUGPIPE
3973061	HOUSINGFLYWHEEL
3973497	FLYWHEEL
3973834	THERMOSTAT
5317174	VALVE, PRESSURE RELIEF
3974127	GASKETFILTER HEAD
3974156	CAP, MAIN BEARING
3974157	CAPMAIN BEARING

3974158	
3974159	CAPMAIN BEARING
3974254	TUBEOIL GAUGE
3974765	CONNECTORQCK DISCONNECT
3974847	GEARACCESSORY DRIVE
3975555	SCREWHEX FLANGE HEAD CAP
3975770	TEESTREET PIPE
3975818	COOLEROIL
3976172	COVERVALVE
3976370	CLAMPINJECTOR
3976371	SEALINJECTOR
3976834	TENSIONERBELT
3976998	DIPSTICK
3977357	WIREGROUND
3977393	SEALINJECTOR
3977530	MANIFOLD, FUEL
3977572	SCREWROUND HEAD CAP
3977785	DAMPERVERSICOUS VIBRATION
3977852	PLUGTHREADED
3977913	SET, LUB OIL COOLER GASKET
3978031	TUBE, INJECTOR FUEL SUPPLY
3978032	TUBE, INJECTOR FUEL SUPPLY
3978034	TUBE, INJECTOR FUEL SUPPLY
3978036	TUBE,INJECTOR FUEL SUPPLY
3978702	BRACKETFILTER
3979211	MANIFOLDEXHAUST
3979393	HEADLUB OIL FILTER
3990127	SCREWHEX FLANGE HEAD CAP
3999967	ADAPTERHYDRAULIC PUMP
4010519	SEALO RING
4010643	SEALO RING
4062328	SEALO RING
4954905	SENSOR,TEMPERATURE
4890404	CLIP
4890634	NUTREGULAR HEXAGON
5338295	SEALOIL
4891179	SCREWCONNECTING ROD CAP
4891288	GASKETOIL DRAIN
4891385	WASHERSEALING
4892796	Bearing, Connecting Rod (0,50 mm)
4893693	Bearing, Connecting Rod (Standard)
4893936	NUTHEXAGON FLANGE
4894100	BRACKETLIFTING
4894641	SCREWCAPTIVE WASHER CAP
4895459	CAP,FILLER (4895460)

5255450	GASKET,FILLER CAP
4895710	SEAL,O RING
4895877	SCREWSOCKET HEAD CAP
4896355	RETAINERCOVER
4896897	GASKETACC DRIVE COVER
4896991	STUD
4897457	SUPPORT,CAMSHAFT THRUST
4898301	GASKETOIL SUC CONNECTION
4898372	SEALO RING
5309255	GASKETVALVE COVER
4899231	GASKETRKR LEVER HOUSING
4899498	PLATECLAMPING
4899743	CLIP
4899791	ISOLATORVIBRATION
4903218	FILTER, FUEL
4903482	SEALO RING
4921322	SENSOR,PRS TEMPERATURE
4921574	SEAL, O RING
4921776	MODULE,ELECTRONIC CONTROL
4928599	SEAL,O RING
4928699	SHAFT,ROCKER LEVER
4928800	HEAD,LUB OIL FILTER
4929065	SCREW,HEX FLANGE HEAD CAP
4929128	
4929619	PLUG,THREADED
5289179	
4930918	
4931041	PIN,PISTON
4931643	PLUG,PIPE
4932210	GASKET,CYLINDER HEAD
4932211	CLIP
4932375	BEARING,CON ROD (010)
4932376	Bearing, Connecting Rod (0,50 mm)
4932790	SCREW,SOCKET HEAD CAP
4932801	RING, OIL PISTON
4933232	BRACKET,LIFTING
4933532	PLUG,PIPE
4933777	PIPE,AIR TRANSFER
4934489	RIVET
5303406	SPRING,VALVE
4936423	HOUSING,GEAR
4936646	SEAL, OIL
4937285	
4937420	SCREW,ROUND HEAD CAP
4937597	ACTUATOR,ETR FUEL CONTROL

4938189	PLUG,EXPANSION
4938353	HOUSING, STARTING AID
4938357	RETAINER, ELEMENT
4938358	SPRING, LEAF
4938359	WASHER, INSULATING
4938360	WASHER, INSULATING
4938364	WASHER, INSULATING
4938655	ADAPTER,OIL PAN
4938657	HOUSING,ROCKER LEVER
4938658	HOUSING, ROCKER LEVER
4938676	Sleeve
4938989	CLAMP,V BAND
4939473	HOSE,FLEXIBLE
4939588	PUMP, LUBRICATING OIL
4940117	SCREW,HEX FLANGE HEAD CAP
4940118	RETAINER, CAP SCREW
4940119	WASHER, INSULATING
4940552	TUBE,FUEL SUPPLY
4941307	ADAPTER, ELC CONNECTOR
4941308	WASHER, PLAIN
4941309	AID,STARTING
4942685	TUBE,LUB OIL SUCTION
4946649	ADAPTER, FUEL CONNECTOR
4955158	TURBOCHARGER,HX35 WASTE GA
4376353	KIT,ENGINE PISTON
4955229	SET,UPPER ENGINE GASKET
4955251	SET,PISTON RING
4955372	SEAL,OIL
4955479	TURBOCHARGER,HX35 WASTE GA
4955480	SET,PISTON RING
4983908	SEAL,RECTANGULAR RING
4988598	HARNESS,WIRING
4928698	LEVER (4928698)
4995603	
4995604	
5255257	PISTON
4890635	WASHER PLAIN (4890635)
5256607	PUMP, FUEL
5256608	PUNP, FUEL
5297641	SENSOR,PRESSURE
5263672	
5263842	HOSE,PLAIN
5264568	GASKET, OIL DRAIN
5268950	COMPRESSOR, AIR (1 CYL)
5272335	HUB, FAN

5282836	ALTERNATOR
5285750	HOSE, FLEXIBLE
3678924	PLUG, THREADED
4938362	WASHER, PLAIN
4938370	WASHER, PLAIN
3678922	PLUG, THREADED
4894721	WASHERSEALING
3283065	BEARING, CRANKSHAFT THRUST
3283066	BEARING, CRANKSHAFT THRUST
3283067	BEARINGCRANKSHAFT THRUST
3283068	BEARING, CRANKSHAFT THRUST
3285946	SUPPORT, FAN
3971211	ROD, ENGINE CONNECTING
3973496	FLYWHEEL
5283108	DATAPLATE
3971012	HOUSING, GEAR
4946585	BLOCK, CYLINDER
3999966	ADAPTER, HYDRAULIC PUMP
3966352	SUPPORT, ALTERNATOR
5264205	FILTER, FUEL
5264206	ADAPTER, FILTER HEAD
3973062	HOUSING, FLYWHEEL
4995590	HARNESS, WIRING
3975126	FILTERFUEL
3975404	HEAD, FUEL FILTER
3975405	ADAPTER, FILTER HEAD
4946959	GASKET, FILTER
4994932	TUBE, FUEL DRAIN
3864459	GASKETOIL COOLER CORE
3864458	GASKETFILTER HEAD
3971662	HEAD, LUB OIL FILTER
4928802	HEAD, LUB OIL FILTER
3976997	DIPSTICK
4898037	PAN, OIL
5269996	SCREW, STUDDED FLANGE CAP
4993966	BRACKET, ETR CNT MODULE
4934860	PISTON, ENGINE
4932587	RING, COMPRESSION PISTON
4934816	PISTON, ENGINE
4988954	HEAD, CYLINDER
4988953	HEAD, CYLINDER
4983047	HEAD, CYLINDER
4929864	CONNECTOR, INJ FUEL SUPPLY
4928587	KEY, NONROCKING
2872393	CONNECTOR, INJ FUEL SUPPLY

4039630	TURBOCHARGER
2840364	SCREWHEXAGON HEAD SET
3598272	ACTUATOR, TURBOCHARGER
4035699	IMPELLER, TUR COMPRESSOR
4035900	HOUSING, TUR BEARING
2839879	PLATECLAMPING
4041846	BRACKET, ACTUATOR
4036099	HOSEPLAIN
4036745	HOUSING, COMPRESSOR
2840781	SCREWHEXAGON HEAD SET
5282721	HEAD, CYLINDER
4994198	SOCKET, ROCKER LEVER
4995605	LEVER, ROCKER
4994197	BALL, ROCKER LEVER
4995606	LEVER, ROCKER
4934573	HOUSING, ROCKER LEVER
4940182	UNION, MALE
4993477	CONNECTION, TUR OIL DRAIN
3976171	COVER, VALVE
3976173	COVER, VALVE
2830882	BAFFLE, BREATHER
3957365	CONNECTION, WATER INLET
5261014	CONNECTION, WATER OUTLET
5260263	PUMP, WATER