



Ben Liu  
 Mobile/ WeChat: +86-13705041170  
 FUZHOU SUNSHINE MACHINERY CO.,LTD  
 NO.6 Gulouyuan, Juyuanzhou Industrial Zone,  
 Jinshan Development Area, Fuzhou, Fujian, China.  
 Email: sales@primepowergenset.com  
<http://www.gensetengine.com>

### Cummins VTA-903T engine Spare parts catalog

Part number	Description
3058555	BARRELGOVERNOR
100478	SEALO RING
4026171	GASKET,FUEL PUMP
3062676	SEAL,OIL
193736	SEAL,INJECTOR O RING
3008706	SCREENINJECTOR FILTER
3076489	THERMOSTAT
186780	SEALTHERMOSTAT
3046283	SCREW, HEX FLANGE HEAD CAP
3046200	SPIDER,JAW COUPLING
S174C	
S212	NUT,REGULAR HEXAGON
S213A	NUT,REGULAR HEXAGON JAM
S223	NUT,HEAVY HEXAGON
S2286	DRIVE SCREW
S251	
S270	NUT,REGULAR HEXAGON
S600	WASHER,LOCK
S602	Washer, Plain
S603	WASHER,LOCK
S606A	WASHER, LOCK
S610	WASHER,LOCK
S626	WASHER
S631	WASHER,PLAIN
S679	
S911B	PIPE, PLUG
S923E	DRAINCOCK
S965E	PLUG, PIPE

S967	
S983	BUSHING,REDUCING PIPE
100099	SEAL,RECTANGULAR RING
100193	BUSHING
100215	SHAFT,FUEL PUMP DRIVE
100918	GASKETTURBOCHARGER
100973	DOWELRING
101841	SHIM, F.P. GOV.
101842	SHIMFUEL PUMP GOVERNOR
101843	SHIM
102957	DOWELDIAMOND
103009	SCREW,HEXAGON HEAD CAP
103023	SCREW,HEXAGON HEAD CAP
107460	CLIP
108186	LOCKWIRE
108187	LOCKWIRE
108307	DRAINCOCK
108708	SCREW,HEXAGON HEAD CAP
109319	LOCKPLATE
110058	NUTFUEL PUMP ADJUSTING
110855	GASKETFUEL PUMP
114463	SCREWFLAT HEAD CAP
114850	SPACERMOUNTING
116935	CONNECTORMALE
118227	DOWELFUEL PUMP
118347	ELBOWMALE UNION
119363	GEAR,FUEL PUMPING
121229	ELBOWMALE ADAPTER
123558	GUIDEVALVE CROSSHEAD
124509	GEARFLYWHEEL RING
125880	ADAPTERPREHEATER NOZZLE
127316	WASHERPLAIN
127554	COLLETVALVE
127558	PLUNGERPRS REGULATOR
128964	BRACETUBE
135231	PLUG EXPANSION
135783	WASHER,LOCK
137795	SCREWHEXAGON HEAD CAP
138607	PLUGGLOW
138609	GASKETPLUG
138937	GUIDEVALVE STEM
139438	NUTHEAVY HEXAGON
139950	LOCKPLATE
139969	NIPPLEPLAIN HEXAGON
139988	SEAL,RECTANGULAR RING

140218	WASHERPLAIN
141636	PLUNGERIDLE SPRING
141875	BUSHING
143138	SCREWHEXAGON HEAD CAP
143405	SHAFTLUB OIL PUMP DRIVE
143406	SHAFTIDLER
143848	SPRING,GOVERNOR ASSIST
144131	KEYPLAIN WOODRUFF
144178	PLUNGER,GOVERNOR
144179	SHIM,FUEL PUMP GOVERNOR
144195	SPRINGCOMPRESSION
145529	SEALO RING
146159	WASHERPLAIN
146160	WASHERPLAIN
146483	SCREENROTOR
146731	SPRINGVALVE
146732	SPRINGVALVE
146733	GUIDEVALVE SPRING
147389	SCREWHEXAGON HEAD CAP
148529	DOWELPIN
149151	GEAR,LUBRICATING OIL PUMP
151033	PLATECOVER
151249	COVERWATER HEADER
151707	GASKETINTAKE MANIFOLD
151900	SEAL RECTANGULAR RING
152082	ROLLERTAPPET
153337	BODYFUEL PUMP DAMPER
153338	DAMPER FUEL CONTROL
154087	SEAL,RECTANGULAR RING
154088	SEALRECTANGULAR RING
157088	CAPFUEL PUMP FILTER
158250	SCREW,TWELVE POINT CAP
160514	WASHER,PLAIN
163759	CONNECTORTUBE
163944	BUSHING
163945	RINGRETAINING
166009	SPRINGCOMPRESSION
167157	BALLCHECK
168306	SCREW,SLOTTED SET
172640	SCREWTWELVE POINT CAP
173086	GASKET,INJECTOR
174299	RETAINERINJECTOR FIL SCN
175864	SHAFT,FUEL PUMP
178937	SEALO RING
179068	SHIMFUEL PUMP GOVERNOR

180371	CLIP
180626	WASHERPLAIN
181466	WASHER,LOCK
182459	GASKETWATER HEADER COVER
3521442	SEAL,SPLIT RING
185138	RETAINERINJECTOR CUP
185139	ADAPTERINJECTOR PTD
185505	VALVECHECK
189800	SHIMFUEL PUMP GOVERNOR
191772	SCREW,TWELVE POINT CAP
194037	SOCKETROCKER LEVER
199919	SCREWTWELVE POINT CAP
200064	CLIP
200706	KEYOFFSET WOODRUFF
68274	SPRINGCOMPRESSION
200861	WASHERPLAIN
201048	GASKETCONNECTION
3063240	HOSE, PLAIN
202897	DIAPHRAGM
203310	WASHERPLAIN
203426	PIN,INJECTOR ROLL
203518	WASHERPLAIN
203760	WASHER,PLAIN
204165	SCREWHXAGON HEAD CAP
206326	SCREW,TWELVE POINT CAP
209956	HOSEFLEXIBLE
211633	SHAFT,GOVERNOR
211635	PIN,GOVERNOR WEIGHT
211636	GEAR,GOVERNOR
212601	SHAFT,FUEL PUMP DRIVE
212604	RINGRETAINING
212605	GEAR,FUEL PUMPING
67211	DOWEL, PIN
67946	WASHER,PLAIN
68139	ELBOW,PLAIN ADAPTER
68190	BRACETUBE
68365	BUSHING
69324	WASHERPLAIN
69699	WASHERPLAIN
70690	PLUNGERFUEL CONTROL
70700	SPRINGFUEL PUMP TORQUE
70704	WASHER PLAIN
70705	GASKET,FUEL PUMP
70713	RETAINERGOVERNOR SPRING
70715	WASHERPLAIN

70716	SCREWKNURLED
70760	DOWELPIN
70790	SCREW, SOCKET HEAD CAP
70802	TEEFEMALE PIPE
70897	NUT, LOCK
212613	HUB, JAW COUPLING
212639	ADAPTER, SPLINE
212668	KEYSQUARE
213559	SOCKET, CAM FOLLOWER
213768	SEALO RING
213769	PLUGBALL
214093	COUPLINGELBOW HOSE
214139	BALL
214150	WASHERPLAIN
3000082	WASHER, PLAIN
3000446	COVERFUEL CONTROL
3001707	SHIM
3002993	DOWEL, RING
3003156	SEAL, WIRE
3005592	GASKETFAN SPACER
3006182	SCREWCAPTIVE WASHER CAP
3006343	STOPTHROTTLE LEVER
3006344	SCREWSQUARE HEAD SET
3006550	CARRIER, GOVERNOR WEIGHT
3006745	RINGRETAINING
3007024	CLAMPTUBE
3008465	PLUGPIPE
3008466	PLUGPIPE
3008468	PLUGPIPE
3008469	PLUGPIPE
3010595	SCREWCAPTIVE WASHER CAP
3010597	SCREWCAPTIVE WASHER CAP
3011716	SCREWCAPTIVE WASHER CAP
3012470	SCREWCAPTIVE WASHER CAP
3012471	SCREWCAPTIVE WASHER CAP
3012472	SCREWCAPTIVE WASHER CAP
3012473	SCREWCAPTIVE WASHER CAP
3012475	SCREWCAPTIVE WASHER CAP
3012476	SCREWCAPTIVE WASHER CAP
3013786	PLUGPIPE
3013810	PISTONAIR FUEL CONTROL
3013811	DIAPHRAGM
3013904	SCREWCAPTIVE WASHER CAP
3014354	CONNECTORMALE
3014766	SCREW, CAPTIVE WASHER CAP

3015282	SCREWCAPTIVE WASHER CAP
3015283	SCREWCAPTIVE WASHER CAP
3015520	COVER,FUEL CONTROL
3015522	VALVE,CHECK
3016182	NUT,LOCK
3016609	GEAR & SHAFT, GEAR PUMP
3017051	SCREW,CAPTIVE WASHER CAP
3017052	SCREWCAPTIVE WASHER CAP
3018655	SPRINGCOMPRESSION
3019616	GEAR & SHAFT,GEAR PUMP
3020187	SEALOIL
3021068	BARREL,AIR FUEL CONTROL
3021470	SCREWCAPTIVE WASHER CAP
3021676	PLUNGER,AIR FUEL CONTROL
3022590	SCREWCAPTIVE WASHER CAP
3023088	SPACERMOUNTING
3023171	INSERTAIR FUL CNT PISTON
3025458	PLUGPIPE
3025459	PLUGPIPE
3028372	ASSEMBLYSHAFT & SPROCKET
3032874	SEALO RING
3033038	SCREWCAPTIVE WASHER CAP
3033719	DOWELRING
3033740	VALVECHECK
3033742	PLUGTHREADED
3034243	PUMPGEAR FUEL
3034412	SEAL,O RING
3035624	SCREW, CAPTIVE WASHER CAP
3036460	WASHER,SPRING
3037537	SEAL,O RING
3038076	SCREWCAPTIVE WASHER CAP
3040837	SCREWCAPTIVE WASHER CAP
3042542	SEAL,O RING
3042889	SCREWCAPTIVE WASHER CAP
3044942	SEAL,O RING
3045005	PLUGINJECTOR ORIFICE
3045986	SEAL,O RING
3046201	SEALO RING
3046407	SCREWSOCKET SET
3046690	SHAFTTHROTTLE
3047503	CUPINJECTOR SUPER SAC
3048296	LEVERTHROTTLE
3050624	VALVEPRESSURE RELIEF
3052860	SPACERMOUNTING
3052864	COVERFUEL PUMP

3054238	INJECTORPTD LESS LINK
154396	GASKETINTAKE MANIFOLD
155267	RINGRETAINING
156348	GASKETCONNECTION
156420	BEARINGTURBOCHARGER
156438	SPRINGVALVE
156439	SPRINGVALVE
156444	SEALSPLIT RING
156641	SEALVALVE STEM
156819	GASKETAIR COMPRESSOR
159960	BEARINGCRANKSHAFT THRUST
160554	GASKETHEAT EXCHANGER
160819	GASKETCONNECTION
162653	PLUGTHREADED
164455	DOWELRING
167299	NUTLOCK
169327	PINTAPPET ROLLER
169351	RODPUSH
169747	PLATETHRUST BEARING WEAR
169843	GASKETBEARING SUPPORT
169992	GASKETAIR COMPRESSOR
170510	INSERTTUR BEARING
170833	DOWELRING
171028	GASKET VALVE COVER
171085	GUIDETAPPET
171570	SHIELDTURBOCHARGER HEAT
172723	GASKETLUB OIL CLR COVER
177376	SCREWMAIN BEARING CAP
177385	CAPMAIN BEARING
177734	SCREWCYLINDER HEAD CAP
177735	SCREWCYLINDER HEAD CAP
177891	BRACKETOIL TUBE
178334	BRACKETRKR LEVER SHAFT
178335	BRACKETRKR LEVER SHAFT
178336	DOWELRING
179297	GASKETGEAR COVER PLATE
179298	PLATEGEAR COVER
179301	SEALDUST
179306	GASKETWATER HEADER COVER
179308	GASKETLUB OIL FIL COVER
179309	GASKETLUB OIL FIL COVER
179426	PLATECOVER
179427	GASKETWATER HEADER COVER
179464	GEAR,CRANKSHAFT
180098	CLAMPINJECTOR

180381	GASKETTHERMOSTAT HOUSING
180795	GASKETLUB OIL PUMP
181027	TAPPETVALVE
183049	SEALO RING
183122	SCREWTWELVE POINT CAP
187608	GASKETLUB OIL CLR HSG
187610	GASKETLUB OIL CLR COVER
187697	GASKETLUB OIL CLR HSG
189565	GASKETTHERMOSTAT HOUSING
189566	GASKETCONNECTION
189582	GASKETWATER PUMP
189763	BUSHING
189770	BEARINGCON ROD STD
189771	BEARINGCON ROD 010
189772	BEARING,CON ROD .020
189773	BEARING,CON ROD .030
191116	GASKETAIR COMPRESSOR
191175	VALVEPRESSURE RELIEF
191917	LINKINJECTOR PLUNGER
193660	BEARINGMAIN STD
193670	BEARINGMAIN STD
193919	COVERCAMSHAFT
194115	SEALO RING
195327	DAMPERRUBBER VIBRATION
195613	NIPPLEPLAIN PIPE
195712	LOCKPLATE
196385	BAFFLEOIL PAN
196887	GASKETLUB OIL CLR HSG
196949	GASKETOIL PAN
196960	BODYWATER PUMP
197573	PULLEYWATER PUMP
197582	SLEEVEWEAR
200069	SLEEVEWEAR
200757	RINGRETAINING
200780	BUSHING
200790	BUSHING
202377	PADTUR INSULATION
202456	SEALO RING
203131	NUTHEAVY HEXAGON
203408	SPACERMOUNTING
203502	FLANGE
206305	SCREWTWELVE POINT CAP
206354	SCREWHEXAGON HEAD CAP
208161	WASHERPLAIN
208510	HOUSING,TURBINE



209700	SCREWCYLINDER HEAD CAP
209865	GASKETLUB OIL CLR HSG
210036	PLUGEXPANSION
210468	TUBELUB OIL TRANSFER
211083	GEAR,ACCESSORY DRIVE
211939	SPRINGCOMPRESSION
212224	GASKETCYLINDER HEAD
212504	PLATEVALVE SPRING WEAR
212583	POINTERTIMING
212859	TEEMALE ADAPTER
213058	PINTAPPET ROLLER
213061	ROLLERTAPPET
213289	BUSHING
213512	GASKETFRONT COVER
213806	T-WHEEL (SHAFT & WHEEL)
214183	COVERFRONT
214189	CONNECTIONWATER INLET
214193	MANIFOLDEXHAUST
214584	WASHERPLAIN
214751	SCREWCYLINDER HEAD CAP
215157	GASKETEXH OUT CONNECTION
215390	PINPISTON
215580	CAMSHAFT
215632	ADAPTERCRANKSHAFT
215633	ADAPTERCRANKSHAFT
215898	MANIFOLDEXHAUST
216354	CONNECTIONOIL SUCTION
216745	COVERTOR CNV OIL COOLER
216756	TUBEWATER TRANSFER
216793	IMPELLER,TURBOCHARGER
216802	SLEEVETURBOCHARGER
216804	PLATEOIL SEAL
216983	RINGCOMPRESSION PISTON
218025	RINGCOMPRESSION PISTON
218539	SEALOIL
218853	SOCKETTAPPET
255180	BRT,CRC
3001163	SPRINGCOMPRESSION
3002044	WEIGHTGOVERNOR
3002483	IMPELLERWATER PUMP
3003602	RODPUSH
3003721	PICKUP,MAGNETIC
3004152	FLYWHEEL
3004749	BELTV
3004907	TAPPETINJECTOR

3005150	CAPFILLER
3007219	CLAMPV BAND
3007307	PULLEYWATER PUMP
3007713	SEALO RING
3007759	SEALO RING
3008464	PLUGPIPE
3009003	BODYFUEL PUMP
3012477	SCREWCAPTIVE WASHER CAP
3012483	SCREWCAPTIVE WASHER CAP
3013339	LOCKPLATE
3013498	SETSINGLE HEAD GASKET
3013773	PLATECOVER
3013776	GASKETLUB OIL CLR HSG
3013778	GASKETCONNECTION
3013779	GASKETLUB OIL CLR HSG
3013919	PUMPFUEL TRANSFER
3013920	NOZZLESTARTING AID
3014248	BEARINGTHRUST
3014249	BUSHING
3014341	CONNECTORMALE
3014458	SETLOWER ENGINE GASKET
3014619	CONNECTIONEXHAUST OUTLET
3014620	CONNECTIONEXHAUST OUTLET
3014621	SHIELDHEAT
3015176	BUSHING
3016042	HOUSINGTHERMOSTAT
3016181	SCREWHEXAGON HEAD CAP
3017035	BEARINGBALL
3017378	HOUSINGFLYWHEEL
3017399	SUPPORT,RADIATOR
3018307	BRACEVALVE
3019287	KITENGINE PISTON
3020184	SEALOIL
3020859	BRACETUBE
3021488	RINGTHRUST
3022142	CLAMPTUBE
3022548	GASKETCOVER PLATE
3022549	COVERACC DRIVE FLANGE
3022709	SCREWHEXAGON HEAD CAP
3022723	PUMPLUBRICATING OIL
3022865	CONNECTORFEMALE
3022973	GASKETOIL COOLER CORE
3023198	TEESTREET PIPE
3023867	SEALOIL
3024236	SUPPORTBEARING

3024320	SUPPORTFUEL PUMP
3024954	SCREWHEXAGON HEAD CAP
3025628	TUBETUR OIL DRAIN
3025808	CONNECTIONWATER TRANSFER
3025812	CLAMPHOSE
3025875	BUSHING
3025876	COVERSPRING PACK
3025879	SHAFTFUEL PUMP DRIVE
3026315	GASKETRKR LEVER HOUSING
3027309	HOUSING,COMPRESSOR 50
3027395	TUBEFUEL SUPPLY
3027396	TUBEFUEL SUPPLY
3027397	TUBEFUEL SUPPLY
3028626	HOSEPLAIN
3028627	CLAMPHOSE
3028665	GASKETEXHAUST MANIFOLD
3028673	GASKETVALVE COVER
3031298	ACTUATOR
3031728	GEAR,CAMSHAFT
3032014	SPRING,COMPRESSION
3033034	CLAMPTUBE
3033035	BRACKETSTARTING AID
3033724	BUSHING
3033895	PINROLL
3034304	NUTLOCK
3034720	CLAMPV BAND
3034736	SEALTURBOCHARGER
3035227	DIPSTICK
3035633	PAD
3035648	TUBEFUEL SUPPLY
3036472	GDE,PLN
3036532	AFTERCOOLER
3036715	COVERVALVE
3036970	HOUSINGSRING PACK
3037053	CONNECTORMALE
3038041	SCREWHEXAGON HEAD CAP
3038217	PACKSPRING
3038745	HOUSINGTUR BEARING 50
3038999	SEALOIL
3039000	SEALOIL
3040997	PLUGTHREADED
3042888	SCREWCAPTIVE WASHER CAP
3043487	CLAMPHOSE
3044138	CORECOOLER
3044139	HOUSINGOIL COOLER

3044140	ISOLATORVIBRATION
3044795	SEALRECTANGULAR RING
3046762	GASKETLUB OIL CLR COVER
3048335	TUBEFUEL SUPPLY
3048336	TUBE BLEED
3049136	CAPMAIN BEARING
3049137	CAPMAIN BEARING
3049138	CAPMAIN BEARING
3049139	CAPMAIN BEARING
3049540	GEAR,LUBRICATING OIL PUMP
3049541	GEAR,LUBRICATING OIL PUMP
3051752	COVERFUEL PUMP
3052315	VALVECHECK
3053166	SPRINGCOMPRESSION
3054160	SHAFTWATER PUMP
3054532	BARREL&PLUNGER
3055069	PLUG,THREADED
3055740	PLUGPIPE
3055741	PLUGPIPE
3062500	PUMP,FUEL
3063668	GASKETLUB OIL PUMP
3066149	TUBE OIL GAUGE
3066637	BEARINGTHRUST
3066638	SPACERMOUNTING
3066914	SEAL,O RING
3068575	GASKETWTR TRF CONNECTION
3069177	GASKETTURBOCHARGER
3070486	SLEEVEINJECTOR
3070720	PLUNGERGOVERNOR
3071085	SEALWATER PUMP
3071160	HOSEPLAIN
3071471	BOLTCONNECTING ROD
3073579	RODENGINE CONNECTING
3074615	COVERVALVE
3074616	COVERVALVE
3074697	GASKETCAMSHAFT COVER
3075526	COVERFUEL PUMP
3076040	SCREWFUEL PUMP ADJUSTING
3077366	HOSEFLEXIBLE
3077454	HOSEHUMP
3077646	BEARINGBALL
3079630	LEVERROCKER
3084245	GASKETGEAR HOUSING
3088348	HOUSINGROCKER LEVER
3201585	SEALO RING

3502449	SEAL,RECTANGULAR RING
3519623	COLLAR, THRUST
3519627	Bearing, Turbocharger
3519641	RINGRETAINING
3522597	PINROLL
3523412	SEALSPLIT RING
3523980	SLINGEROIL
3524418	SHIM
3524419	BAFFLEOIL
3525073	SCREWHEXAGON HEAD SET
3533674	BEARINGTUR THRUST
3600494	CLAMPHOSE
3801921	TURBO,ST50
3803201	KITTUR REPAIR
3803513	VALVEINTAKE
3803520	VALVEEXHAUST
3803551	VALVEFUEL SHUTOFF
43828C	CLAMP,HOSE
44092D	COVERPROTECTIVE SHIPPING
64816A	DOWELPIN
66112B	SPACERMOUNTING
68138	CONNECTOR,MALE
681781	WASHER,LOCK
68568	DOWELDIAMOND
69375	CLIP
69470	SCREWHEXAGON HEAD CAP
69562	DOWELPIN
69592	PLUGTHREADED
69952	SCREWHEXAGON HEAD CAP
70183	RINGRETAINING
70772B	SCREWFILLISTER HEAD CAP
S104	SCREW,HEXAGON HEAD CAP
S109	SCREW,HEXAGON HEAD CAP
S110	SCREWSOCKET HEAD CAP
S112	SCREW,HEXAGON HEAD CAP
S117	SCREW,HEXAGON HEAD CAP
S119	SCREW,HEXAGON HEAD CAP
S126	Screw, Hexagon Head Cap
S127	SCREW,HEXAGON HEAD CAP
S1315	
S141	
S159B	
S16052	BEARING,BALL
S16240	
68061A	SEAL,O RING

S130A	SCREW, HEXAGON HEAD CAP
S929B	BUSHING, REDUCING PIPE
S122B	SCREW, HEXAGON HEAD CAP
214940	CRANKSHAFT, ENGINE
AR3640	SET, MAIN BEARING. STD
3019290	KIT, SHORT BLOCK
AR10035	BLOCK, CYLINDER SERVICE
S133	SCREW, HEXAGON HEAD CAP
AR8069	LINER, CYLINDER
3074677	COVERGEAR
3073110	GASKET, RKR LEVER HOUSING
217079	DAMPER, VIBRATION
3024235	DRIVEFUEL PUMP
3022547	SUPPORTBEARING
3025878	SHAFT, FUEL PUMP DRIVE
43468	PIN, GROOVE
AK4036SS	HOSE, FLEXIBLE
S10211	TEE, PLAIN ADAPTER
3039222	ELBOWMALE UNION
3011896	HOUSING, FLYWHEEL
3302180	GASKET, BREATHER
255183	ELEMENT, BREATHER
254608	GASKET, BREATHER
255815	GASKET, BREATHER
255816	WASHER, SPRING
257419	ELEMENT, BREATHER
3026486	COVER, SPRING PACK
BM76454	DAMPER, FUEL PUMP
3079605	COVER & BUSHING ASEMBLY
3070730	PLUNGERGOVERNOR
S145C	SCREW, HEXAGON HEAD CAP
3034435	FLYWHEEL
3017398	SUPPORT, RADIATOR
3013777	CONNECTIONOIL TRANSFER
3022977	COVERLUB OIL COOLER
3022971	COVER, LUB OIL COOLER
3022961	PLUG, DRAIN
BM53120	GEAR, LUB OIL PUMPING
BM98341	COVER, LUB OIL PUMP
180796	COVER, LUB OIL PUMP
3009916	BODY, LUBRICATING OIL PUMP
3015541	PANOIL
3040811	PLUG, THREADED
218017	CONNECTIONOIL SUCTION
189761	ROD, ENGINE CONNECTING

3037413	PISTON, ENGINE
AR11930	SET, PISTON RING
218732	RING, OIL PISTON
AR11171	HEAD, CYLINDER
AR45632	CROSSHEAD, VALVE
215870	CROSSHEAD, VALVE
AR45633	CROSSHEAD
215871	CROSSHEAD, VALVE
3056505	HEAD, CYLINDER
180102	HEAD, CYLINDER
212217	INSERT, VALVE
212940	INSERT, VALVE
AR9633	SHAFT & PLUG, ROCKER LEVE
AR12190	LEVER, ROCKER
194010	SCREW, HEXAGON HEAD CAP
3011088	DATAPLATE
3017393	MOTOR, STARTING
S105A	SCREW, HEXAGON HEAD CAP
3014617	CONNECTIONEXH COLLECTOR
3025820	BRACKET, EXH COL CNN
3038088	TUBEWATER TRANSFER
AR12849	TUBE, WATER TRANSFER
3017397	BRACE, RADIATOR
3033953	TUBE, WATER TRANSFER
3017395	SUPPORT, RADIATOR
3017396	SUPPORT, RADIATOR
3066146	COOLER, OIL
AR12966	PUMP, WATER