



Ben Liu

Mobile/ WeChat: +86-13705041170

FUZHOU SUNSHINE MACHINERY CO.,LTD

NO.6 Gulouyuan, Juyuanzhou Industrial Zone,

Jinshan Development Area, Fuzhou, Fujian, China.

Email: sales@primepowergenset.com

<http://www.gensetengine.com>

### Cummins ISF3.8 engine Spare parts catalog

Part number	Description
LF9238	OIL FILTER
5316116	TUBE,FUEL SUPPLY
3932445	CONNECTOR,MALE
5264571	GASKET,OIL DRAIN
5287021	TENSIONER,BELT
4934344	GASKET,OIL PAN
3978818	Bearing, Main (Upper: Standard)
4076930	SWITCH, PRESSURE
2872277	SENSORPOSITION
3963983	WASHERSEALING
3922794	SEAL,O RING
4076493	SENSORPRESSURE
3940735	VALVE, INTAKE
145536	SEAL, O RING
178957	INDICATORRESTRICTION
3910739	BEARINGBALL
3927692	NUTHEAVY HEXAGON
4934419	GEAR, CRANKSHAFT
3802967	VALVE,EXHAUST
3923044	RETAINERFAN HUB
7067	DOWELPIN
2830444	GASKETEXHAUST MANIFOLD
2830977	SEAL,O RING
3007632	PLUGEXPANSION
3008468	PLUGPIPE
3008469	PLUGPIPE
2830411	SCREWHEX FLANGE HEAD CAP
2831066	COLLAR, SHAFT

2881748	Kit, Engine Piston
3035960	RINGRETAINING
3088162	SCREWHEXAGON HEAD CAP
3089016	SCREWHEX FLANGE HEAD CAP
3089188	SCREWHEX FLANGE HEAD CAP
3089240	SEAL,O RING
3089567	PLUGTHREADED
3089568	PLUGTHREADED
3090126	SEALO RING
3093730	SCREW,HEX FLANGE HEAD CAP
3093956	SCREWHEX FLANGE HEAD CAP
3094032	SCREWHEX FLANGE HEAD CAP
3279043	NUTHEXAGON FLANGE
3287426	CONNECTOR, QCK DISCONNECT
3287433	CONNECTORQCK DISCONNECT
3519163	SCREWDRIVE
3527619	DATAPLATE
3528221	RINGRETAINING
3535215	CLAMPHOSE
3538926	DOWEL, PIN
3538930	NUT, LOCK
3538931	BOLT, CARRIAGE
3538932	CLAMP, V BAND
3538933	SEAL, O RING
3538934	RING, RETAINING
3539062	SCREW, CAPTIVE WASHER CAP
3678603	SEAL,O RING
3679118	SCREWHEX FLANGE HEAD CAP
3679139	SEAL,O RING
3867646	SEAL, O RING
3900068	DOWELRING
3900589	NUTHEXAGON FLANGE
3900627	SCREWHEX FLANGE HEAD CAP
3900629	SCREWHEX FLANGE HEAD CAP
3900630	SCREWHEX FLANGE HEAD CAP
3900631	SCREWHEX FLANGE HEAD CAP
3900632	SCREW,HEX FLANGE HEAD CAP
3900633	SCREWHEX FLANGE HEAD CAP
3900678	SCREWHEX FLANGE HEAD CAP
3900679	SCREWHEX FLANGE HEAD CAP
3900956	PLUGEXPANSION
3969562	Bearing, Connecting Rod (Standard)
3901445	SCREW,HEX FLANGE HEAD CAP
3901865	SCREWHEX FLANGE HEAD CAP
3902023	SCREWHEX FLANGE HEAD CAP

3902112	SCREWHEX FLANGE HEAD CAP
3902460	SCREW,HEX FLANGE HEAD CAP
3902663	SCREWHEX FLANGE HEAD CAP
3903112	SCREWHEX FLANGE HEAD CAP
3903464	SCREWHEX FLANGE HEAD CAP
3903834	SCREWTWELVE POINT CAP
3904181	PLUGTHREADED
3904483	PINROLL
3905427	GEARFLYWHEEL RING
3906391	SCREWSOCKET HEAD CAP
3910248	PLUGO RING
3910260	SEALO RING
3910495	SCREWHEX FLANGE HEAD CAP
3913034	SCREWHEX FLANGE HEAD CAP
3913366	SCREWHEX FLANGE HEAD CAP
3913638	SCREWHEX FLANGE HEAD CAP
3914177	SCREWHEX FLANGE HEAD CAP
3917995	CLAMPHOSE
3918153	SCREWHEX FLANGE HEAD CAP
3919359	ISOLATORVIBRATION
3920691	RINGRETAINING
3920706	PLUGEXPANSION
3920854	SCREWCAPTIVE WASHER CAP
4940183	CONNECTOR, MALE
3925402	SCREWHEX FLANGE HEAD CAP
3925883	SCREWHEX FLANGE HEAD CAP
3927948	SCREW,HEX FLANGE HEAD CAP
3928624	SEALO RING
3929777	NUTHEXAGON FLANGE
3932475	GASKETTURBOCHARGER
3932484	WASHERSEALING
3932520	RINGOIL PISTON
3934047	PIN,PISTON
3935644	BEARINGROLLER
3935646	SHAFTACCESSORY DRIVE
3935945	
3935946	SOCKET, ROCKER LEVER
3936365	VALVEPRESSURE RELIEF
3937613	CLAMPSRING HOSE
3939719	INSERT,VALVE
3939720	INSERT,VALVE
3939721	INSERT, VALVE
3940123	COLLET,VALVE
3942730	BALL, ROCKER LEVER
3943198	RETAINERVEALVE SPRING

3943447	SET, PISTON RING
3943449	INSERTVALVE
3943450	INSERT, VALVE
3944308	SEALO RING
3944593	SCREWHEX FLANGE HEAD CAP
3944655	SCREWSTUDED FLANGE CAP
3945252	SPACERMOUNTING
3947269	SEALO RING
3947270	SEALO RING
3947759	TAPPETVALVE
3948477	MANIFOLDEXHAUST
3949326	DOWELRING
3949419	STUDDOUBLE END PLAIN
3954099	CAMSHAFT
3954510	STUD
3954616	DOWELRING
3954829	SEAL, THERMOSTAT
3955152	GEARCAMSHAFT
3955153	GEARFUEL PUMP
3955393	SEALVALVE STEM
3957290	VALVECHECK
3957849	SCREWSOCKET HEAD CAP
3959128	SCREWRKR LEVER ADJUSTING
3963988	WASHERSEALING
3964817	SCREWBANJO CONNECTOR
3966586	FLYWHEEL
3966587	FLYWHEEL
3966976	SCREWHEX FLANGE HEAD CAP
3967353	TAG, INSTRUCTION
3968563	SEAL,OIL
3971371	TUBE, BREATHER
3971615	MOTORSTARTING
3973834	THERMOSTAT
3974030	BELT, V RIBBED
5317174	VALVE, PRESSURE RELIEF
3974765	CONNECTORQCK DISCONNECT
3974847	GEARACCESSORY DRIVE
3975770	TEESTREET PIPE
3976834	TENSIONERBELT
3977913	SET, LUB OIL COOLER GASKET
3979211	MANIFOLDEXHAUST
4010519	SEALO RING
4954905	SENSOR, TEMPERATURE
4089258	SETPISTON RING
4307346	

4309105	
4890634	NUTREGULAR HEXAGON
5338295	SEALOIL
4891179	SCREWCONNECTING ROD CAP
4891385	WASHERSEALING
4892795	BEARING,CON ROD (010)
4892796	Bearing, Connecting Rod (0,50 mm)
4896355	RETAINERCOVER
4898590	CLAMPV BAND
4903110	SCREWHEX FLANGE HEAD CAP
4903482	SEALO RING
4921322	SENSOR,PRS TEMPERATURE
4921574	SEAL, O RING
4928599	SEAL,O RING
4928699	SHAFT,ROCKER LEVER
4929128	
4932258	
4932260	
4932375	BEARING,CON ROD (010)
4932376	Bearing, Connecting Rod (0,50 mm)
4932790	SCREW,SOCKET HEAD CAP
4933777	PIPE,AIR TRANSFER
4934749	SEAL,O RING
5303406	SPRING,VALVE
4937308	NOZZLE,PISTON COOLING
4937597	ACTUATOR,ETR FUEL CONTROL
4938765	SEAL,OIL
4938989	CLAMP,V BAND
4940117	SCREW,HEX FLANGE HEAD CAP
4940584	SEAL,GROMMET
4941699	TUBE, INJECTOR FUEL SUPPLY
4941701	TUBE, INJECTOR FUEL SUPPLY
4943051	GASKET,CYLINDER HEAD
4943259	TUBE, WATER BYPASS
4944374	SEAL, O RING
4944917	
4945794	STIFFENER,CYLINDER BLOCK
4946237	CAP,FILLER
4946239	Gasket, Valve Cover
4946649	ADAPTER, FUEL CONNECTOR
4947067	GEAR,LUB OIL PUMPING
4947068	GEAR,LUB OIL PUMPING
4947069	VALVE,PRESSURE RELIEF
4947071	
4947072	

4947073	
4947075	
4947079	HOSE, MOLDED
4947583	MANIFOLD, FUEL
4948504	
4948505	
4948506	Bearing, Crankshaft Thrust
4948508	Bearing, Connecting Rod (Standard)
4948509	Bearing, Connecting Rod (Standard)
4955158	TURBOCHARGER,HX35 WASTE GA
4978357	SEAL, O RING
4980089	ADAPTER, FILTER HEAD
4980332	SCREW, HEXAGON FLANGE HEAD CAP
4980605	GASKET,LUB OIL PUMP
4983020	GASKET,INTAKE MANIFOLD
4983288	
4988630	CAMSHAFT
4990276	GASKET,LUB OIL CLR HSG
4990291	CORE,COOLER
4992623	Connection, Water Outlet
4993383	HEATER, ENGINE
4994692	*
4995185	SEAL,D RING
5254599	PULLEY,IDLER
5255538	Gasket, Exh Out Connection
4890635	WASHER PLAIN (4890635)
5256541	GASKET, OIL PAN
5256607	PUMP, FUEL
5256608	PUNP, FUEL
5256873	FITTING, ORIFICE
5257072	SEAL,O RING
5257264	HOUSING, GEAR
5257364	
5257996	
5284441	HOUSING, OIL COOLER
5258274	
5258888	
5258889	MODULE ELECTRONIC CONTROL
5258931	SUPPORT,CAMSHAFT THRUST
5258983	TUBE,INJECTOR FUEL SUPPLY
5259121	TUBE, BREATHER
5259161	BREATHER,OIL SEPARATOR
5259562	PLUG, THREADED
5259563	SEAL, O RING
5259582	CAMSHAFT

5259583	RING SPEED INDICATOR
5259689	MANIFOLD,FUEL
5259951	
5259952	LEVER,ROCKER
5259953	
5259981	
5297641	SENSOR,PRESSURE
5260717	HARNESS,ETR CNT MDL WRG
5261019	COVER, VALVE
5261020	COVER,VALVE
5261256	Cylinder Block
5261375	
5261376	CRANKSHAFT, ENGINE
5261587	SEAL,O RING
5262804	HEATER,ENGINE
5262990	BODY,LUBRICATING OIL PUMP
5302892	PUMP, LUBRICATING OIL
5333035	PUMP,WATER
5263797	MOTOR,STARTING
5263842	HOSE,PLAIN
5265146	CONNECTOR, QUICK DISCONNECT
5265148	CONNECTOR, QUICK DISCONNECT
5265250	SUPPORT, ALTERNATOR
5265251	CONNECTION, TURBOCHARGER OIL DRAIN
5313904	ELBOW, MALE ADAPTER
5265369	PULLEY,IDLER
5266066	GASKET,ACC DRIVE COVER
5267177	PULLEY, AIR COMPRESSOR
5268950	COMPRESSOR, AIR (1 CYL)
5269275	HOUSING, FLYWHEEL
5269713	CONNECTOR,MALE
5269736	BRACKET, IDLER PULLEY
5269952	TUBE, CPR WATER INLET
5270253	TUBE, FUEL DRAIN
5272007	ROD,PUSH
5272634	ALTERNATOR
5273267	TUBE,FUEL SUPPLY
5273283	TUBE, FUEL SUPPLY
5282126	
5282268	HOSE, FLEXIBLE
5283169	
5283275	INJECTOR
5284290	Adapter, Hydraulic Pump
5285750	HOSE, FLEXIBLE
5288373	SEAL, O RING

5288374	SEAL, INJECTOR
5288830	
5289407	HARNESS, WIRING
5289696	
5289698	BLOCK,CYLINDER
5289774	AID, STARTING
5298256	BUSHING
5302030	
5302031	
S16022	BEARING,BALL
3528414	NUT, REGULAR HEXAGON JAM
5270903	DATAPLATE
5259561	PLUG, THREADED
3947729	BRACE, TUBE
5283162	DECAL
5284980	DOWEL, RING
4932259	CAP, MAIN BEARING
4932261	CAP, MAIN BEARING
4937957	SLEEVE, SPLINE COUPLING
5257263	HOUSING, GEAR
4947074	PLUG, THREADED
4983283	SCREW, FLAT HEAD CAP
5265147	CONNECTOR, QCK DISCONNECT
5283005	TUBE, CPR WATER OUTLET
5283602	CLAMP, TUBE
5282269	HOSE, FLEXIBLE
5282444	COMPRESSOR, AIR
5265257	ELBOW, MALE ADAPTER
5265258	ELBOW, MALE ADAPTER
5265261	NUT, REGULAR HEXAGON JAM
5282270	HOSE, MOLDED
5283632	UNION, MALE
5265263	UNION, MALE
3978479	PLATECLAMPING
5262492	STUD, DOUBLE END PLAIN
5284291	ADAPTER, HYDRAULIC PUMP
5267176	SUPPORT, ALTERNATOR
5270280	SUPPORT, FAN
4941319	SUPPORT, FAN
5270279	HUB, FAN
5283168	HEAD, FUEL FILTER
5266593	TUBE, FUEL SUPPLY
4942453	BRACE, TUBE
4940675	SCREW, CAPTIVE WASHER CAP
5272693	MANIFOLD, AIR INTAKE



4982770	BRACKET, LIFTING
5259558	PLUG, THREADED
5259560	SEAL, O RING
5260603	PLUG, THREADED
5283271	TUBE, OIL GAUGE
5288831	DIPSTICK
5288832	DIPSTICK
5270298	BRACE, TUBE
5260019	PLUG, O RING
5284069	DATAPLATE
5257363	BUSHING
4989162	ROD, ENGINE CONNECTING
3959079	RING, COMPRESSION PISTON
4940194	SCREW, HEX FLANGE HEAD CAP
5258275	HEAD, CYLINDER
2842031	HOUSING, TURBINE
3768401	CORE, TURBOCHARGER
3773167	ACTUATOR, TURBOCHARGER
2836380	HOSE, PLAIN
3773725	HOUSING, COMPRESSOR
3594818	COUPLING, ELBOW HOSE
2838907	END, ADJUSTING LINK
4940179	CROSSHEAD, VALVE
5259508	SUPPORT, ROCKER LEVER
5259949	LEVER, ROCKER
5259945	LEVER, ROCKER
5259950	LEVER, ROCKER
5259946	LEVER, ROCKER
5253733	CONNECTION, TUR OIL DRAIN
5265252	CONNECTION, TUR OIL DRAIN
4943258	TUBE, WATER BYPASS
3397506	SCREW, HEX FLANGE HEAD CAP
3957139	TUBE FUEL SUPPLY