



Ben Liu

Mobile/ WeChat: +86-13705041170

FUZHOU SUNSHINE MACHINERY CO.,LTD

NO.6 Gulouyuan, Juyuanzhou Industrial Zone,  
Jinshan Development Area, Fuzhou, Fujian, China.

Email: sales@primepowergenset.com

<http://www.gensetengine.com>

## Cummins QSK45 engine Spare parts catalog

Part number	Description
LF9050	Oil Filter
3647996	CABLE
3643839	VALVECHECK
3643984	BEARING,CON ROD (STD)
4066277NX	SUPPORT, WATER PUMP HHP
4066057	SHAFTHYD PUMP DRIVE
4100624	SEAL,OIL 3649551
3644387	SCREW,HEX FLANGE HEAD CAP
3347937	SEALO RING
3922794	SEAL,O RING
3076489	THERMOSTAT
212161	ORING
3046200	SPIDER,JAW COUPLING
FS1006	FUIL WATER (original) FS1006
3090450	RING,OIL PISTON
3090460	RING,COMPRESSION PISTON
3081489	SEALOIL
S2268	FITTING,GREASE
S2286	DRIVE SCREW
S306	
S607	WASHER,LOCK
S626	WASHER
S962E	DRAINCOCK
105375	NAMEPLATE
106221	CLIP
107460	CLIP
118226	SCREW,SOCKET HEAD CAP

129768	SPRINGVALVE
129839	COVER,SHUTOFF VALVE
129888	SEALRECTANGULAR RING
131026	SEALO RING
131584	PIN,ROLL
169834	CLIP
173086	GASKET,INJECTOR
3900634	SCREWHEX FLANGE HEAD CAP
196057	DISCVALVE
201351	CLAMP,WIRE TIE
203933	PLUGEXPANSION
205401	PLUGEXPANSION
205976	RING,RETAINING
206090	RINGRETAINING
206091	GEARENGINE BARRING
206195	SLEEVE,SPLINE COUPLING
206196	RINGRETAINING
206198	SEAL, OIL
206709	TUBEWATER TRANSFER
8306	PINROLL
206904	KEY,PLAIN WOODRUFF
209773	CLAMP,HOSE
60985	HOSE,PLAIN
64709	SPACERMOUNTING
67950	CLIP
68152	CLIP
68189	CLIP
68425	CLIP
68445	PIN, GROOVE
69465	CLIP
69519	DOWELPIN
69558	DOWELPIN
70415	SEAL,O RING
70700	SPRINGFUEL PUMP TORQUE
3007635	PLUGEXPANSION
3010410	COVERACCESS HOLE
3014668	SEALO RING
3018924	WIRE,GROUND
3021420	SOLENOID,FUEL PUMP
3021618	PLUNGERPRS REGULATOR
3028291	SEAL,O RING
3028552	BODYBYPASS VALVE
3030207	RETAINER,DIPSTICK
3033629	PIN,ROLL
3033800	WASHER,PLAIN

3035026	SEAL,O RING
3035083	ISOLATOR,VIBRATION
3035084	ISOLATOR,VIBRATION
3035228	SEALO RING
3037537	SEAL,O RING
3040815	PLUGTHREADED
3040817	SEALO RING
3040818	PLUGTHREADED
3042542	SEAL,O RING
3042619	NIPPLECOUPLING
3045986	SEAL,O RING
206092	SPRINGCOMPRESSION
206405	COVERHYD PUMP FLANGE
216187	SEAL,O RING
2872254	SENSOR,PRESSURE
2880913	CONNECTION,WATER TRANSFER 3644834
2881811	VALVE,EXHAUST
3002957	CLAMPRETAINING
3007512	SEALO RING
3016306	CLAMPV BAND
3028349	SEALO RING
3030487	SPACERBEARING
3040816	PLG,THD
3040819	PLG,THD
3042620	NIPPLE,COUPLING
3043487	CLAMPHOSE
3045012	PLUGINJECTOR ORIFICE
3045045	PLUGINJECTOR ORIFICE
3046287	SPACERMOUNTING
3046943	SEAL O RING
3056508	SCREWDRIVE
3062329	CLAMPWIRE TIE
3063166	SEAL,O RING
3066855	NAMEPLATE
3066914	SEAL,O RING
206808	SEAL,GROMMET
3071719	SHIMFUEL PUMP GOVERNOR
3072853	SEAL,O RING
3075658	SEAL,O RING
3079743	DOWELRING
3080223	CAPFUEL PUMP FILTER
3081514	BUSHING
3081534	COLLET,VALVE
3082121	BEARINGTHRUST
3082132	GASKETCOVER PLATE

3082315	GASKETEXHAUST MANIFOLD
3082340	BEARINGMAIN STD
3082346	BEARINGMAIN STD
3082358	SEALO RING
3082415	RINGRETAINING
3082416	SHAFTCAM FOLLOWER
3082427	SCREW HEX FLANGE HEAD CAP
3082437	BEARINGCAMSHAFT THRUST
3082438	DOWELRING
3082440	SCREW,HEX FLANGE HEAD CAP
3085709	SEAL,O RING
3085972	BUSHING
3085973	BUSHING
3085978	BALLROCKER LEVER
3085980	SOCKETROCKER LEVER
3088386	SHIM
3089016	SCREWHEX FLANGE HEAD CAP
3089019	SEAL,O RING
3089023	PLUGTHREADED
3089053	CONNECTIONWATER INLET
3089056	SEAL,WATER PUMP
3089081	GEAR,CAMSHAFT
3089083	SHAFTIDLER
3089084	SHAFTIDLER
3089087	GEAR,IDLER
3089091	GEAR,IDLER
3089093	ADAPTERCRANKSHAFT
3089100	GEARACCESSORY DRIVE
3089104	SHAFTIDLER
3089105	GEAR,IDLER
3089121	GEAR,IDLER
3089127	SCREWHEX FLANGE HEAD CAP
3089128	SCREWHEX FLANGE HEAD CAP
3089173	BUSHING
3089177	SOCKETROCKER LEVER
3089192	SCREWHEX FLANGE HEAD CAP
3089193	SCREWTWELVE POINT CAP
3089194	SCREWTWELVE POINT CAP
3089201	DOWELRING
3089232	SCREWHEX FLANGE HEAD CAP
3089234	SCREWHEX FLANGE HEAD CAP
3089238	PLUGTHREADED
3089240	SEAL,O RING
3089247	GASKETCONNECTION
3089251	RINGRETAINING

3089259	SCREWHEX FLANGE HEAD CAP
3089261	GASKETWATER PUMP
3089262	GASKETWATER PUMP
3089271	NUTLOCK
3089281	RETAINERGEAR
3089296	SCREWHEX FLANGE HEAD CAP
3089298	HEADCORROSION RESISTOR
3089299	HEADCORROSION RESISTOR
3089314	SHAFTIDLER
3089316	SCREWHEX FLANGE HEAD CAP
3089318	GASKETFLANGE
3089319	GASKETFLANGE
3089320	RETAINERGEAR
3089321	SPACERMOUNTING
3089324	SCREWHEX FLANGE HEAD CAP
3089327	DOWELPIN
3089328	SCREWHEX FLANGE HEAD CAP
3089330	PLUNGERPRS REGULATOR
3089378	DOWELPIN
3089379	DOWELDIAMOND
3089392	SEALO RING
3089407	WASHERPLAIN
3089409	BUSHING
3089412	PLUGORIFICE
3089413	RETAINERSHAFT
3089415	RETAINERSHAFT
3089454	BUSHING
3089498	KEYSQUARE
3089499	SCREW,HEX FLANGE HEAD CAP
3089501	SEAL,RECTANGULAR RING
3089514	PLUGO RING
3089555	WASHERPLAIN
3089563	SCREWHEX FLANGE HEAD CAP
3089570	SPACERCRANKSHAFT
3089592	SCREWHEX FLANGE HEAD CAP
3089715	SHAFTROCKER LEVER
3089763	COVEROIL PAN
3089765	CLAMP,V BAND
3089886	SEALRECTANGULAR RING
3089891	SEALRECTANGULAR RING
3089955	GASKETCONNECTION
3090007	SCREWRKR LEVER ADJUSTING
3090008	NUTREGULAR HEXAGON JAM
3090010	ROLLER,CAM FOLLOWER
3090400	UNIONMALE

3090495	COVERVALVE
3090769	SCREEN, FILTER
3093828	NUTHEXAGON FLANGE
3093936	SCREWHEX FLANGE HEAD CAP
3093937	SCREWHEX FLANGE HEAD CAP
3093957	SCREWHEX FLANGE HEAD CAP
3100308	RES,CRN
3098771	MODULEELECTRONIC CONTROL
3171103	LINKADJUSTING
3171156	HOSEELBOW
3171287	GASKETCONNECTION
3171320	CONNECTIONWATER OUTLET
3171499	GASKETRKR LEVER HOUSING
3171693	SCREWHEX FLANGE HEAD CAP
3171695	GASKETCONNECTION
3171696	TUBEFUEL TRANSFER
3171711	CLAMPTUBE
3171722	UNIONMALE
3171818	UNIONMALE
3171839	TUBECOUPLING
3171868	TEEMALE UNION
3171963	WASHERSEALING
3172018	IMPELLERWATER PUMP
3175573	RINGRETAINING
3175623	CLAMPT BOLT
3177040	SHAFTSHUTOFF VALVE
3179035	GASKET,WTR TRF CONNECTION
3200162	SPACERMOUNTING
3202117	GASKETCONNECTION
3251297	NUTREGULAR HEXAGON JAM
3278093	PLUGPIPE
3278480	SCREWHEX FLANGE HEAD CAP
3328589	SEAL,O RING
3330202	SEALO RING
3330600	ACTUATOR,ETR FUEL CONTROL
3330601	ACTUATORETR FUEL CONTROL
3330658	BODYCONTROL VALVE
3331752	RETAINER,VALVE SPRING
3331818	ELBOWMALE UNION
3331821	GASKETFUEL PUMP
3331834	SEALRECTANGULAR RING
3331850	TUBEWATER TRANSFER
3331855	NUTTUBE
3331872	ELBOWMALE UNION
3331873	UNIONMALE

3331875	UNIONMALE
3331881	COUPLINGREDUCING PIPE
3331924	GASKETTURBOCHARGER
3331969	GASKETFRONT COVER
3331970	GASKETGEAR COVER
3331976	SPRINGCOMPRESSION
3332001	COVERWATER HEADER
3332002	COVERWATER HEADER
3332036	SHAFT,WATER PUMP
3332083	GASKETOIL PAN ADAPTER
3332085	GASKETOIL PAN COVER
3332136	UNIONMALE
3646085	GEAR,CAMSHAFT
3332142	CONNECTIONWATER TRANSFER
3332143	GASKETCONNECTION
3332147	CLAMPRETAINING
3332148	PLUGO RING
3332157	GASKETTHERMOSTAT HOUSING
3332158	CONNECTION,WATER INLET
3332159	CONNECTIONWATER INLET
3332160	SEAL,O RING
3332164	CLAMPV BAND
3332174	SCREWHEX FLANGE HEAD CAP
3332175	SCREWHEX FLANGE HEAD CAP
3332183	GASKET,CONNECTION
3332234	SCREWHEX FLANGE HEAD CAP
3332237	SLEEVE
3332242	SCREWHEX FLANGE HEAD CAP
3332291	GASKETROCKER LEVER COVER
3332297	GASKETACC DRIVE SUPPORT
3332298	GASKETHYDRAULIC PUMP
3332299	GASKETWATER PUMP
3332314	CONNECTIONWATER INLET
3332325	DRIVEACCESSORY
3332326	HOUSINGENGINE BARRING
3332376	GEARFLYWHEEL RING
3332383	SHAFTBARRING
3332391	GASKET,WATER PUMP
3336566	NUTLOCK
3336571	NUTLOCK
3347906	ACTUATORETR FUEL CONTROL
3347939	SEALO RING
3348444	VALVECHECK
3348458	BODYPRS REGULATOR VALVE
3348583	GASKETPRS RLF VALVE BODY

3348663	CLAMP INJECTOR
3348703	SEALO RING
3393258	ELBOWMALE ADAPTER
3408282	SEAL VALVE STEM
3408345	SENSOR,TEMPERATURE
3408471	SENSOR,SPEED
3408526	HARNESSWIRING
2894868	SENSORPRESSURE
4306987	SENSORPRESSURE
3408566	SENSORPRESSURE
3410392	ELBOWMALE UNION
3410686	SUPPORTTHM HOUSING
3410730	SCREWHEX FLANGE HEAD CAP
3649838	GASKETWATER HEADER COVER
3410897	ROD,PUSH
3410944	HOSEFLEXIBLE
3411085	BRACETUBE
3411232	BRACKET LIFTING
3417238	SEALO RING
3420833	STUD
3600596	SCREWTWELVE POINT CAP
3627412	CLIP
3627695	SEAL,O RING
3627961	SEAL,THERMOSTAT
3628411	COVERSTARTER FLANGE
3628553	BRACETUBE
3628554	BRACE,TUBE
3628585	BRACE,TUBE
3628604	PLUG,PIPE
3628605	PLUG,PIPE
3629168	PLUG,EXPANSION
3629452	CLIP
3629454	CLIP
3630144	PULLEY,ALTERNATOR
3630248	CONNECTIONWATER OUTLET
3630740	SEAL,O RING
3630969	GASKET,LUB OIL CLR HSG
3631471	ADAPTERO RING
3631921	COVERWATER TRANSFER
3632840	SEALO RING
3633971	CLAMPT BOLT
3633972	CLAMP,T BOLT
3641131	CLAMP,T BOLT
3634008	BRACKETCONNECTION
3634019	PLUGEXPANSION



3634057	ADAPTERPLAIN PIPE
3634708	DRAINCOCK
3635054	BRACKETWATER TUBE
3635057	BRACKETWATER TUBE
3635099	BRACKETWATER TUBE
3635178	TUBEWATER TRANSFER
3635179	TUBEWATER TRANSFER
3635180	TUBEWATER TRANSFER
3635181	TUBE,WATER TRANSFER
3635341	TUBEAIR
3635455	SPRINGVALVE
3635711	BODY,WATER PUMP
3635810	PUMP,WATER
3635814	HOUSINGGEAR
4332517	NUTHEXAGON FLANGE
3636362	CONNECTIONOIL TRANSFER
3636541	CONNECTIONAIR CROSSOVER
3636819	MOTORSTARTING
3637072	HARNESSETR CNT MDL WRG
3637074	HARNESSETR CNT MDL WRG
3637780	TEEMALE UNION
3637870	GASKETFUEL CONNECTION
3637969	PRIMER,ENGINE LUBRICATING
3638012	TENSIONERBELT
3638060	MANIFOLDFUEL
3638061	MANIFOLDFUEL
3638064	TUBEFUEL TRANSFER
3638065	TUBEFUEL TRANSFER
3638094	SCREWBANJO CONNECTOR
3638095	HOSEFLEXIBLE
3638101	SEAL,O RING
3638102	SEAL,O RING
3638150	PLATECLAMPING
3638326	SEAL,DUST
3638327	SEAL,DUST
3638497	HOSEFLEXIBLE
3638582	DRAINCOCK
3638583	DRAINCOCK
3638747	HEAD,CYLINDER
3639048	HOSEFLEXIBLE
3639051	HOSEFLEXIBLE
3639064	BRACKETALTERNATOR
3639283	SCREWHEX FLANGE HEAD CAP
3639414	ADAPTEROIL PAN
3639540	BRACKETPUMP

3639541	BRACKETPUMP
3639657	SPACERMOUNTING
3639728	SUPPORTFREON COMPRESSOR
3639983	REGULATOR
3640332	BRACKETCONNECTION
3640333	BRACKETCONNECTION
3640536	NOZZLE,PISTON COOLING
3640540	NOZZLE,PISTON COOLING 3651209
3640543	SCREW,HEX FLANGE HEAD CAP
3640776	SEALTAMPER PROOF
3640781	BLOCKCYLINDER
3641125	SCREW,HEX FLANGE HEAD CAP
3641130	CLAMP,T BOLT
3641133	CLAMPT BOLT
3641535	CROSSHEAD,VALVE
3641960	CORE,COOLER
3678603	SEAL,O RING
3678606	SEAL,O RING
3678610	PLUGTHREADED
3678611	PLUGTHREADED
3678786	SEAL,O RING
3678791	PLUG,THREADED
3678838	PLUGTHREADED
3678846	SEAL,O RING
3678873	PLUGTHREADED
3678912	SEAL,O RING
3678921	PLUGTHREADED
3678923	PLUGTHREADED
3678925	SEAL,O RING
3679139	SEAL,O RING
3680057	NUTREGULAR HEXAGON JAM
3682701	ELBOW,MALE UNION
3804892	VALVE,EXHAUST
3865398	SEALO RING
3867393	SCREENFILTER
3867561	SENSOR,BLOWBY FLOW 5461522
3867640	SEALO RING
3867651	SEALO RING
4307148	SEAL,INJECTOR
3867737	VALVEPRESSURE RELIEF
3900257	DOWELPIN
3900589	NUTHEXAGON FLANGE
3900626	SCREWHX FLANGE HEAD CAP
3900629	SCREWHX FLANGE HEAD CAP
3900630	SCREWHX FLANGE HEAD CAP

3900637	SCREWHEX FLANGE HEAD CAP
3900679	SCREWHEX FLANGE HEAD CAP
3901249	SCREWHEX FLANGE HEAD CAP
3901445	SCREW,HEX FLANGE HEAD CAP
3901865	SCREWHEX FLANGE HEAD CAP
3901937	SCREWHEX FLANGE HEAD CAP
3902114	SCREWHEX FLANGE HEAD CAP
3902451	SCREWHEX FLANGE HEAD CAP
3902460	SCREW,HEX FLANGE HEAD CAP
3902662	NUTHEXAGON FLANGE
3903105	SCREWHEX FLANGE HEAD CAP
3903112	SCREWHEX FLANGE HEAD CAP
3903210	NUTHEXAGON FLANGE
3903464	SCREWHEX FLANGE HEAD CAP
3903990	SCREWHEX FLANGE HEAD CAP
3904446	SCREWHEX FLANGE HEAD CAP
3904987	SCREWHEX FLANGE HEAD CAP
3905372	SCREWHEX FLANGE HEAD CAP
3906216	NUTHEXAGON FLANGE
3910495	SCREWHEX FLANGE HEAD CAP
3910901	SCREWHEX FLANGE HEAD CAP
3913372	SCREWHEX FLANGE HEAD CAP
3913994	SEALO RING
3914177	SCREWHEX FLANGE HEAD CAP
3914407	SCREWHEX FLANGE HEAD CAP
3920447	SCREWHEX FLANGE HEAD CAP
3922863	SCREWHEX FLANGE HEAD CAP
3944593	SCREWHEX FLANGE HEAD CAP
3963982	WASHER,SEALING
3991084	NAMEPLATE
4000714	GASKETAFTERCOOLER COVER
4000837	SCREW,HEX FLANGE HEAD CAP
4000844	BRACETUBE
4000866	TUBEWATER BYPASS
4000872	TUBEWATER INLET
4000897	PLATECOVER
4000898	BRACKETPUMP
4001044	HOSE,HUMP
4001096	DOWELPIN
4001156	BRACE,TUBE
4001224	TUBE,FUEL DRAIN
4001228	TUBE,FUEL DRAIN
4001248	NUTLOCK
4001327	MANIFOLDAIR INTAKE
4001328	MANIFOLDAIR INTAKE

4001378	SCREW,HEX FLANGE HEAD CAP
4001416	PINPISTON
4001432	TUBEWATER INLET
4001435	CAMSHAFT
4001436	CAMSHAFT
4001506	HOUSINGFLYWHEEL
4001756	VALVEPRESSURE REGULATOR
4002080	VALVEPRESSURE REGULATOR
4006223	GASKETFLYWHEEL HOUSING
4007034	DAMPER,VISCOUS VIBRATION
4007074	ELBOWMALE UNION
4007165	GASKETGEAR HOUSING
4007207	CONNECTORMALE
4007216	BRACKETCONNECTION
4007226	SCREWHX FLANGE HEAD CAP
4007287	HARNESSWIRING
4380769	SCREWTWELVE POINT CAP
4007569	BEARINGTHRUST
4007584	CLAMPU BOLT
4007602	NUTLOCK
4007653	PANOIL
4007741	BUSHING
4010519	SEALO RING
4010577	SEALO RING
4015784	BELTV RIBBED
4015803	TUBELUB OIL SUPPLY
4015993	HUBJAW COUPLING
4016407	TUBEWATER BYPASS
4016444	ADAPTERREDUCING
4016468	DOWELPIN
4016660	SHIM
4016661	SHIM
4016700	SPACERMOUNTING
4016906	ADAPTERO RING
4016939	BRACKETAIR COMPRESSOR
4017050	COVERPROTECTIVE
4017073	CONNECTIONWATER TRANSFER
4017160	DAMPERVERSICOUS VIBRATION
4017163	FLANGE
4017188	BRACKETOIL TUBE
4017212	TEEMALE UNION
4017236	ADAPTERO RING
4017238	POINTERTIMING
4017240	PLUG,EXPANSION
4017292	SEALD RING

4017295	COVERPROTECTIVE
4017431	FLYWHEEL
4017508	TUBEAIR BALANCE
4017529	SHAFTFUEL PUMP DRIVE
4017621	PLUG,EXPANSION
4017622	PLUG,EXPANSION
4024797	SETMAIN BEARING STD
4025070	VALVE,EXHAUST
4061677	HUBJAW COUPLING
4065229	BRACKETFUEL PLUMBING
4065355	HOSE,PLAIN
4065496	ELBOWMALE UNION
4065566	THERMOSTAT 3651379
4065603	BRACKETFUEL PLUMBING
4065627	PLUGDRIVE
4065633	LEVERROCKER
4065636	LEVERROCKER
4065639	LEVERROCKER
4065714	ELBOWMALE ADAPTER
4065718	BRACKETOIL TUBE
4065754	LEVER,CAM FOLLOWER
4065756	LEVER,CAM FOLLOWER
4065866	SCREW HEX FLANGE HEAD CAP
4065918	HEAD,LUB OIL FILTER
4066037	GASKETINTAKE MANIFOLD
4066112	SEAL,O RING
4066117	TUBE,WATER TRANSFER
4066129	RETAINERSEAL
4066135	GASKETFILTER HEAD
4066136	GASKETFILTER HEAD
4066190	ADAPTERFILTER HEAD
4066192	ADAPTERFILTER HEAD
4066194	PLATECOVER
4066195	SPRINGCOMPRESSION
4066254	COVERGEAR
4066277	SUPPORTWATER PUMP
4066304	SUPPORTFRONT ENGINE
4066385	SUPPORTHYDRAULIC PUMP
4066546	DRIVE,HYDRAULIC PUMP
4066599	PLUGRETAINER
4066750	BELT,V RIBBED
4066935	BRACEWIRING
4067011	BRACKETWIRING RETAINER
4067915	CABLE
4067917	CABLE

4080141	BELLOWS
4080164	DOWELDIAMOND
4080230	HOSEFLEXIBLE
4080240	ROD,PUSH
4080326	INSERTVALVE
4080333	INSERTVALVE
4080343	SEAL,VALVE STEM
4080395	SPACERMOUNTING
4080396	PULLEYACCESSORY DRIVE
4080402	PULLEY,ACCESSORY DRIVE
4080404	SEAL,OIL
4080433	HOSE,FLEXIBLE
4080544	HOSE,PLAIN
4080556	CONNECTORTUBE
4080578	SCREW,HEX FLANGE HEAD CAP
4080609	HOSEHUMP
4085924	GASKETCAMSHAFT COVER
4085925	COVERCAMSHAFT
4085935	HOSE,FLEXIBLE
4086012	TUBEWATER TRANSFER
4086022	HOSEFLEXIBLE
4086023	HOSEFLEXIBLE
4086084	TENSIONERBELT
4086143	HOSEPLAIN
4086225	GASKETCYLINDER HEAD
4086233	COVERHAND HOLE
4086503	ALTERNATOR
4086522	HOSEPLAIN
4086538	HOSEFLEXIBLE
4086555	BRACETUBE
4086561	HOSEPLAIN
4086562	HOSEPLAIN
4086563	HOSEPLAIN
4086585	ELBOWMALE ADAPTER
4086605	VALVECHECK
4086649	ROTAROR,VALVE
4086650	BRACKETOIL TUBE
4086673	SPACERMOUNTING
4086695	COVERHAND HOLE
4086753	CLAMPRETAINING
4086817	BREATHERCRANKCASE
4088061	VALVEETR CNT PRESSURE
4088181	VALVEETR CNT PRESSURE
4088185	PUMP, FUEL
4088274	DISCACTUATOR

4088426	INJECTOR
4088734	SENSORPRESSURE
4954905	SENSOR,TEMPERATURE
4088863	HOUSINGACTUATOR
4089143	KIT,LINER
4089247	SET,PISTON RING
4100474	GASKETCOVER PLATE
4100481	RINGCOMPRESSION PISTON
4100552	CLIP
4100619	BRACKETALTERNATOR
4100660	SEALO RING
4100661	DIPSTICK
4100672	CONNECTIONAIR CROSSOVER
4100771	PLUG,ORIFICE
4100806	BRACETUBE
4100807	HOSEFLEXIBLE
4100907	BRACKETCONNECTION
4100975	TUBEWATER BYPASS
4100976	TUBEWATER BYPASS
4100983	GASKETGEAR COVER
4101042	HOUSINGTHERMOSTAT
4101119	COVER,HAND HOLE
4101148	GASKET,THERMOSTAT HOUSING
4101149	GASKETWTR TRF CONNECTION
4101150	GASKETCONNECTION
4101322	BUSHING
4101325	SPACERMOUNTING
4101379	GASKETOIL PAN
4101401	LOCKPLATE
4902720	SENSOR,PRESSURE
4916693	ADAPTER,FILTER HEAD
4916702	HEAD,FUEL FILTER
4916874	CONNECTION,OIL TRANSFER
4916878	TUBE,LUB OIL TRANSFER
4916879	SLEEVE
4921411	MODULE,ELECTRONIC CONTROL
4921574	SEAL, O RING
4924925	SWITCH,PRESSURE
4951860	SWITCH,RELAY
4951861	BRACKET,RELAY
4951863	CABLE,ELECTRICAL
4951864	SWITCH,MAGNETIC
4955384	KIT,INTAKE VALVE
4955782	KIT,ENGINE PISTON
4975427	SEAL,O RING

68138	CONNECTOR,MALE
68152B	CLIP
70183	RINGRETAINING
S16054	BEARING, BALL
S16069	BEARING, BALL
3678924	PLUG, THREADED
3089239	PLUG, THREADED
3678922	PLUG, THREADED
3331838	UNION, MALE
3090419	UNION, MALE
3678605	PLUG, THREADED
3678845	PLUG, THREADED
3626952	SHAFT, WATER PUMP
3408346	SENSOR, TEMPERATURE
4006772	SOCKET, CAM FOLLOWER
4065750	PIN, CAM FOLLOWER ROLLER
3331029	ACTUATOR, ETR FUEL CONTROL
3329676	VALVE, PRESSURE RELIEF
3867668	SPRING, VALVE
4001751	PLUNGER, FUL PRS REGULATOR
3331030	ACTUATOR, ETR FUEL CONTROL
3090469	VALVE, EXHAUST
3089716	SHAFT, ROCKER LEVER
4065632	LEVER, ROCKER
4065635	LEVER, ROCKER
3678602	PLUG, THREADED
3171819	UNION, MALE
3331819	ELBOW, MALE UNION
3171723	UNION, MALE
3408563	SENSOR, PRESSURE
4007208	UNION, MALE
3408654	SENSOR, FLUID LEVEL
3643480	TAG, INSTRUCTION
3089962	CRANKSHAFT, ENGINE
3646083	GEARCRANKSHAFT
3642904	CRANKSHAFT, ENGINE
3082057	BUSHING
3770611	TURBOCHARGER
3641079	CORE AFTERCOOLER
4966842	DATAPLATE
3640734	BLOCK, CYLINDER
3642431	CAPMAIN BEARING
3642432	CAPMAIN BEARING
3640531	BLOCK, CYLINDER
4001052	KIT, SERVICE BLOCK



4085917	LINER, CYLINDER
3631473	PLATE, COVER
4066210	PLUG, BALL
3082417	SHAFT, CAM FOLLOWER
4066811	PLUGBALL
4065749	PIN, CAM FOLLOWER ROLLER
4065755	LEVER, CAM FOLLOWER
3089217	ROLLER, CAM FOLLOWER
4065757	LEVER, CAM FOLLOWER
3642999	CRANKSHAFTENGINE
3642450	DOWELRING
3643024	WEIGHTCRANKSHAFT COUNTER
4015886	GEAR, IDLER
3089089	GEAR, IDLER
4015888	GEAR, IDLER
4000790	GEAR, IDLER
3089214	BUSHING
4000791	GEAR, IDLER
3089107	BUSHING
3089122	GEAR, IDLER
3089123	GEAR, IDLER
4000793	GEAR, IDLER
3089315	BUSHING
4086525	HOSEFLEXIBLE
4086581	ELBOW, MALE ADAPTER
3637997	SCREWHEXAGON HEAD CAP
3916071	SCREW, HEX FLANGE HEAD CAP
3642053	COVERCAMSHAFT
4066545	SUPPORT, HYDRAULIC PUMP
3089102	SUPPORT, FUEL PUMP
3089103	SUPPORT, FUEL PUMP
3410393	ELBOW, MALE UNION
3642787	DECAL
3089021	PLUG, THREADED
3638767	NIPPLECOUPLING
3638768	NIPPLE, COUPLING
4921680	PUMP, GEAR FUEL
4903530	PUMP, FUEL
4088182	VALVE, PRESSURE REGULATOR
4001945	VALVE, CHECK
3408567	SENSOR, PRESSURE
4001757	BARREL, CONTROL VALVE
4002081	VALVE, PRESSURE REGULATOR
4007073	ELBOW, MALE UNION
555035	WASHER, PLAIN

4080440	VALVE, CHECK
4017430	FLYWHEEL
4101324	COVER, GEAR
4016504	COVER, GEAR
4100568	HEAD, LUB OIL FILTER
3642280	PUMP, LUBRICATING OIL
3640549	ADAPTER, OIL PAN TLA
3408557	SENSOR, PRESSURE
3329693	INSERT, THREADED
3330657	BODY, CONTROL VALVE
3348441	ACTUATOR, ETR FUEL CONTROL
3408565	SENSOR, PRESSURE
4088735	SENSOR, PRESSURE
4065606	HOSE,FLEXIBLE 3648656
3643003	HARNESSWIRING
4065497	ELBOW, MALE ADAPTER
4065715	ELBOW, MALE UNION
3640518	ROD, ENGINE CONNECTING
3640515	ROD, ENGINE CONNECTING
3639974	BUSHING
3640512	PISTON, ENGINE
3171769	VALVE, INTAKE
4065481	VALVE, EXHAUST
3641624	GUIDE, VALVE STEM
4086626	HEAD, CYLINDER
3639377	SPACER, MOUNTING
3639629	SHIELD, FUEL LINE
3642058	CONNECTIONFUEL BLOCK
3641774	CONNECTIONFUEL BLOCK
3927220	SCREW, HEX FLANGE HEAD CAP
2882050	KITTURBOCHARGER
4086016	HOUSING, ROCKER LEVER
4065638	LEVER, ROCKER
3643029	BRACKETBELT GUARD
3643033	BRACKETBELT GUARD
3643035	BRACKETBELT GUARD
3643037	BRACKETBELT GUARD
3643513	BRACKETBELT GUARD
3643516	GUARDALTERNATOR
3640302	SCREWSOCKET HEAD CAP
3638083	PUMP, WATER
3682727	ELBOW, MALE UNION
3642660	MANIFOLDEXHAUST
3642661	MANIFOLDEXHAUST
3642662	MANIFOLDEXHAUST

3641090	COVERAFTERCOOLER
3641849	CLAMP, T BOLT
3641850	CLAMP, T BOLT
3642862	COVERAFTERCOOLER
3643875	SCREWROUND HEAD CAP
3332137	UNION, MALE
3171840	REDUCER, TUBE FITTING
3642285	BRACETUBE
3171891	TEE, MALE UNION
3331837	ELBOW, MALE UNION
3331856	UNION, MALE
3331882	REDUCER, TUBE FITTING
3637779	TEE, MALE UNION
3643997	ADAPTERFILTER HEAD
4066278	SUPPORT, WATER PUMP
4066279	SUPPORT, WATER PUMP
4065584	PUMP, WATER
3646065	GEARIDLER
3647120	SUPPORTWATER PUMP
3177040RX	SHAFTSHUTOFF VALVE