

Parts Catalog

KT19

VME L270 L270B

THE FOLLOWING FILTERS CAN BE PURCHASED THRU <u>VME PARTS</u> <u>NORTH AMERICA:</u>

FILTER	PART NUMBER
FUEL	12003653
LUBE	12000200
LUBE-BYPASS	11996228
WATER-FOR FLUSHING	12967020
WATER-FOR SERVICING	12968028

	e e e e e e e e e e e e e e e e e e e	
	•	
	•	
		•
		Ĉ
		(



Cummins Engine Co., Inc.

New Parts Warranty Heavy Duty

COVERAGE

PRODUCTS WARRANTED

These warranties apply to New Parts marketed by Cummins for its engines (except those for A, B, and C series engines). They apply anywhere in the world where service is available through a Cummins distributor or full service dealer.*

BASE WARRANTY

The Base Warranty covers any failures of parts on or after March 31, 1986, which result, under normal use and service, from defects in workmanship or material (Warrantable Failures). The coverage on cylinder kits designated by Cummins as "Premium Plus" extends two years, 200,000 miles (321,870 kilometers) or 7,200 hours of operation, whichever occurs first, from the date of first installation. The coverage on other parts extends one year, 100,000 miles (160,935 kilometers) or 3,600 hours of operation, whichever occurs first, from the date of first installation.

EXTENDED MAJOR COMPONENTS WARRANTY

The Extended Major Components Warranty covers Warrantable Failures on or after March 31, 1986, of engine cylinder blocks, crankshafts, flangeless NT camshafts** and connecting rods (Covered Parts). Bushing and bearing failures are not included. This coverage begins with the expiration of the Base Warranty and ends three years, 300,000 miles (482,805 kilometers) or 10,800 hours of operation, whichever occurs first, from the date of first installation.

Both the Base Warranty and Extended Major Components Warranty apply to all Owners in the chain of distribution, and coverage continues to all subsequent Owners until the end of the respective periods of coverage.

CUMMINS RESPONSIBILITIES

DURING THE BASE WARRANTY

Cummins will pay for all parts and labor needed to repair the damage to the engine resulting from the Warrantable Failure. All labor costs will be paid in accordance with Cummins published Standard Repair Operation guidelines.

Cummins will pay for the lubricating oil, antifreeze, filter elements, and other maintenance items that are not reusable due to the Warrantable Failure.

Cummins will pay reasonable labor costs for engine removal and reinstallation when necessary to make the warranty repair.

When the parts are installed in a non-automotive engine, Cummins will pay reasonable travel expenses for mechanics to and from the engine site, or the repair dock in the case of a marine engine, including meals, mileage and lodging when it is necessary for mechanics to make on-site warranty repairs.

DURING THE EXTENDED MAJOR COMPONENTS WARRANTY

Cummins will pay for the Covered Part and for any Covered Part damaged by a Warrantable Failure of another Covered Part.

OWNER RESPONSIBILITIES

DURING THE BASE WARRANTY

Before expiration of the warranty, Owner must give notice to a Cummins distributor or full service dealer* of a failure considered to be warrantable and have the repair performed by such facility.

If the part was installed in an automotive engine, the Owner must deliver the engine to the repair location. If installed in a marine engine, Owner is responsible for the cost of towing the boat to a repair dock and for any associated docking and harbor charges.

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements and other maintenance items replaced during warranty repairs except where such items are not reusable due to a Warrantable Failure.

DURING THE EXTENDED MAJOR COMPONENTS WARRANTY

Before expiration of the warranty, Owner must give notice to a Cummins distributor or full service dealer* of a failure considered to be warrantable and deliver the defective and damaged Covered Parts to such facility.

Owner is responsible for the cost of all parts needed for the repair except for the defective Covered Part and for any Covered Part damaged by a Warrantable Failure of another Covered Part.

Owner is responsible for the cost of all labor needed to repair the engine, including the labor to remove and reinstall the engine. When Cummins elects to repair a part instead of replacing it, Owner is not responsible for the labor needed to repair the part.

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements and other maintenance items replaced during the repair.

DURING BOTH WARRANTIES

At the time when the parts are installed, Owner is responsible for the preparation of a written record containing the following: (1) the date of installation of the parts; (2) the engine serial number; (3) the engine miles, hours or kilometers of operation; (4) the parts installed, and (5) the location of the parts in the engine. The purpose of this record is to protect Owner's interests and support any claim for a Warrantable Failure.

Owner is responsible for the operation and maintenance of the engine as specified in Cummins Operation and Maintenance Manuals.

Owner is responsible for communication expenses, meals, lodging and similar costs incurred by Owner as a result of a Warrantable Failure. Owner is responsible for non-engine repairs and for "down time" expenses, cargo damage and all business costs and losses resulting from a Warrantable Failure. CUMMINS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

LIMITATIONS

Cummins is not responsible for failures resulting from Owner or Operator abuse or neglect, such as: operation without adequate coolant, fuel or lubricants; overfueling; overspeeding; lack of maintenance of lubricating, cooling or air intake systems; improper storage, starting, warm-up, run-in or shutdown practices. Cummins is also not responsible for failures caused by incorrect fuel, or by water, dirt or other contaminants in the fuel.

Cummins does not warrant parts supplied by Cummins which bear the name of another company. These parts are warranted by their manufacturers and not by Cummins. This category of parts includes, but is not limited to: hydraulic pumps, alternators, starters, fans, air conditioning compressors, clutches, steering pumps, transmissions, torque converters, marine gears, air cleaners, filters and non-Cummins air compressors, power steering pumps, and engine compression brakes.

Parts provided may be new Cummins, Cummins approved rebuilt parts, or repaired parts. Cummins is not responsible for failures resulting from the use of parts not approved by Cummins.

Before a claim for excessive oil consumption will be considered, Owner must submit adequate documentation to show that consumption exceeds Cummins published standards.


This warranty does not apply to parts furnished by Cummins at no charge to the Owner.



Product Identification Information


Data plates should be referred for parts identification.

1. ENGINE DATA PLATE

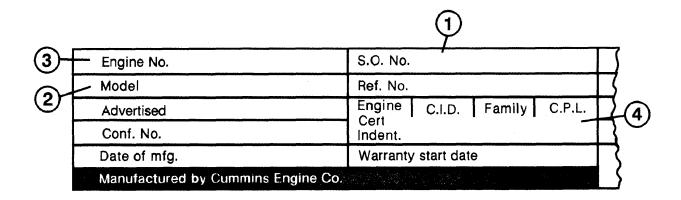

- 1. Shop order number
- 2. Model designation
- 3. Engine serial number
- 4. Control parts list

2. FUEL PUMP DATA PLATE

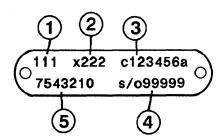

- 1. Control parts list number
- 2. Calibration code
- 3. Serial number
- 4. Top level number
- 5. Fuel pump assembly number

This catalog was compiled by Garry Wilber in Parts Communications.

Customer Service Information

This standard Parts Catalog c	ontains parts information for the	ne following Cummins	Engine Model(s):	
KT19C	D192027CX02	CPL 444	S.O. 68887	
listed in this catalog for these Parts List (CPL) components I	ents have been matched to give components are for a standard listed below, please order by puthe engine data (name) plate	l engine configuration. part description and er	When ordering any of the Cogine serial number. Referen	ontro
	Control Parts List (C	PL) Components		
Camshaft Cylinder Head Injector	Page 61 Page 69 Page 63	Piston, engine Turbocharger Exhaust, mani	Pa	ge 60 ge 65 ge 75
	USER INFOR	RMATION		
. Parts numbers appearing i service replacement parts.	n () are for identification pu	urposes only and sho	uld not be used when ord	ering
. The reference numbers ap	pearing on the art pages is fo	or publication use on	ly.	
. Assembly content is show	n by part number indentation	.		
. Options are engineered pro	oduction part groupings, spe	cifically used for com	piling engine orders.	
. Option numbers are for ref	erence only and are not sold	l for service.		
. Use assembly and not opti-	on content to determine serv	vice parts replacemer	t.	
	S SPECIFY ENGINE MO HEN ORDERING PARTS	FROM THIS CATA	LOG	
MFG Make	Model	Chas	ssis No	
Fuel Pump Assembly No		Injector No		
Belt, Fan	Belt, Water Pump	Be	elt, Gen.	
Element, Fuel Filter	Fι	all Flow Lub. Filter		
Air Cleaner	Ву-Ра	ss Lub. Filter		
Special Equipment				

Table of Contents


	No.
Accessory Drive	2
Breather Location	21
Cam Follower Camshaft And Gear Camshaft Idler Gear Corrosion Resistor Cover Plate Crankshaft & Main Bearings Cylinder Block Cylinder Head Cylinder Head Mounting	61 8 82 47 11 5, 7
Dipstick Dipstick Tube	54 52
Exhaust Elbow Exhaust Manifold/turbo Mtg	90 75
Fan Drive Arrangement Flywheel Flywheel Housing Front Engine Support Fuel Filter Fuel Pump Fuel Pump Drive Fuel Shutoff Valve Fuel Tubing	44 35 27 33 39 38 43
Gear Cover Mounting	29
Hand Hole Covers Head Gasket Set - Single	
Injector Injector Mounting Intake Manifold 48 Intake Manifold Mounting	. 18 , 49
Lifting ArrangementLubricating Oil Pump	. 70 . 17
Mag Pickup Location Plug Mounting	
Oil Cooler	. 80 . 37 . 51 ., 59
Piston & Connecting Rod	
Rocker Levers	. 13
Starter	. 72

	Page No.
Starter Mounting	71
Throttle Lever Turbocharger Turbocharger Mounting	65
Vibration Damper	22
Water Inlet Connection Water Manifold Water Outlet Connection Water Pump	85 86
Option Number Index	A-1 B-1



ad400gh

ef lo.	Part Number	Part Name	Req	Remarks
		ACCESSORY DRIVE PULLEY		
		OPTION AD4007		Pulley to drive alternator. Right side of engine. For use with the one piece aluminun gear cover.
1	3002331	Pulley, Alternator	1	
Ì				
		·		
	:			
١	*			
Ì				

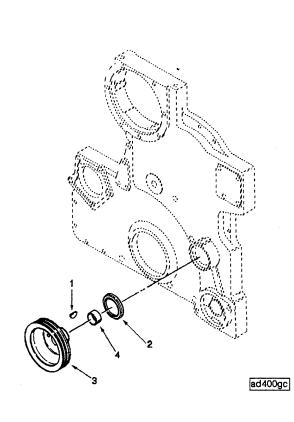


Ref No.	Part Number	Part Name	Req	Remarks
		ACCESSORY DRIVE OPTION AD4014		Accessory drive with two groove pulley to drive freon compressor. Fuel pump side of engine. Use with CF4004.
3 4	S-316 3200287 3014695 (3011826) 190397	Key, Plain Woodruff Seal, Keyway Pulley, Accessory Drive Pulley, Accessory Drive Sleeve, Wear	1 1 1 1 1	


Page 4

	Cylinder Block		Option No. BP4010
Ref No. Part Numb	er Part Name	Req	Remarks
		···	·

Page 6

Part Number	Part Name	Door	D
		Req	Remarks
	CYLINDER BLOCK OPTION BP4010		Cylinder block less rear gear train for KT(A)- 1150 C,L,P,G configurations. Use with EM4058 thru EM4065. Gear cover plate design.
3028434 (3202240) 3014668 3011076	CYLINDER LINER Kit, Liner Liner, Cylinder Seal, D Ring Seal, D Ring	6 1 1	Bottom (black) Top (red)
3028430 3028431 3028432	OVERSIZED LINERS Kit, Liner Kit, Liner Kit, Liner	A/R A/R A/R	.020 Inch oversize .040 Inch oversize .060 Inch oversize .083 Inch oversize
3028433 3014226 3014227 3014228	Kit, Liner LINER SHIMS Shim Shim Shim	A/R A/R A/R A/R	.095 Inch oversize .007 Inch .008 Inch .009 Inch
3014229 3014230	Shim Shim	A/R A/R	.020 Inch .031 Inch
			,
	(3202240) 3014668 3011076 205115 3028430 3028431 3028432 3024726 3028433 3014226 3014227 3014228 3014229	## CYLINDER LINER CYLINDER LINER	## CYLINDER LINER 3028434

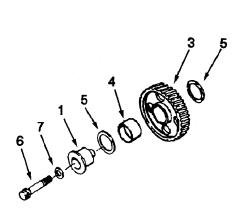

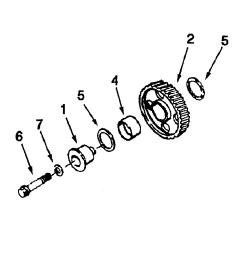

if400gb

Ref No.	Part Number	Part Name	Req	Remarks
		CAMSHAFT IDLER GEAR		
ŀ		OPTION BP4010		
1 2 4 5 6	3202114 3004684 (3004599) 3004686 130083 207527	Shaft, Idler Gear, Bushing Cam Idler Gear, Idler Bushing Bearing, Thrust Screw, Twelve Point Cap	1 1 1 1 2	5/8 - 18 x 3 inches
7	3200772	Washer, Plain	1	
		PUMP IDLER		
		OPTION BP4010		
1 3 4 5	3202114 3004685 (3004680) 3004686 130083 207527	Shaft, Idler Gear, Bushing Wtr Pump Id Gear, Idler Bushing Bearing, Thrust	1 1 1 1 2	5/8 - 18 x 3 inches
6 7	3200772	Screw, Twelve Point Cap Washer, Plain	1	3/6 - 16 X 3 Mailes

NOTES

	,		


<u>.</u>			
		······································	
<u></u> .			
		····	

		· · · · · · · · · · · · · · · · · · ·	
·			
•			
•			
		· · · · · · · · · · · · · · · · · · ·	

	O No. 01.02 Crankshaft and Main Bearings		
Ref No. Part Number	Part Name	Req	Remarks
	CRANKSHAFT & MAIN BEARINGS		
3005357 3201082 207259 3 206904 AR12270 4 205140 5 205150 6 205160 7 205170 9 205112 AR12271 4 205161 7 205161 7 205171 9 205152 6 205162 7 205162 7 205172 9 205162 7 205172 9 205163 7 205163 7 205173 9 3001196 9 3001197	Crankshaft Crankshaft, Engine Gear, Crankshaft Key, Woodruff Shell, Main Bearing Bearing, Main Bearing, Thrust THRUST RINGS - OVERSIZE Bearing, Thrust Bearing, Thrust	1 1 1 1 1 5 5 2 2 4 R R R R R R R R R R A A A A A A A A A	Standard No. 2, 3, 4, 5, & 6 - Upper No. 2, 3, 4, 5, & 6 - Lower No. 1 & 7 - Lower No. 1 & 7 - Upper .010 Inch Oversize No. 2, 3, 4, 5, & 6 - Upper No. 2, 3, 4, 5, & 6 - Lower No. 1 & 7 - Lower No. 1 & 7 - Upper .020 Inch Oversize No. 2, 3, 4, 5, & 6 - Upper No. 2, 3, 4, 5, & 6 - Lower No. 1 & 7 - Lower No. 1 & 7 - Upper .030 Inch Oversize No. 2, 3, 4, 5, & 6 - Lower No. 2, 3, 4, 5, & 6 - Lower No. 2, 3, 4, 5, & 6 - Lower No. 1 & 7 - Lower No. 1 & 7 - Lower No. 1 & 7 - Upper .010 Inch Oversize .020 Inch Oversize .020 Inch Oversize

	up No. 03.01	Hocker Lever & Housing		Option No. BP4010		
Ref No.	Part Number	Part Name	Req	Remarks		
		ROCKER LEVERS OPTION BP4010				
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17	S-125 205128 3053478 (3049437) 207226 194037 3053476 (3049438) 207344 208084 3053477 (3049432) 207344 208084 3176773 (3176875) 203933 205394 108602 3201517 S-212 168306 205393	Screw, Hexagon Head Cap Washer, Plain Lever, Rocker Lever, Rocker Bushing Socket, Rocker Lever Lever, Rocker Lever, Rocker Bushing Rivet Lever, Rocker Lever, Rocker Bushing Rivet Shaft, Rocker Lever Shaft, Rocker Lever Plug, Expansion Screw, Twelve Point Cap Screw, Hexagon Head Cap Gasket, Rkr Lever Housing Nut, Regular Hexagon Screw, Slotted Set Screw, Twelve Point Cap	6 48 6 1 1 1 6 1 1 1 6 30 6 18 18 6	1/2 - 13 x 4 1/2 inches 1/2 - 13 x 3 3/4 inches 1/2 - 20 x 2 inches 1/2 - 13 x 2 inches		
,						


Ref	Dort Number			Option No. BP4010
No.	Part Number	Part Name	Req	Remarks
	i	CAM FOLLOWER OPTION BP4010		
1 2 3 4 5 6 3 6 7 8 9 10	205439 3039163 (206231) 205438 205068 3016825 213559 3039164 205438 213559 (205069) 205071 3016826 AR10626 205227 205301 3009631	Ring, Retaining Lever, Cam Follower Lever, Cam Follower Lockwire, Cam Roller Pin Pin, Cam Follower Roller Roller, Cam Follower Socket, Cam Follower Lever, Cam Follower Lockwire, Cam Roller Pin Socket, Cam Follower Lever, Cam Follower Pin, Cam Follower Roller, Cam Follower Pin, Cam Follower Roller, Cam Follower Shaft, Cam Follower Plug, Expansion Shaft, Cam Follower Cover, Camshaft	12 6 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Injector Valves
13 14 15 16 17 18 19	3002886 3040838 3040837 3002993 3040721 S-604 127362	MOUNTING PARTS Screw, Cam Follower Shaft Screw, Captive Washer Cap Screw, Captive Washer Cap Dowel, Ring Gasket, Cam Fol Housing Washer, Lock Washer, Plain	12 12 12 12 12 6 24 36	3/8 - 16 x 1.3 inch, special 3/8 - 16 x 1 inch 3/8 - 16 x 2 1/2 inches
20 21	3017961 3057139	PUSH RODS Rod, Push Rod, Push	6 12	Injector Valves

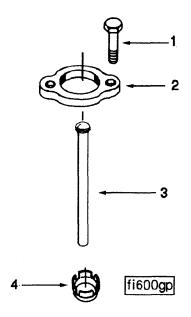


Ref No.	Part Number	Part Name	Req	Remarks
		INJECTOR MOUNTING OPTION BP4010		
1 2 3 3 4	3070961 3006696 205462 207244 3001658 3001669 3001660	Screw, Hexagon Head Cap Clamp, Injector Link, Injector Plunger Seal, Injector Seal, Injector Seal, Injector Seal, Injector	12 6 6 6 A/R A/R A/R	5/16 - 18 x 1 inch .010 Inch O/S .020 Inch O/S .030 Inch O/S

NOTES

_	·
~	
_	
-	
30"	

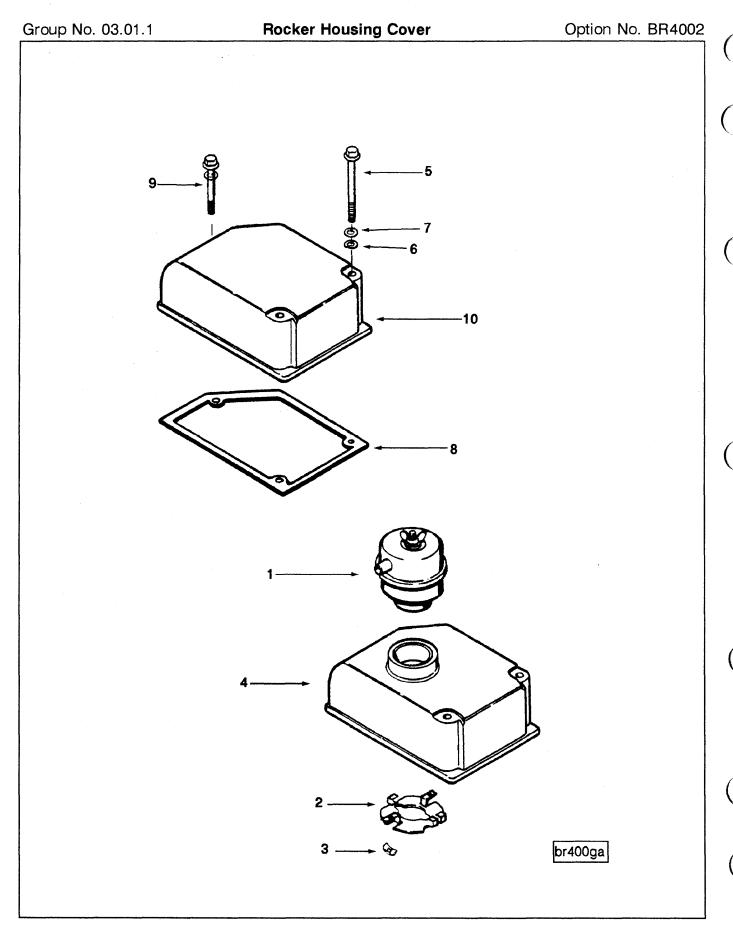

Ref No.	Part Number	Part Name	Req	Remarks
1 2 3 4 5 8 9	156810 219065 3000528 3010396 3065950 3040720 3044413 3010247	BREATHER LOCATION OPTION BR4002 Breather, Crankcase Baffle, Breather Nut, Spring Cover, Rocker Lever Screw, Captive Washer Cap Gasket, Rocker Lever Cover Screw, Captive Washer Cap Cover, Valve	3 3 6 3 12 6 6 3	Crankcase breathers mounted on no.1, no.2 and no.5 valve covers. 3/16 3/8 - 16 x 4 1/2 inches 3/8 - 16 x 2 inches

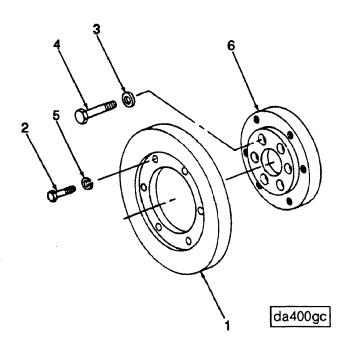

Ref No.	Part Number	Part Name		Remarks
		VIBRATION DAMPER		
l		OPTION DA4001		Viscous type vibration damper.
1 2 3 4 5 6	217322 210029 205059 206881 S-608 3203694	Damper, Vibration Capscrew, Twelve Point Washer, Plain Capscrew, Twelve Point Washer, Lock Adapter, Crankshaft	1 6 6 6 6 1	1/2 - 20 x 1 1/4 inch Hardened 3/4 - 16 x 4 inch

NOTES


 ····					
 ···		· • · · · · · · · · · · · · · · · · · ·			
 		· · · · · · · · · · · · · · · · · · ·			-,,
					
		•			

*************************************	***************************************				
			· · · · · · · · · · · · · · · · · · ·		
			,		
		· · · · · · · · · · · · · · · · · · ·		· · · · · · · · · · · · · · · · · · ·	
		 			
			····		
				·	· · · · · · · · · · · · · · · · · · ·

	up No. 13.02.3	Alternator Mou	nting	Option No. EE4026		
Ref No.	Part Number	Part Name	Req	Remarks		
Ref	······································					

Ref Bort Number	No. 01.09 Gear Cover/Housing		Option No. EM40		
No. Part Number	Part Name	Req	Remarks		
1 S-173-A	FRONT ENGINE SUPPORT OPTION EM4058 Screw, Hexagon Head Cap	6	Two bolt pad type front engine support with 51/64 inch diamater holes to accept the commonly used 3/4 inch diameter Lord mount. Includes aluminum gear cover witho front out hydraulic pump drive provisons. 5/8 - 11 x 2 1/4 inches		
2 S-603 3 206343 4 S-1040-A 6 3025460 7 3009620 8 132770 9 205133 10 3016792 11 3016788 12 3016794 13 3015525 3018914 (3018909) (3018910) 17 (3018911) 18 (3019154) 19 3019152 20 3019153 21 3046202 22 3059831 23 3201125 24 3200642 70645 102957 27 3014766 28 3037282 29 S-965-E 30 3019961 33 3044523	Washer, Lock Support, Front Engine Elbow, Male Adapter Plug, Pipe Spring, Engine Barring Bushing Bushing Seal, Oil Seal, Oil Seal, Oil Cover, Gear Ring, Retaining Guide, Barring Shaft Bushing Bearing, Thrust Pin, Roll Guide, Barring Shaft Gear, Engine Barring Shaft, Barring Plug, Threaded Plug, Drive Seal, O Ring Plate, Clamping Dowel, Pin Dowel, Diamond Screw, Captive Washer Cap Gasket, Cover Plate Plug, Pipe Stud Stud Nut, Plug Plate, Gear Cover	6 1 1 6 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1	3/8 - 16 x 1 inch 3/8 - 16		


Ref	up No. 01.09	Gear Cover/Housin		Option No. EM470		
No.	Part Number	Part Name		Remarks		
1 2 3 4 5 6 7 8 9	S-199-B S-602 S-604 127362 205375 3010596 3012476 3044762 3201128	GEAR COVER MOUNTING OPTION EM4703 Screw, Hexagon Head Cap Washer, Plain Washer, Lock Washer, Lock Washer, Plain Screw, Twelve Point Cap Screw, Captive Washer Cap Screw, Captive Washer Cap Gasket, Gear Cover Nut, Regular Hexagon	7 7 7 9 1 3 8 1 4	Mounting for aluminum gear cover without freon compressor. 3/8 - 16 x 3 3/4 inches 3/8 - 16 x 2 1/4 inches 3/8 - 16 x 1 1/4 inches 3/8 - 16 x 3 inches 3/8 - 16		

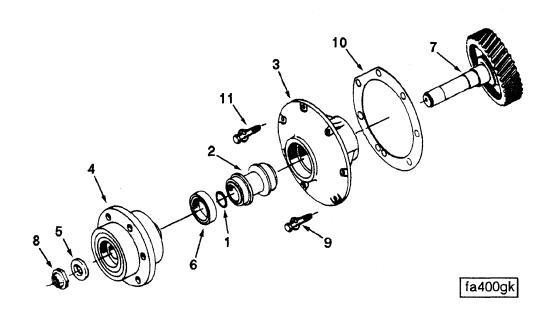

Ref No.	Part Number	Part Name	Req	Remarks
		FAN DRIVE ARRANGEMENT OPTION FA4081		Gear driven .84 to 1 drive ratio with 20.6" fan center & .28" to right of centerline of engine. Fan rotational inertia not to exceed 15.0 in-lb-sec squared.
1 2 3 4 5 6 7 8 9 10 11	3201750 145536 200384 207079 3001275 3012467 3016789 3201749 3202206 3040838 3042612 3042890	Hub, Fan Seal, O Ring Bearing, Roller Support, Fan Hub, Fan Washer, Plain Seal, Oil Gear & Shaft Nut, Lock Screw, Captive Washer Cap Gasket, Fan Hub Screw, Captive Washer Cap	1 1 1 1 1 1 1 2 1 5	

NOTES

-	
	-,
and the	
	·

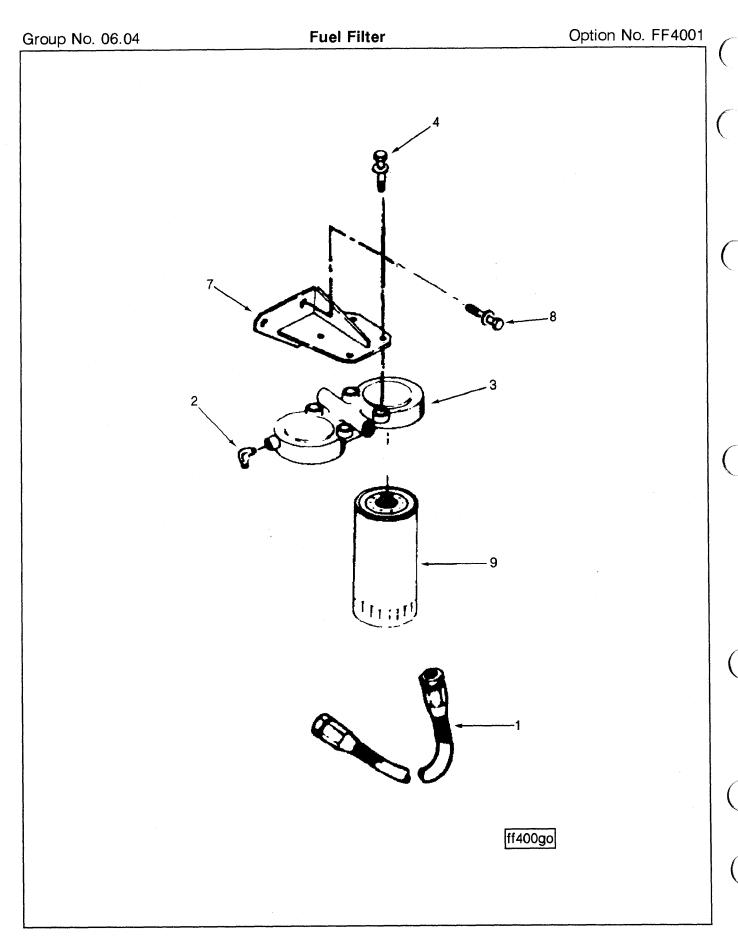

Page 32


Group No. 06.04

Fuel Filter

Option No. FF4001


	ap 140. 06.04	ruei riiter		Option No. FF4001		
Ref No.	Part Number	Part Name	Req	Remarks		
1 2 3 4 7 8 9	AS1003000SS 129859 212013 3010596 3036027 3010595 3315847	FUEL FILTER OPTION FF4001 Hose Elbow, Male Union Head, Fuel Filter Screw, Captive Washer Cap Bracket, Filter Screw, Captive Washer Cap Filter, Fuel	1 2 1 4 1 4 2	Dual spin-on fuel filters without check valve. Mounted between fuel pump and lube oil filter at same level as lube filter head. For use without air compressor. 3/8 - 16 x 1 1/4 inches 3/8 - 16 x 1 inch		

Gro	up N o. 16.01	Flywheel Hous	sing	Option No. FH4141			
Ref No.	Part Number	Part Name	Req	Remarks			
1 2 3 4 5 6 7 8 9 10 11 12 13 14	S-631 205247 205409 3005886 S-103-A S-116 S-603 9226 172648 205239 207374 3036805 207376 3006485	Part Name FLYWHEEL HOUSING OPTION FH4141 Washer, Plain Seal, O Ring Screw, Hexagon Head Cap Seal, Oil Screw, Hexagon Head Cap Screw, Hexagon Head Cap Washer, Lock Dowel, Flywheel Housing Seal, Rectangular Ring Seal, Rectangular Ring Seal, Rectangular Ring Baffle, Oil Housing, Flywheel Gasket, Oil Drain Cover, Flywheel Housing	10 10 1 10 12 2 2 2 1 1 1 1				
14 15 16	3008470 3010595	Plug, Pipe Screw, Captive Washer Cap	1 1 4	3/8 - 16 x 1 inch			

 


fh400gn


Ref No.	Part Number	Part Name	Req	Remarks
		MAG PICKUP LOCATION PLUG		
		OPTION FH8713		3/4-16 plug for the magnetic pick-up location in the flywheel housing. For use with both we or dry flywheel housings. Required when Woodward 2301 electro- hydraulic governor, American Bosch governor, Cummins EFC governor, tachometer, or speed switch is not specified.
1	553856	Gasket, Drain Plug	1	
2	3201759	Screw, Hexagon Head Cap	1	3/4 - 16 x 1/2 inch

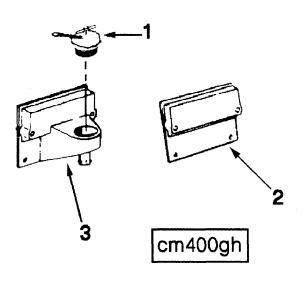

Ref No.	Part Number	Part Name		Remarks
		OIL FILL LOCATION OPTION FO4025		Oil fill located on no. 4 cam follower cover.
1 2 3	107981 3009631 3200414	Cap, Filler Cover, Camshaft Bracket, Oil Tube	1 1 1	

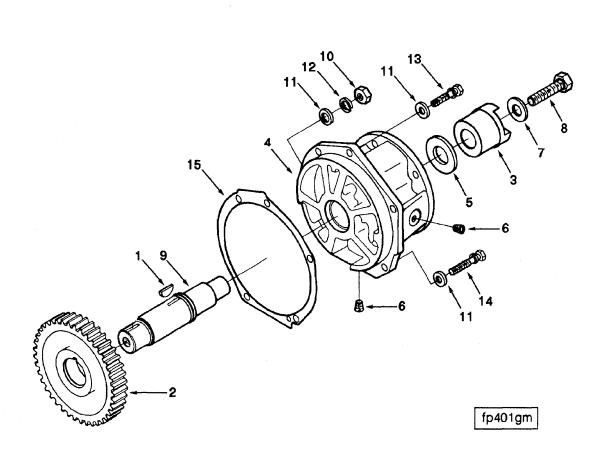

Ref No.	Part Number	Part Name	Req	Remarks
	3016734 S-316 207253 3000175 3009512 3014103 3025460 3045136 3045137 3045229 S-205 S-602 S-604 3033038 3044413 3201693	Part Name FUEL PUMP DRIVE OPTION FP4815 Drive Accessory Key, Plain Woodruff Gear, Accessory Drive Hub, Jaw Coupling Support, Accessory Drive Washer, Plain Plug, Pipe Washer, Plain Screw, Hexagon Head Cap Shaft, Accessory Drive Nut, Regular Hexagon Washer, Plain Washer, Plain Washer, Lock Screw, Captive Washer Cap Screw, Captive Washer Cap Gasket, Acc Drive Suppt.	1 1 1 1 1 5 1 3 1 1 1	Fuel pump drive for use without air compressor. 1/2 - 20 x 2 inches 3/8 - 24 11/16 3/8 - 16 x 1.61 inches 3/8 - 16 x 2 inches

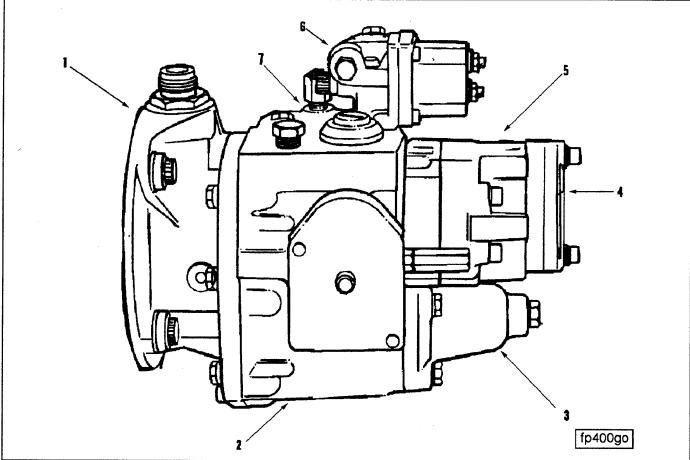

Ref No.	Part Number	Part Name	Req	Remarks
		FUEL PUMP OPTION FP4959		
1 2 3 4 5 6 7	3060703 3030267 3060695 3021977 AR12110 3034217	Assembly, Fuel Pump Fuel Pump Front Cover Fuel Pump Housing Idle Spring Pack Damper, Fuel Pump & Mtg. Fuel Pump Gear Assembly Fuel Shutoff Valve Barrel Plug Assembly	1 1 1 1 1 1	PTG/Non-VS/Non-AFC pump with 3/4" cooled gear pump. Use with 3024242 hardware kit. FCE-222 Reference FV8010

Group No. 06.03

Fuel Tubing

Option No. FT40002

	up 140. 06.03	ruei i ubing		Option No. F140002		
Ref No.	Part Number	Part Name	Req	Remarks		
		FUEL TUBING OPTION FT40002		Fuel tubing for front fuel block with non-AFC/Auto or VS fuel pump, gear pump cooling, check valves and with or without Cummins EFC governor. Without air compressor. May be used with standard or high pressure solenoid valve.		
1 2 3 4 5 6	S-607 100478 118226 127018 128006 207442	Washer, Lock Seal, O Ring Screw, Socket Head Cap Washer, Plain Washer, Plain Connection, Fuel Block	2 2 12 12 1	3/16 - 24 x 1 1/4 inches		
7 8 9 10 11 12 13 14 15 16	3001340 3001811 S-140 S-217 S-610 69324 3046200 3048341 207112 207117	Seal, O Ring Screw, Twelve Point Cap Screw, Hexagon Head Cap Nut, Heavy Hexagon Washer, Lock Washer, Plain Spider, Jaw Coupling Gasket, Fuel Pump Flange, Weld Gasket, Air Compressor	12 12 4 4 4 1 1 1	1/4 - 20 x 1 inch 7/16 - 14 x 1 3/4 inches		
17 18 19 20 21 22 23 24 25 26 27 28 29 30	3013786 3014766 181213 S-156-B 68138 70704 3028324 3028325 3032872 3033023 3033024 3200069 3200070 3201614	Plug, Pipe Screw, Captive Washer Cap Elbow, Plain Adapter Screw, Hexagon Head Cap Connector, Male Washer, Plain Valve, Check Valve, Check Union, Male Elbow, Male Union Elbow, Male Union Bracket, Check Valve Brkt Check VIv Spacer, Mounting	1 2 1 1 1 1 1 1 1 1 1	3/8 - 16 x 1 inch		
31 32 33 34 35 36 37 38 39 40 41 42 43	3200103 127362 176288 3002150 3012478 3025460 3031404 3200386 3200387 3200405 3200425 3201115 3201737	Tube, Fuel Supply Washer, Plain Tee, Female Adapter Seal, Ferrule Screw, Captive Washer Cap Plug, Pipe Connector, Tube Clamp, Tube Clamp, Tube Tube, Fuel Supply Tube, Fuel Drain Tube, Fuel Drain	1 2 2 2 2 2 2 2 2 2 1 1 1 2	3/8 - 16 x 3 1/2 inches		

Group No. 05.06

Fuel Shutdown Valve

Option No. FV8010


U . U .	up No. 05.06	Fuel Shutdown	Vaive	Option No. FV8010	
Ref No.	Part Number	Part Name	Req	Remarks	
1 2345678910112131415	3035346 134076 129886 129826 129838 3279794 3000266 129839 129768 129888 187556 3030970 3025458 S-189-C 181466 154087 67684	FUEL SHUTOFF VALVE OPTION FV8010 Valve, Shutoff Solenoid Body, Shutoff Valve Body, Shutoff Valve Knob Seal, O Ring Shaft, Shutoff Valve Spring, Valve Spring, Valve Seal, Rectangular Ring Screw, Fillister Head Disc, Valve Plug, Pipe Screw, Socket Head Cap Washer, Lock Seal, Rectangular Ring Washer, Plain	1 1 1 1 1 1 1 1 1 1 2 2 1 2	24 Volt solenoid operated fuel shut-off valve. Two terminals. Mounted on fuel pump. 3/16 - 24 x 5/8 inch 1/4 - 20 x 1 3/4 inch	

K

Group No. 16.02

Flywheel

Option No. FW4104

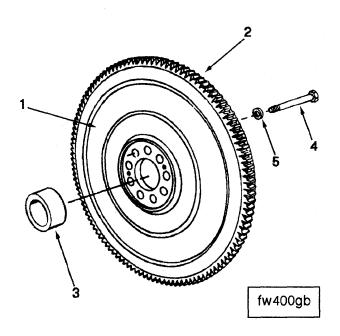


Ref No.	Part Number	Part Name F		Remarks
		FLYWHEEL OPTION FW4104		For Clark 8000 series converters.
1 2 3 4 5	3015866 (3062392) 4851 206397 3251706 200861	Flywheel Flywheel Gear, Flywheel Ring Bushing Screw, Head Locking Washer, Plain	1 1 1 1 9 9	

NOTES

-1 ··	 				
			· · · · · · · · · · · · · · · · · · ·		
_			····		
Marco 4					
-					
			· · · · · · · · · · · · · · · · · · ·		
			· · · · · · · · · · · · · · · · · · ·		
•			· · · · · · · · · · · · · · · · · · ·		
	 	· · · · · · · · · · · · · · · · · · ·		****	
					 ·
					
··					

K

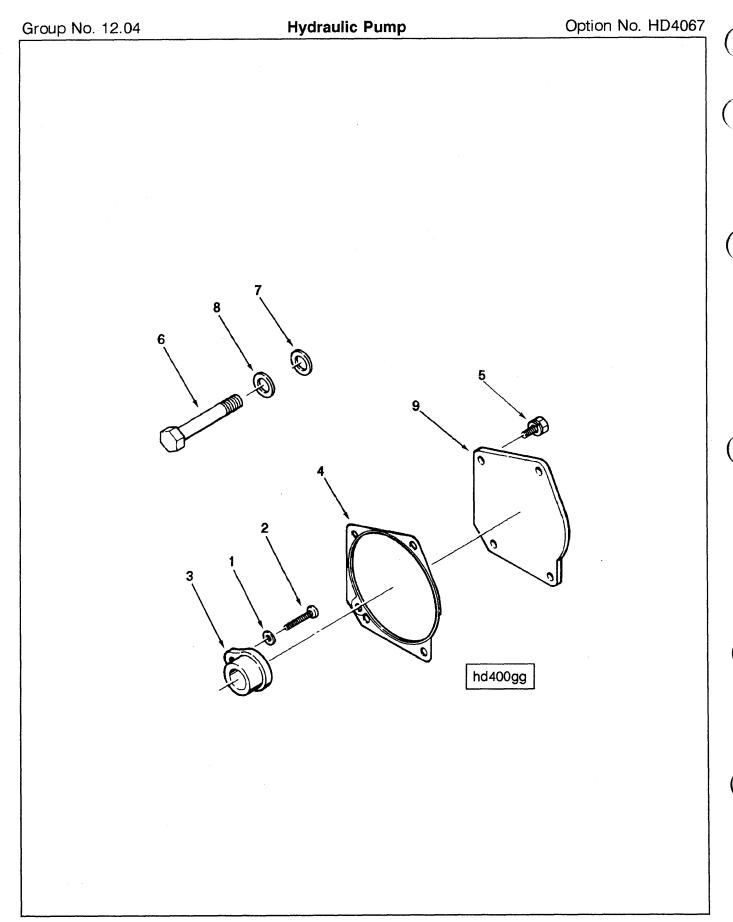


Group No. 12.04


Hydraulic Pump


Option No. HD4067

	up No. 12.04	Hydraulic Pump		Option No. HD4067			
Ref No.	Part Number	Part Name	Req	Remarks			
1 2 3 4 5 6 7 8 9	S-604 S-103-D 3003123 3007380 3012472 S-123-A 3017346 3200772 3201609	COVER PLATE OPTION HD4067 Washer, Lock Screw, Hexagon Head Cap Insert, Pump Drive Gasket, Hydraulic Pump Screw, Captive Washer Cap Screw, Hexagon Head Cap Washer, Plain Washer, Plain Cover, Hyd Pump Flange	1 1 1 4 1 1 1	Cover plate for rear of front gear cover when no hydraulic pump drive provision is specified. 3/8 - 16 x 1 1/4 inches 3/8 - 16 x 1 1/2 inches 5/8 - 18 x 2 inches			
-							



 

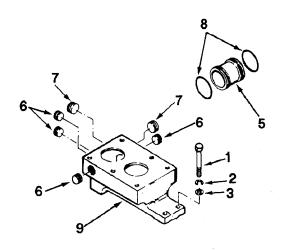

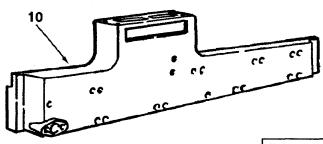


im400ga

				100gu
Ref No.	Part Number	Part Name	Req	Remarks
		INTAKE MANIFOLD OPTION IM4005		Non aftercooled intake manifold. For use on 1 piece gear cover engines.
1 2 3 5 6 7 8 9 10	S-141 S-604 127362 207378 3008468 3008469 3028291 3200630 3202155	Screw, Hexagon Head Cap Washer, Lock Washer, Plain Tube, Water Transfer Plug, Pipe Plug, Pipe Seal, O Ring Support, Thm Housing Manifold, Air Intake	2 2 2 1 4 2 2 1 1 1	


K19

K

Gro	up No. 10.01	Intake Manifol	d	Option No. IM4716
		1 im4	00gg	
Ref No.	Part Number	Part Name	Req	Remarks
1	143950	INTAKE MANIFOLD OPTION IM4716 Connector, Male	1	Vent line plumbing for KT thermostat housing without expansion tank.

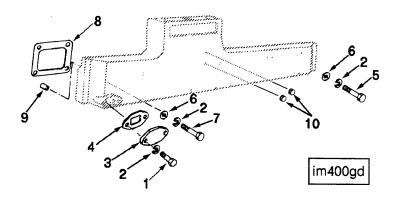


Ref No.	Part Number	Part Name	Req	Remarks
		INTAKE MANIFOLD MOUNTING		
		OPTION IM4719		Mounting for non aftercooled intake manifold For use with non AFC fuel pump. Without air compressor inlet plumbing and noise panels.
1 2	S-103-D S-604	Screw, Hexagon Head Cap Washer, Lock	2 26	
3	3011693	Plate, Cover	1	
5	3201388 123204	Gasket, Flange Screw, Hexagon Head Cap	1 4	
6	127362	Washer, Plain	24	
7	137868 206277	Screw, Hexagon Head Cap Gasket, Intake Manifold	20 6	
9	3014304	Seal, Rectangular Ring	1 1	
10	3008466	Plug, Pipe	2	
-				
				·

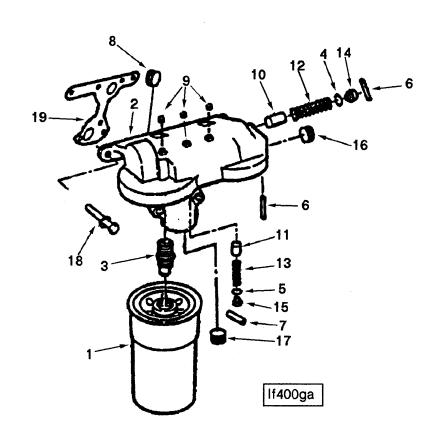

Ref No.	Part Number	Part Name	Req	Remarks
1 2	(3313287) 3200965	OIL FILTER OPTION LF4011 Element, Lub Oil Filter Lube Oil Filter Head	2	Dual spin on oil filters mounted high and to the rear of block on fuel pump side.
3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19	(3202156) 3034578 3029820 3201125 205345 161737 3201583 3025458 205347 205348 205346 3007170 69533 205350 3008470 3013786 3040838 3200977	Head, Lub Oil Filter Adapter, Filter Head Seal, O Ring Seal, O Ring Pin, Roll Pin, Roll Plug, Threaded Plug, Pipe Plunger, Bypass Valve Plunger, Pst Cooling Valve Spring, Compression Spring, Piston Cool VIv Stop, Actuator Plug, Retainer Plug, Pipe Plug, Pipe Plug, Pipe Screw, Captive Washer Cap Gasket, Lub Oil Fil Cover	1 2 1 1 2 1 1 3 1 1 1 1 1 1 6 1	3/8 - 16 x 1 1/4 inches

lef	Part Number	Part Name	Req	Remarks
		DIPSTICK TUBE		
	·	OPTION OB4091		1.84 inch dipstick tube. First used by clark or the 275 front loader.
1 2	3000508 3065684	Tube, Oil Gauge Tube, Oil Gauge	1 1	
	•			

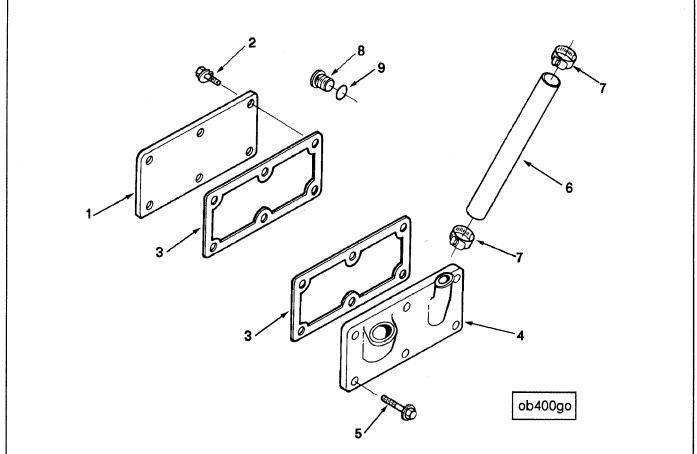

Ref	Part Number	Part Name	Pos	Domoule
No.	Part Number	Part Name	Req	Remarks
		HAND HOLE COVERS		
		OPTION OB4841		Hand hole covers used when the dipstick is located in the hand hole cover fuel pump side with oil fill location on cam follower cover.
1 2 3 4	3201060 3010595 3042586 3002494	Cover, Hand Hole Screw, Captive Washer Cap Gasket, Hand Hole Cover, Hand Hole	12 3	3/8 - 16 x 1 1/2 inch
5 6 7	3011716 AS1602000NF 43828-A	Screw, Captive Washer Cap Hose Clamp, Hose	6 1 2	3/8 - 16 x 1 3/8 inch
8 9	3046202 (3040810) 3046201	Plug, Threaded Plug, Threaded Seal, O Ring	3 1 1	

Ref No.	Part Number	Part Name	Req	Remarks
		DIPSTICK		
		OPTION OB4935		Dipstick for 1.84inch tube (OB4091) located in hand hole covers fuel pump or exhaust side with a shallow sump oil pan.
1	3064724	Dipstick	1	

NOTES


,	
•	
•	
•	
•	
•	
•	

Group No. 07.01

Oil Pan

Option No. OP4022

Gro	up No. 07.01	Oil Pan		Option No. OP4022
Ref No.	Part Number	Part Name	Req	Remarks
Ref			Req 1 2 2 1 1 1 3 2 1 2 1 1 1 1 1 8 2 2 1 1 1 2 2 2 2 1 1 1	

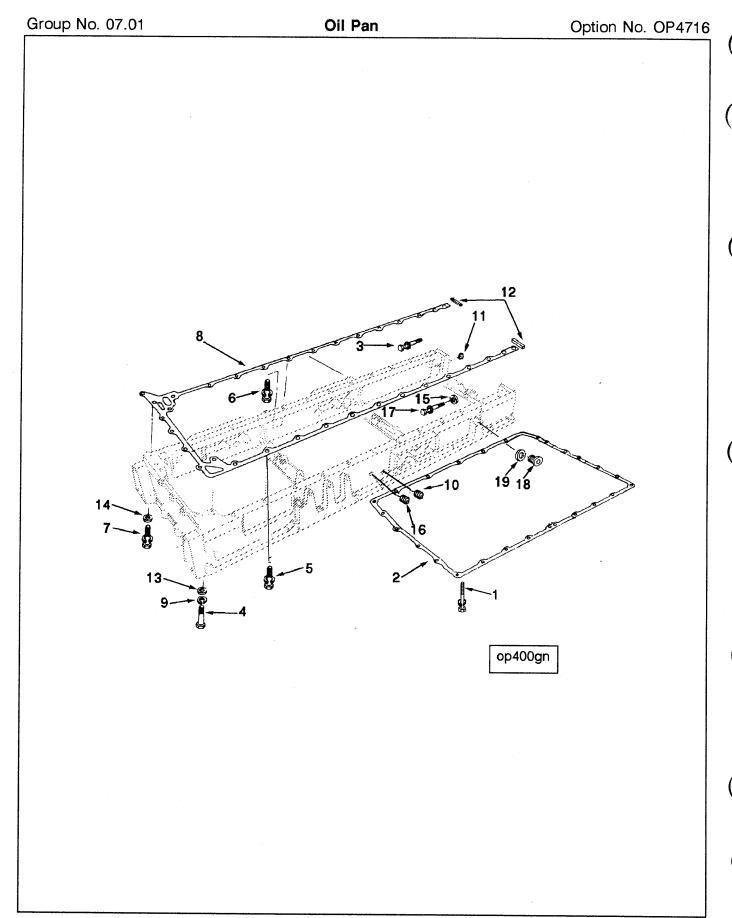

Group No. 07.01


Oil Pan

Option No. OP4716


	up No. 07.01	Oli Pan		Option No. OP4/16	
Ref No.	Part Number	Part Name	Req	Remarks	
Ref			28 1 5 1 2 28 1 1 1 1 2 2 1 2 2 1 1 1 2 1 1	<u> </u>	

Piston & Conn Rod


Option No. PP4065

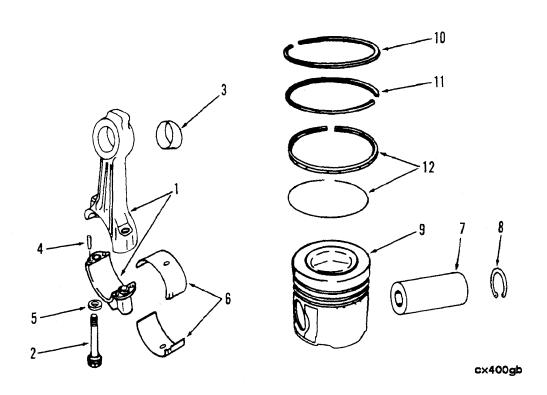

Ref No.	Part Number	Part Name	Req	Remarks
		PISTON & CONNECTING ROD		5 11 15 10 10 115 10 10 10 10 10 10 10 10 10 10 10 10 10
		OPTION PP4065		For the KT19-C and KT19-P. CPL: #0444
Ì		CONNECTING ROD		•
1 2 3 4 5 6 6 6 6	3043911 (3000791) 3013265 3043909 69558 205126 205840 205841 205842 205843	Rod, Engine Connecting Rod, Engine Connecting Screw, Connecting Rod Cap Bushing Dowel, Pin Washer, Plain Bearing, Connecting Rod	6 1 2 1 4 2 2 A/R A/R A/R	.010 Inch oversize .020 Inch oversize .030 Inch oversize
7 8 9 10 11 12	3803315 205200 205269 (3070707) 3803472 3046227 3026595 3025451	PISTON, PIN AND RINGS Kit, Engine Piston Pin, Piston Ring, Retaining Piston, Engine Set, Piston Ring Ring, Compression Piston Ring, Compression Piston Ring, Oil Piston	6 1 2 1 6 1 1	Standard Top Intermediate

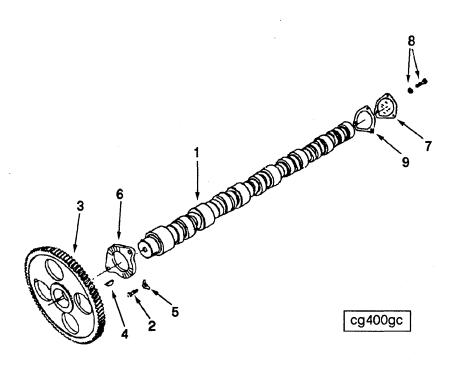


Ref No.	Part Number	Part Name	Req	Remarks
		CAMSHAFT AND GEAR		
		OPTION PP4065		CPL: #0444
1 3 4	AR45075 3066877 207248 S-302	Camshaft Camshaft Gear, Camshaft Key, Plain Woodruff	1 1 1	
6	3007971	Bearing, Camshaft Thrust	1	
		MOUNTING		
2 5 7	S-112 68908 207373	Screw, Hexagon Head Cap Lockplate Cover, Camshaft	2 2 1	3/8 - 16 x 1 inch
8 9	3014766 3040722	Screw, Captive Washer Cap Gasket, Camshaft Cover	3	3/8 - 16 x 1 inch

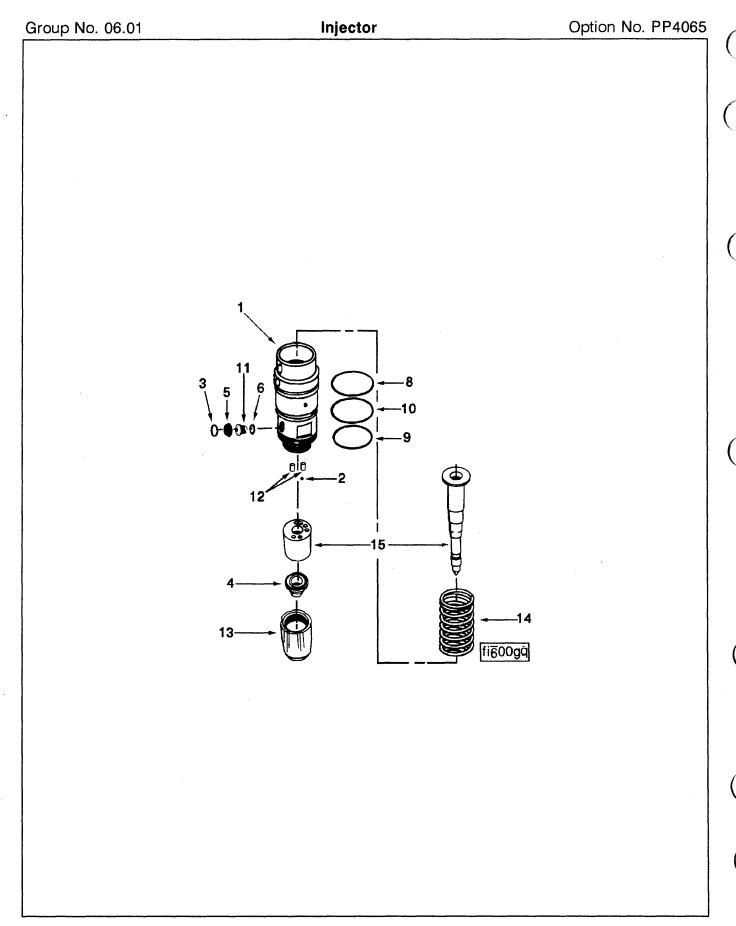

Group No. 06.01

Injector

Option No. PP4065

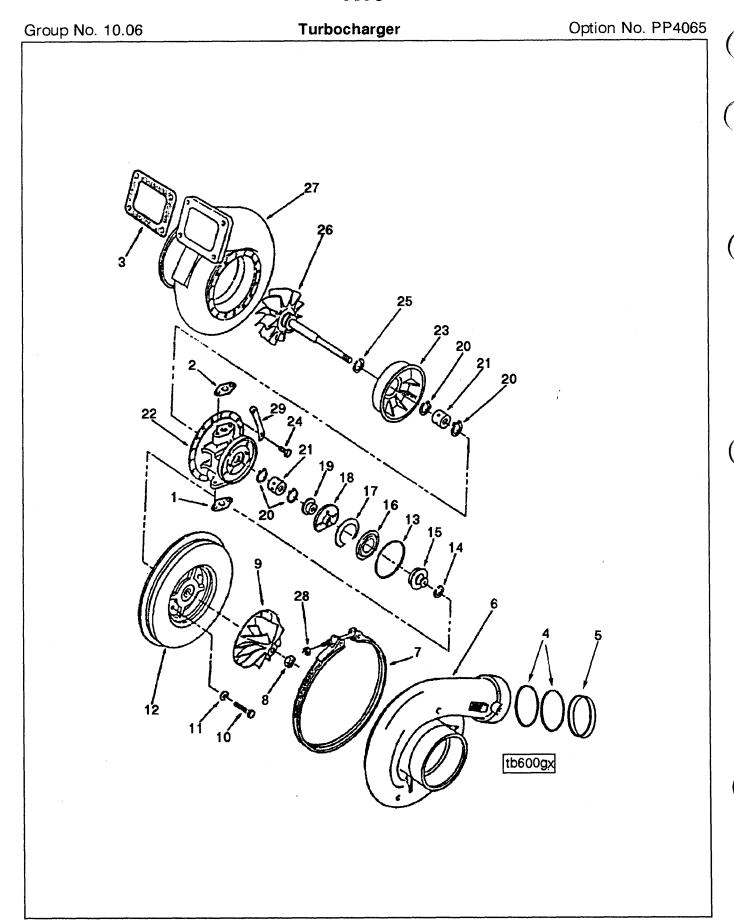


Group No. 10.06

Turbocharger

Option No. PP4065

Group No. 10.06		Turbocharger		Option No. PP4065	
Ref No.	Part Number	Part Name	Req	Remarks	
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29	3803015 201048 201049 206576 3023066 3023129 3525504 (3525546) 3522631 3519535 (3523553) 3525073 3504967 3524862 3502449 3523412 3523980 3524419 3524418 3523306 3519627 3519627 3519627 3523429 3519783 3521225 3521442 3521033 3521174 3503335 3521174 3503335 3522904	TURBOCHARGER OPTION PP4065 Kit, Turbo Gasket, Connection Gasket, Connection Gasket, Turbocharger Seal, O Ring Seal, Dust Kit, Turbo Housing, Compressor Clamp, V Band Nut, Lock Impeller, Tur Compressor Screw, Hexagon Head Set Washer, Plain Diffuser, Turbocharger Seal, Rectangular Ring Seal, Split Ring Slinger, Oil Baffle, Oil Shim Bearing, Tur Thrust Collar, Thrust Ring, Retaining Bearing, Turbocharger Housing, Tur Bearing Shield, Turbocharger Heat Screw, Hexagon Head Set Seal, Split Ring Shaft & Wheel Housing, Turbine Nut, Regular Hexagon Lockplate TURBO REPAIR KIT Hc-5a Bearing/seal Kit	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	CPL: #0444	

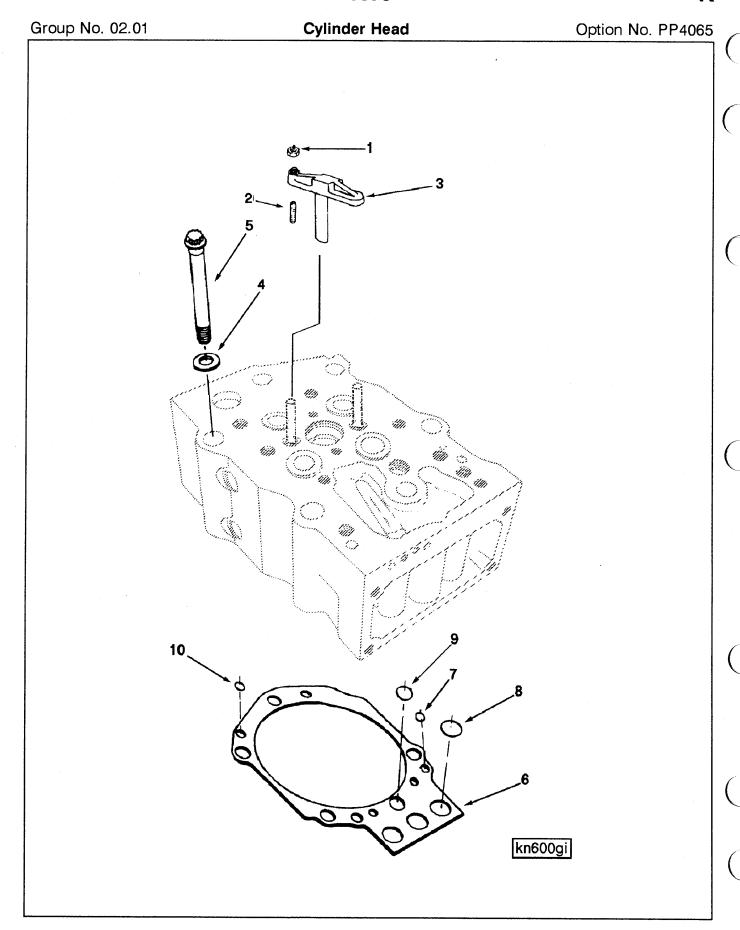


Group No. 02.01

Cylinder Head

Option No. PP4065

			Option No. PP4065	
Ref No.	Part Number	Part Name	Req	Remarks
		CYLINDER HEAD MOUNTING OPTION PP4065		
1 2 3 4 5 6 7 8 9	203131 3032697 3048620 205059 3032633 3177412 (205479) 205852 205855 205858 207448	Nut, Heavy Hexagon Screw, Crosshead Adjusting Crosshead, Valve Washer, Plain Screw, Twelve Point Cap Gasket, Cylinder Head Gasket, Cylinder Head Seal, Grommet	12 12 12 36 36 6 1 1 3	3/8 - 24 UNF 3/8 - 24 x 1 inch 3/4 - 16 X 8 inch
	3062493 3021465 3021466 3021467 3021468	Gasket, Cylinder Head Seal, Grommet Seal, Grommet Seal, Grommet Seal, Grommet	1 1 3 1 4	.020 Inch Oversize

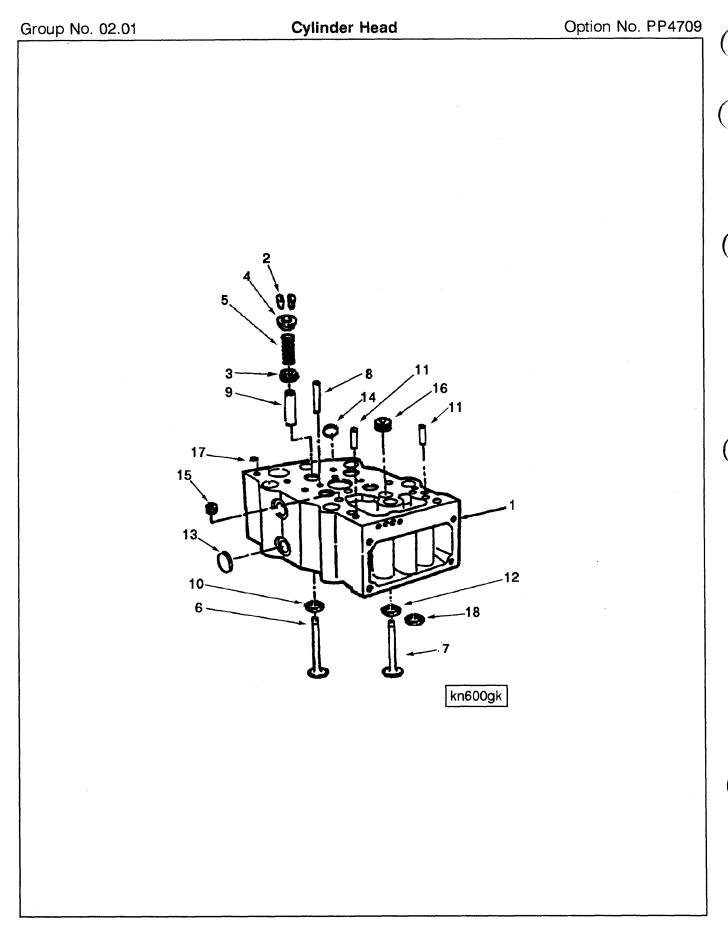

Group No. 02.01


Cylinder Head

Option No. PP4709


	up No. 02.01			Option No. PP4709
No.	Part Number	Part Name	Req	Remarks
Ref	3068402 (3176619) 205091 3001663 205094 205208 3035110 207241 205169 3202210 205093 68445 3026296 205401 206224 3002158 S-915-A 203933	Part Name CYLINDER HEAD OPTION PP4709 Head, Cylinder Head, Cylinder Collet, Valve Guide, Valve Spring Retainer, Valve Spring Spring, Valve Valve, Exhaust Valve, Intake Guide, Valve Crosshead Guide, Valve Stem Insert, Valve Pin, Groove Insert, Valve Plug, Expansion Plug, Expansion Plug, Pipe Plug, Pipe Plug, Expansion	16 1 8 4 4 4 2 2 2 2 2 2 2 8 2 1 1	T
	203933	Plug, Expansion		

Rocker Lever & Housing


Option No. SS4010

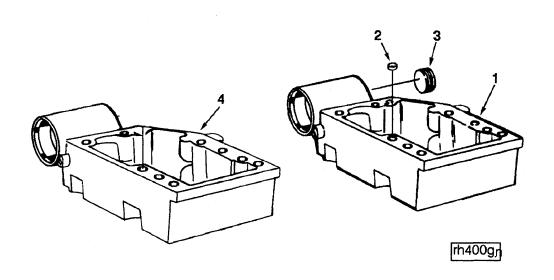

Ref No.	Part Number	Part Name	Req	Remarks
		LIFTING ARRANGEMENT OPTION SS4010		Includes bosses between rocker housings for lifting of engine. Rear rocker housing machined for mounting of air cleaner bracket.
1 2 3 4	3202196 205129 S-995 3202193	Housing, Rocker Lever Dowel, Ring Plug, Pipe Housing, Rocker Lever	1 6 1 5	

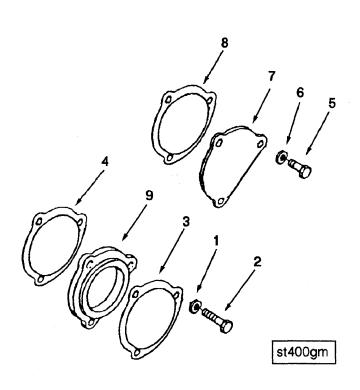


Ref No.	Part Number	Part Name	Req	Remarks
1 2 3 4 5 6 7 8 9 9	S-603 202159 206395 3031007 S-116 S-603 206389 3031007 206394	Part Name STARTER MOUNTING OPTION ST4011 Washer, Lock Screw, Twelve Point Cap Gasket, Starter Gasket, Starter Screw, Hexagon Head Cap Washer, Lock Cover, Starter Hole Gasket, Starter Spacer, Starting Motor	33 3 1 1 3 3 1 1 1 1	For SAE #1 flywheel housing with access slot and wet application. Mounts starter on right side of engine, facing flywheel. 5/8 inch 5/8 - 11 x 2 1/4 inches 5/8 - 11 x 1 1/2 inches 5/8 inch

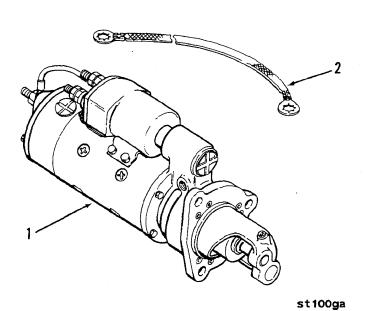

Ref Pa	art Number	Part Name	Req	Remarks
		STARTER		
		OPTION ST8023		24volt electric starter DR50 MT300 277.5 degrees with ground strap. Has right hand rotation, positive engagement and is an insulated Delco Remy starter. Not to be used on K19 engines requiring aluminum flywheel housings.
	21038 18924	Motor, Starting Wire, Ground	1 1	

NOTES

•	
•	
,	
·	
-	
-	
-	
	<u> </u>
-	
. <u>-</u>	
_	

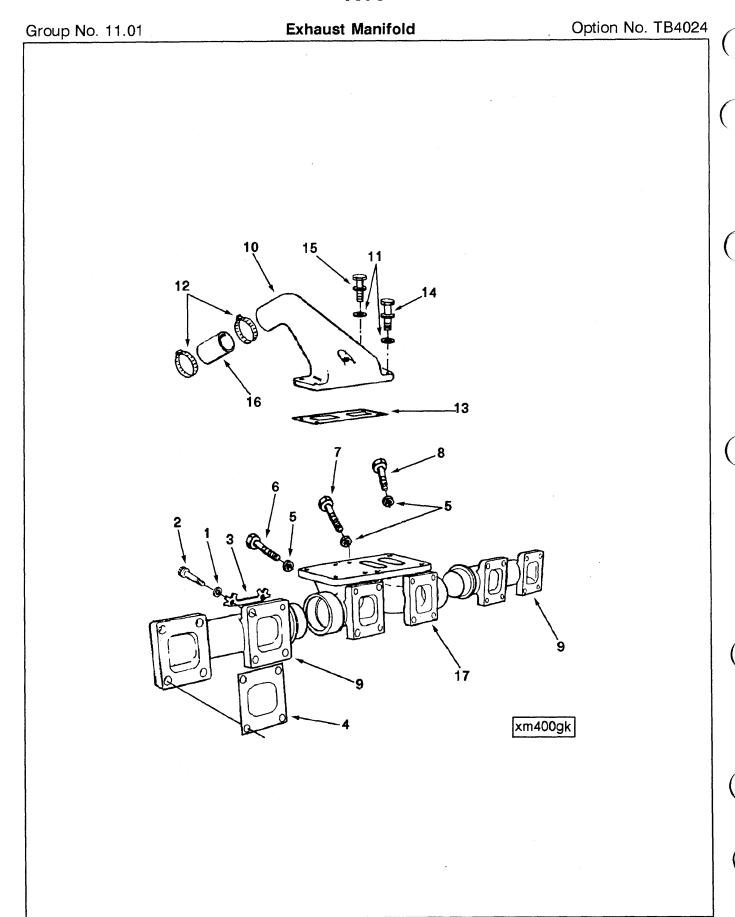


Group No. 11.01

Exhaust Manifold

Option No. TB4024


	aroup No. 11.01 Exnaust Manifold		Option No. 184024	
Ref No.	Part Number	Part Name	Req	Remarks
1 2	109594 197032	EXHAUST MANIFOLD/TURBO MTG OPTION TB4024 Washer, Plain Screw, Hexagon Head Cap	8 8	Dry exhaust manifold and air crossover for top mounted turbocharger with front out exhaust on KT only. Includes non-premium exhaust manifold mounting hardware. 7/16 - 14 x 1 1/2 inches
3 4 5 6 7 8 9 10	3001405 3043097 109594 197032 3001404 3202172 205186 3016140 127362	Lockplate Gasket, Exhaust Manifold Washer, Plain Screw, Hexagon Head Cap Screw, Hexagon Head Cap Screw, Hexagon Head Cap Manifold, Exhaust Connection, Air Crossover Washer, Plain	12 6 8 4 3 1 2 1 5	7/16 - 14 x 1 1/2 inches 7/16 - 14 x 1 1/2 inches 7/16 - 14 x 5 1/2 inches 7/16 - 14 x 5 inches
12 13 14 15 16 17	140315 206279 3012473 3012478 3016142 3202173	Clamp, T Bolt Gasket, Connection Screw, Captive Washer Cap Screw, Captive Washer Cap Hose, Plain Manifold, Exhaust	2 1 4 1 1	3/8 - 16 x 1 3/4 inches 3/8 - 16 x 1 1/2 inches

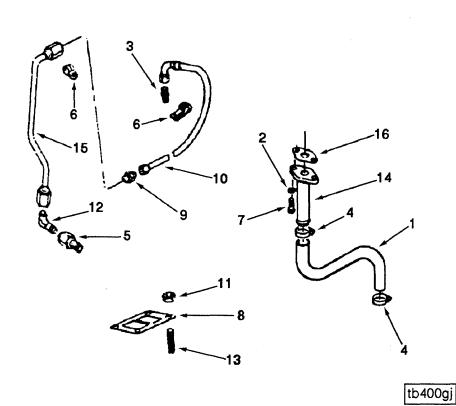

Ref No.	Part Number	Part Name	Req	Remarks
		TURBOCHARGER MOUNTING OPTION TB4735		Mounting and plumbing for top mounted Holset turbocharger with front out exhaust, dry or wet exhaust manifolds and without mounted torque converter cooler on KT or KTA.
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16	AS1602500NF S-604 S-1039-A 43828-A 118346 147991 191772 206576 206943 215195 219138 3003536 3010915 3200178 3200273 3202117	Hose Washer, Lock Connector, Male Clamp, Hose Union, Male Clip Screw, Twelve Point Cap Gasket, Turbocharger Union, Adapter Hose, Flexible Nut, Regular Hexagon Coupling, Elbow Hose Stud Tube, Tur Oil Drain Tube, Tur Oil Supply Gasket, Connection	1 2 1 2 1 1 1 4 1 4 1 1 1 1	3/8 - 16 - 1 1/4 inches

NOTES

,	
•	
•	
•	
-	
_	
-	
. •	

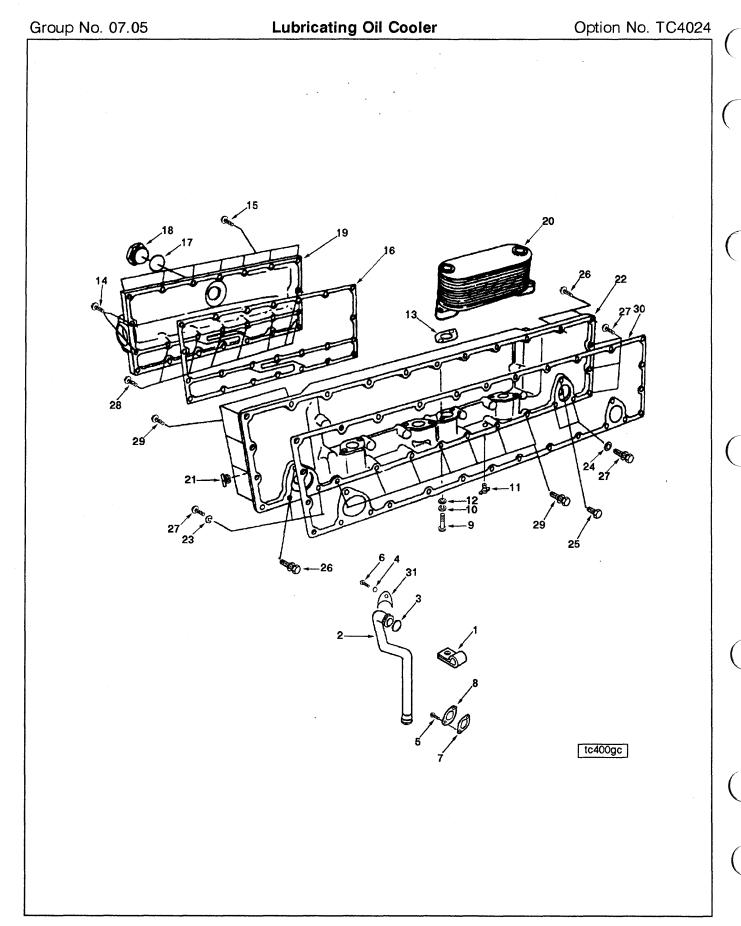


Group No. 07.05


Lubricating Oil Cooler

Option No. TC4024

	CU. 10 .UVI 41	Lubricating Oil Co	Joier	Option No. 1 C4024
Ref No.	Part Number	Part Name	Req	Remarks
Ref	3000900 3011298 70624 146162 3010596 3015283 3060912 3201884 3201155 S-103-C S-604 S-923-E 127362 206973 3012478 3042889 3065791 145540 206256 3200988 3201785 3202101 3202217 S-604 127362 205275 3033038 3040838 3042889 3042890 3200550 3201287	Clip Tube, Water Bypass Seal, O Ring Washer, Plain Screw, Captive Washer Cap Gasket, Connection Plate, Cover Cooler, Engine Cast Screw, Hexagon Head Cap Washer, Lock Draincock Washer, Plain Gasket, Oil Cooler Core Screw, Captive Washer Cap Screw, Captive Washer Cap Gasket, Tor Cnv Oil Cooler Seal, O Ring Plug, Threaded Cover, Lub Oil Cooler Core, Cooler Plug, Threaded Housing, Oil Cooler Washer, Lock Washer, Plain Screw, Twelve Point Cap Screw, Captive Washer Cap Gasket, Lub Oil Cir Hsg Clip		Remarks Cast iron engine oil cooler with provisions to plumb water by-pass tube to bottom of radiator tank. For use with engine oil filters mounted on fuel pump side. 3/8 - 16 x 1 1/4 inches 5/16 - 18 x 3/4 inches 3/8 - 24 x 3 3/4 inches 3/8 - 16 x 1 7/8 inches 3/8 - 16 x 1 5/8 inches 3/8 - 16 x 1 1/4 inches 3/8 - 16 x 1 5/8 inches 3/8 - 16 x 1 1/4 inches
	·			

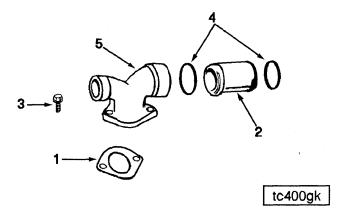

lo.	Part Number	Part Name	Req	Remarks
		OIL COOLER CONNECTION		
		OPTION TC4701		Water pump to lub oil cooler standard connection. For KT engines.
1 2 3 4 5	(AR45711) 205289 206998 3010596 3028291 3200211	Connection, Water Outlet Gasket, Wtr Trf Connection Tube, Water Transfer Screw, Captive Washer Cap Seal, O Ring Connection, Water Outlet	1 1 1 2 2 1	3/8 - 16 x 1 1/4 inches

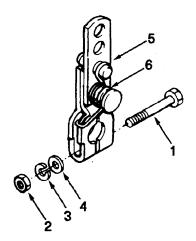

tl800gb


Ref No.	Part Number	Part Name	Req	Remarks
		THROTTLE LEVER OPTION TL8001		Two hole breakover type throttle lever with 0.34 inch diameter holes on 2.12 and 2.62 inch centers. Not compatible with VS fuel pump housing.
1 2 3 4 5 6	S-159-B S-251 S-600 70704 3048296 3024169	Screw, Hexagon Head Cap Nut, Regular Hexagon Jam Washer, Lock Washer, Plain Lever, Throttle Spring, Torsion	1 1 1 1 1 1	1/4-28 x 1 1/2 Inch 1/4-28

Water Filter Option No. WF4001 Group No. 08.08 wf400ga Ref **Part Number** Req **Part Name** Remarks No. CORROSION RESISTOR Single spin-on cartridge mounted on water pump housing. For cooling systems at or below 100 quart capacity. **OPTION WF4001** 3318319 Resistor, Corrosion Fleetguard WF2076


K19

K

Group No. 08.07.1 Water Connection Option No. WI4001

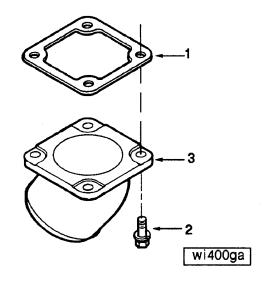

Ref No.	Part Number	Part Name	Req	Remarks
		WATER INLET CONNECTION OPTION WI4001		3.50 inch outside diameter water inlet connection mounted behind the water pump pointing down.
1 2 3	205288 3010595 3007701	Gasket, Wtr Trf Connection Screw, Captive Washer Cap Connection, Water Inlet	1 4 1	3/8 - 16 x 1 inch

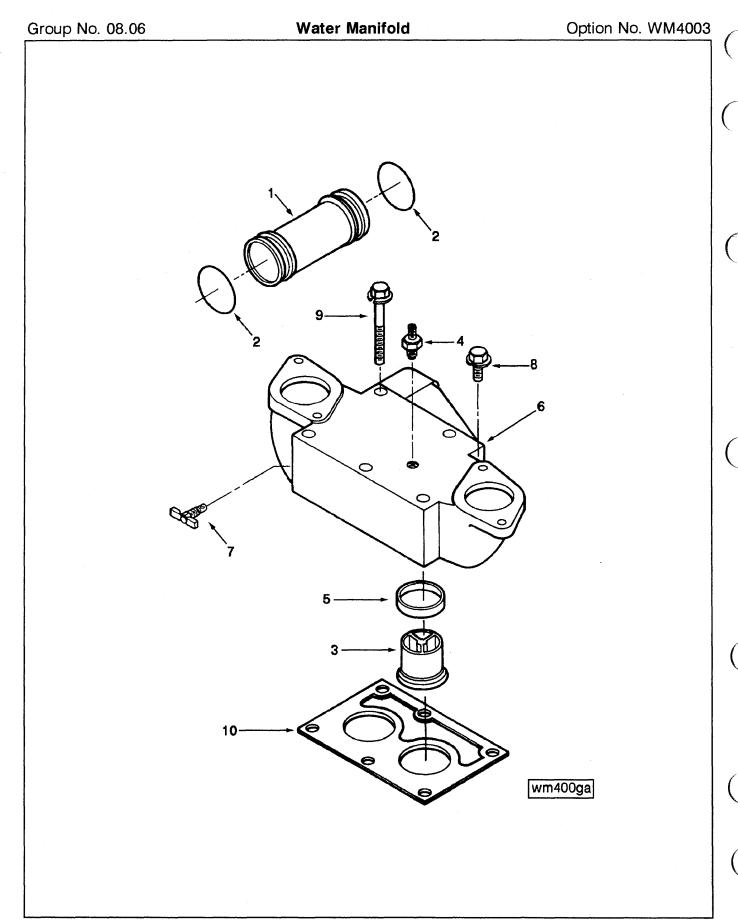

Group No. 08.06


Water Manifold

Option No. WM4003

Ref	up No. 08.06	water Manifold	T	Option No. WM400	
No.	Part Number	Part Name	Req	Remarks	
1 2 3 4 5 6 7 8 9	207233 3028291 201737 3016721 143950 186780 3010933 S-962-E 3010596 3010597 3010918	WATER MANIFOLD OPTION WM4003 Tube, Water Transfer Seal, O Ring Thermostat Housing, Thermostat Connector, Male Seal, Thermostat Housing, Thermostat Draincock Screw, Captive Washer Cap Screw, Captive Washer Cap Gasket, Thermostat Housing	5 10 2 1 1 2 1 1 1 5	Water transfer tubes for dry exhaust gear cover plate design. 3/8 - 16 x 1 1/4 inches 3/8 - 16 x 3 3/4 inches	

Water Connection

Option No. WO4002

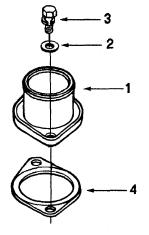


wo400ga

lef lo.	Part Number	Part Name	Req	Remarks
		WATER OUTLET CONNECTION		
		OPTION WO4002		Dual 2.5 inch water outlet connections pointing up.
1	3061003	Connection, Water Outlet	2 4	
2 3 4	S-602 3012470 3060912	Washer, Plain Screw, Captive Washer Cap Gasket, Connection	4 2	3/8-16 x 3/4 Inch
- 1				
l				
ļ				
-				
		·		

NOTES

end.	

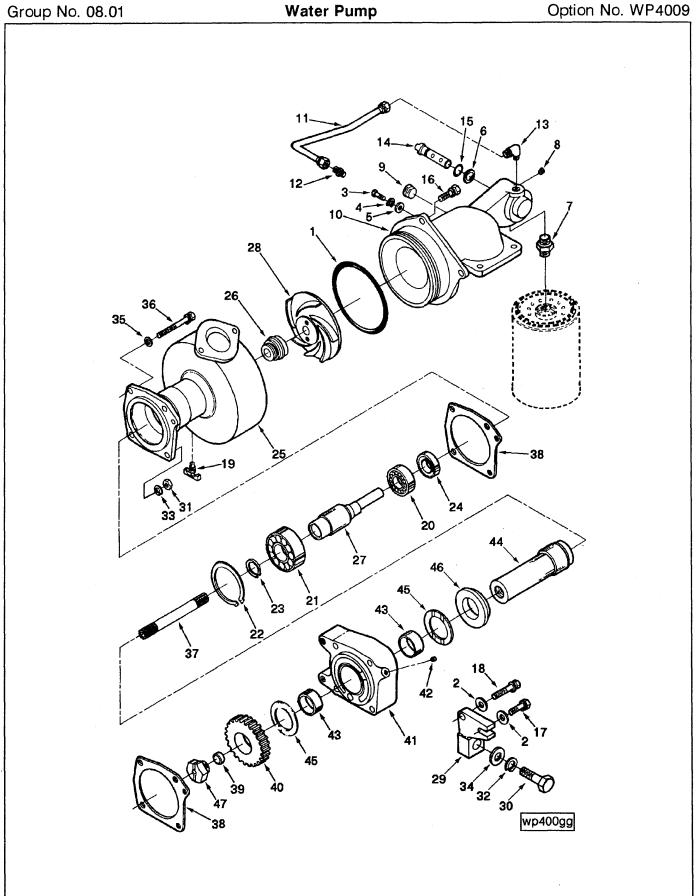

Group No. 08.01


Water Pump

Option No. WP4009

	ıp No. 08.01	Water Pump		Option No. WP4009
Ref No.	Part Number	Part Name	Req	Remarks
		WATER PUMP		
		OPTION WP4009		Water pump with provisions for pump
				mounted water filter. Gear cover plate design.
,	3011389 145623	Pump, Water Seal, O Ring	1 1	
1 2	3005594	Washer, Plain	2	
	3010529	Connection, Water Inlet	1	4/4 00 v 2/4 in th
3 4	S-114 S-600	Screw, Hexagon Head Cap Washer, Lock	1 1	1/4 - 20 x 3/4 inch
5	S-631	Washer, Plain	1	
6	205363 206963	Washer, Spring Adapter, Filter Head	1 1	
7 8	3008466	Plug, Pipe	'i	
9	3008469	Plug, Pipe	1	
10	3010181 3010704	Connection, Water Inlet Tube, Water Transfer	1 1	
12	3201982	Connector, Male	1	
13	3201983 3818849	Elbow, Male Adapter Shaft, Shutoff Valve	1 1	
14 15	3818885	Seal, O Ring	1	
16	3010596	Screw, Captive Washer Cap	3	3/8 - 16 x 1 1/4 inches
17 18	(3012472) 3012474	Screw, Captive Washer Cap Screw, Captive Washer Cap	1 1	3/8 - 16 x 1 1/2 inches 3/8 - 16 x 2 inches
,0	3022920	Pump, Water	1	
19	S-962-E S-16002	Draincock Bearing, Ball	1 1	
20 21	S-16069	Bearing, Ball		
22	70183	Ring, Retaining	1	
23 24	205258 206948	Ring, Retaining Seal, Oil	1 1	
25	206964	Body, Water Pump	1	
26	3033677 3042827	Seal, Water Pump Shaft, Water Pump	1	·
27	(205158)	Shaft, Water Pump	1	
	(3040833)	Shaft, Water Pump	1	
28 29	3056476 3036096	Impeller, Water Pump Brace, Water Pump	1 1	·
30	S-103-A	Screw, Hexagon Head Cap	1	5/8 - 11 x 2 inches
31	S-205 S-603	Nut, Regular Hexagon	1 1	
32 33	S-604	Washer, Lock Washer, Lock		
34	S-658	Washer, Plain	1	
35 36	127362 3012476	Washer, Plain Screw, Captive Washer Cap	3	3/8 - 16 x 3 inches
37	3040832	Shaft, Water Pump	1	1,1
38	3202283 3025 88 5	Gasket, Water Pump Shaft, Water Pump	2	
39	205498	Plug, Oil	1	
40	207251	Gear, Water Pump	1	
41 42	3007386 S-965-E	Support, Water Pump Plug, Pipe	1 1	
43	205156	Bushing	2	
44	(3007364) 3 80 1195	Support, Water Pump Shaft, Wtr Pump	1 1	
44	(3025887)	Shaft, Water Pump	1	
45	3026556	Bearing, Thrust	2	
46 47	3 0 34721 32 00 96 8	Retainer, Shaft Plug, Threaded		
		.		
İ				
			ــــــــــــــــــــــــــــــــــــــ	<u> </u>

Exhaust Connection

Option No. XS4003

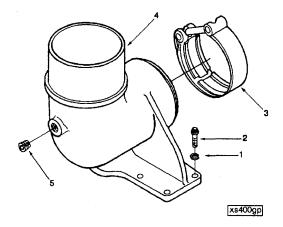

Ref No.	Part Number	Part Name	Req	Remarks
		EXHAUST ELBOW		
		OPTION XS4003		Exhaust connection-90 degree elbow with exhaust manifold mounting flange for 6inch piping.
1	S-604	Washer, Lock	4	
2 3 4	191772 201989 207175	Screw, Twelve Point Cap Clamp, V Band Connection, Exhaust Outlet	1 1	3/8 - 16 x 1 1/4 inches
5	S-915-A	Plug, Pipe	i	
l	,			
				·
			Ī	

Group No. 17.01

Gasket Sets

Option No. 000000

	up No. 17.01	Gasket Sets			Option No.	00000
Ref No.	Part Number	Part Name	Req		Remarks	
	3801004 100478 131026 201048 201049 205855 205855 205858 206277 206576 207038 207244 207448 3001340 3002150 3014304 3023066 3028291 3040720 3043097 3070789 3177412 205479 205855 205858 207448	UPPER ENGINE GASKET SET Set, Upper Engine Gasket Seal, O Ring Gasket, Oil Out Gasket, Oil Un Seal, Grommet Seal, Grommet Seal, Grommet Gasket, Intake Gasket, Air Compressor Gasket, Turbo Seal, O Ring Seal, Injector Seal, Grommet Seal, O Ring Seal, Ferrule Seal, Pertule Seal, O Ring Gasket, Valve Gasket, Exhaust Gasket, Valve Gasket, Cylinder Seal, Gromet	122116866111666666661314	KT-19		

Group No. 17.01

Gasket Sets

Part Number Part Name Req Remarks		up N o. 17.01	Gasket Sets		T
3015239 Set, Single Head Gsk. 1 100478 Seal, O Ring 12 131026 Seal, O Ring 12 205852 Seal, Grommet 1 1 2 205855 Seal, Grommet 3 3 206277 Gasket, Intake Manifold 6 206279 Gasket, Connection 1 206446 Gasket, Wtr Tf Connection 1 206576 Gasket, Turbocharger 1 207038 Seal, O Ring 1 207244 Seal, Injector 1 207448 Seal, Grommet 4 3001340 Seal, O Ring 12 3023066 Seal, O Ring 4 3026421 Seal, O Ring 4 3026421 Seal, O Ring 5 3040720 Gasket, Rocker Lever Cover 1 3040721 Gasket, Cam Fol Housing 1 3070789 Gasket, Exhaust Manifold 2 205479 Gasket, Cylinder Head 1 205852 Seal, Grommet 3 205855 Seal, Grommet 3 3179027 Gasket, Connection 3 3179027	No.	Part Number	Part Name	Req	Remarks
100478			HEAD GASKET SET - SINGLE		
		100478 131026 205852 205855 206277 206279 206446 206576 207038 207244 207448 3001340 3023066 3026421 3028291 3040720 3040721 3043097 3070789 3177412 205479 205852 205855 205858 3179027	Set, Single Head Gsk. Seal, O Ring Seal, O Ring Seal, Grommet Seal, Grommet Gasket, Intake Manifold Gasket, Connection Gasket, Wtr Trf Connection Gasket, Turbocharger Seal, O Ring Seal, Injector Seal, Grommet Seal, O Ring Gasket, Rocker Lever Cover Gasket, Cam Fol Housing Gasket, Exhaust Manifold Gasket, Rkr Lever Housing Gasket, Cylinder Head Gasket, Cylinder Head Seal, Grommet	12 12 1 3 6 1 1 1 1 4 2 5 1 1 1 1 1 2 1 3 1 3 1 1 1 1 1 1 1 1 1 1	

Group No. 17.01

Gasket Sets

Option No. 000000

	p No. 17.01	Gasket Sc		<u> </u>	Option	NO. 0000
ef O.	Part Number	Part Name	Red		Remarks	
1		ENGINE GASKET SET				
	3801006	Gasket Set, Engine		KT-19		
	67946	Washer, Plain	3			
1	70624	Seal, O Ring	2			
1	145536	Seal, O Ring	1 1			
-	145540	Seal, O Ring	2			
	145600	Seal, O Ring	1 1			
-	153518	Seal, Rectangular	4			
	163654	Seal, O Ring	2			
	176027	Gasket				
	205061	Gasket, Lub Pump	1 1			
	205239	Seal, Rectangular	1			
	205239	Seal, O Ring	1 1			
	205247	Gasket, Water				
ı	205289	Gasket, Water Outlet	1 1			
ł		Gasket, Scavenger Pump	1			
1	205791					
1	205794	Gasket, Barring	1 1			
	205827	Gasket, Barring	2			
	205898	Seal, O Ring	4			
	206973	Gasket, Cooler		1		
-	206978	Seal, Rectangular	1 1			
	207056	Gasket, Aftercooler				
	207058	Gasket, Thermostat	1			
1	207075	Gasket, Flange	1 1			
	207117	Gasket, Air Compressor	1			
1	207135	Seal, Rectangular	1			
	3001318	Gasket, Gear Cover	1			
1	3002330	Gasket, Seal Retainer	1 1			
ı	3005885	Seal, Rear Crank	1			
	3007380	Gasket, Hydraulic	1			
	3007441	Seal, O Ring	6			
-	3008403	Gasket, Oil Suction	1		4	
	3015067	Seal, O Ring	6			
-	3016788	Seal, Oil	2			
-	3016789	Seal, Fan Hub	1 1			
-	3016792	Seal, Front Crank	1			
-	3028291	Seal, O Ring	2			
	3029820	Seal, O Ring	1			
1	3037282	Gasket, Cover Plate	1			
	3040721	Gasket, Cam Cover	6			
	3040722	Gasket, Camshaft	1			
- {	3042586	Gasket, Hand Hole Cover	3			
- 1	3042588	Gasket, Oil Pan	1			
1	3042590	Gasket, Oil Pan	1			
	3042612	Gasket, Fan Hub	1			
	3065790	Gasket, Lub Oil Clr Hsg	1			
	3065791	Gasket, Tor Cnv Oil Cool	1 1			
	3069103	Gasket, Fuel Pump	1			
1	3069844	Strip, Rectangular	2	1		
	3200287	Seal, Keyway	1			
	3200977	Gasket, Lub Oil Fltr Cvr	1	1		
	3201125	Seal, O Ring	1			
	3201388	Gasket, Compressor	1			
	3201693	Gasket, Acc Dr. Suppt.	1			
-	3201783	Gasket, Water	2			
1	3201850	Gasket, Air Compressor	1			
	3202259	Gasket, Adapter	1			
	3202283	Gasket, Water Pump	1			
1	3913994	Seal, O Ring	1			
1	3919601	Gasket, Acc Drive Cover	1			
			Ì			
١		1	l			
丄				<u> </u>		

Group No. 17.01, 17.01.1

Repair Kits

17.0	. 	nepair Nits	>		
Ref No.	Part Number	Part Name	Req	Remarks	
	3028434 3028430 3028431	Kit, Liner Kit, Liner Kit, Liner	1 1 1	Standard .020 Inch O/S .040 Inch O/S	
	3028432	Kit, Liner		.060 Inch O/S	
1	3024726	Kit, Liner	lil	.083 Inch O/S]
	3028433	Kit, Liner	1	.095 Inch O/S	
	AR12270 AR12271	Shell, Main Bearing Std Shell, Main Bearing .010	1 A/R	Standard .010 Inch	
ĺ	AR12272	Shell, Main Bearing .020	A/R	.020 Inch	
	AR12273	Shell, Main Bearing .030	A/R	.030 Inch	
	3801004	Set, Upper Engine Gsk.	1		
ŀ	3801006	Set, Lower Engine Gasket	1		
-	3015239 3803315	Set, Single Head Gsk. Kit, Engine Piston	1 1		
1	3803472	Set, Piston Ring	lil		
1	3010242	Gasket Set, Fuel Pump	1		
	3803153 3803257	Kit W.P. Repair (Major) Kit, Turbo RePair	1 1		
	205840	Bearing, Connecting Rod	12	Standard	
	205841	Bearing, Connecting Rod	A/R	.010 Inch O/S	i
	205842	Bearing, Connecting Rod	A/R	.020 Inch O/S	
	205843	Bearing, Connecting Rod	A/R	.030 Inch O/S	
ł	3006236 3006237	Sleeve, Wear Sleeve, Wear	1 1		
	0000201	- C.0070, 170a.	'		
- 1					
l					
1	•			•	
i					
l					
1					
			ŀ		
	•				
į					

Option Index

		D
Option No.	•	Page No.
AD4007		
AD4014	Accessory Drive	3
BP4010		
	- · · · · · · · · · · · · · · · · · · ·	
	,	
	•	
	Rocker Levers	13
BR4002	Breather Location	21
DA4001	Vibration Damper	22
EE4026	•	
	Front Engine Support	
EM4703	<u> </u>	
FA4081		
FF4001		
FH4141		
FH8713	Mag Pickup Location Plug	36
FO4025	Oil Fill Location	37
FP4815		
FP4959		
FT40002	·	
FV8010		
FW4104	•	
HD4067		
IM4005	Intake Manifold	48
IM4716	Intake Manifold	49
IM4719	Intake Manifold Mounting	50
LF4011	Oil Filter	51
OB4091		
OB4841	·	
OB4935		
	•	
OP4022		
OP4716		
PP4065		
, , , , , , , , , , , , , , , , , , , ,	Cylinder Head Mounting	67
	Injector	63
	Piston & Connecting Rod	60
·	Turbocharger	65
PP4709		
SS4010	•	
ST4011	•	
ST8023		
TB4024		
TB4735		
TC4024		
TC4701	Oil Cooler Connection	80
TL8001		
WF4001		
WI4001		
WM4003		
WO4002		
WP4009	. Water Pump	89

Option No.	Description	Pag	ge No.
X\$4003	Exhaust Elbow		90

Part No.	Description	Page No.	Part No.	Description	Page No.
AR10626	Shaft, Cam Follower	15	67946	Washer, Plain	93
AR12110	Damper, Fuel Pump & Mtg.	39	68138	Connector, Male	41
AR12270	Shell, Main Bearing	11, 94	68445	Pin, Groove	5, 69
AR12271	Shell, Main Bearing	11, 94	68908	Lockplate	61
AR12272	Shell, Main Bearing	11, 94	69324	Washer, Plain	
				•	41
AR12273	Shell, Main Bearing Camshaft	11, 94	69521	Bushing	17
AR45075		61	69 533	Stop, Actuator	51
AS1003000SS		33	69558	Dowel, Pin	60
AS1602000NF		53	70183	Ring, Retaining	89
AS1602500NF		76	70624	Seal, O Ring	79 , 93
S-103-A	Screw, Hexagon Head Cap	5, 35, 89	70645	Dowel, Pin	27
S-103-C	Screw, Hexagon Head Cap	79	70704	Washer, Plain	41, 81
S-103-D	Screw, Hexagon Head Cap	17, 47, 50	70760	Dowel, Pin	17
S-106	Screw, Hexagon Head Cap	25	708 9 7	Nut, Lock	25
S-112	Screw, Hexagon Head Cap	61	100478	Seal, O Ring	41, 91, 92
S-113	Screw, Hexagon Head Cap	25	102957	Dowel, Diamond	27
S-114	Screw, Hexagon Head Cap	89	107948	Dowel, Diamond	17
S-116	Screw, Hexagon Head Cap	35, 71	107 9 81	Cap, Filler	37
S-123-A	Screw, Hexagon Head Cap	47	108602	Screw, Hexagon Head Cap	13
S-125	Screw, Hexagon Head Cap	13	109594	Washer, Plain	75
S-126	Screw, Hexagon Head Cap	17	111445	Washer, Lock	25
S-127-C	Screw, Hexagon Head Cap	5	118226	Screw, Socket Head Cap	41
S-129	Screw, Hexagon Head Cap	57	118346	Union, Male	76
S-140	Screw, Hexagon Head Cap	41	123204	Screw, Hexagon Head Cap	50
S-141	Screw, Hexagon Head Cap	17, 48	124921	Dowel	5
S-156-B	Screw, Hexagon Head Cap	41	127018	Washer, Plain	41
S-159-B	Screw, Hexagon Head Cap	81	127362	Washer, Plain	5, 15, 25, 29,
S-173-A	Screw, Hexagon Head Cap	27			41, 48, 50
S-181-C	Screw, Hexagon Head Cap	57	128006	Washer, Plain	41
S-189-C	Screw, Socket Head Cap	43	129069	Nut, Lock	57
S-199-A	Screw, Hexagon Head Cap	17	129768	Spring, Valve	43
S-199-B	Screw, Hexagon Head Cap	29	129826	Body, Shutoff Valve	43
S-205	Nut, Regular Hexagon	38, 89	129838	Knob	43
S-212	Nut, Regular Hexagon	13	129839	Shield, Shutoff Valve	43
S-217	Nut, Heavy Hexagon	41	129859	Elbow, Male Union	33
S-251	Nut, Regular Hexagon Jam	81	129886	Body, Shutoff Valve	43
S-253	Nut, Regular Hexagon Jam	25	129888	Seal, Rectangular Ring	43
S-302	Key, Plain Woodruff	61	13 008 3	Bearing, Thrust	8
S-316	Key, Plain Woodruff	3, 38	131026	Seal, O Ring	9 1, 92
S-600	Washer, Lock	81, 89	132770	Bushing	27
S-602	Washer, Plain	29 , 38, 57, 86	134076	Solenoid	43
S-603	Washer, Lock	5, 27, 35, 71,	137868	Screw, Hexagon Head Cap	50
0.00.		89	137890	Screw, Hexagon Head Cap	57
S-604	Washer, Lock	15, 17, 29, 38,	137980	Screw, Hexagon Head Cap	59
0.007		47, 48, 50	140315	Clamp, T Bolt	75
S-607	Washer, Lock	41	143950	Connector, Male	49, 85
S-608	Washer, Lock	22	145536	Seal, O Ring	30, 93
S-609	Washer, Lock	59	145540	Seal, O Ring	79, 93
S-610	Washer, Lock	41, 57	145600	Seal, O Ring	93
S-622	Washer, Plain	59	145623	Seal, O Ring	89
S-631	Washer, Plain	35, 89	146162	Washer, Plain	79
S-658	Washer, Plain	5, 89	147416	Plug, Expansion	_5
S-689	Washer, Plain	59	147991	Clip	76
S-915-A	Plug, Pipe	69, 90	153518	Seal, Rectangular Ring	5 9 , 9 3
S-923-E	Draincock	79 25 20	154087	Seal, Rectangular Ring	43
S-962-E	Draincock	85, 89	156810	Breather, Crankcase	21
S-965-E	Plug, Pipe	27, 89	158829	Screw, Hexagon Head Cap	25
S-1039-A	Connector, Male	76	161737	Pin, Roll	51
S-1040-A S-16002	Elbow, Male Adapter	27 80	163654 167157	Seal, O Ring	93
S-16002 S-16069	Bearing, Ball Bearing, Ball	89 80	167157 168306	Ball, Check	63
4851	Gear, Flywheel Ring	89 44	172648	Screw, Slotted Set Seal, Rectangular Ring	13 35
9226	Dowel, Flywheel Hsg	5, 3 5	173086	Gasket, Injector	63
43828-A	Clamp, Hose	5, 35 53, 76	174299	Retainer, Screen	63
60408-L	Dowel, Pin	33, 76 5	175830	Plug, Expansion	5 5
67211	Dowel, Rear Main Bearing	5	176027	Gasket	93
67684	Washer, Plain	43	176288	Tee, Female Adapter	41
-		-10	0200	. Do, . Diliato / touptor	71

Part No.	Description	Page No.	Part No.	Description	Page No.
181213	Elbow, Plain Adapter	41	205258	Ring, Retaining	89
181466	Washer, Lock	43	205269	Ring, Retaining	60
186780	Seal, Thermostat	85	205275	Screw, Twelve Point Cap	79
187556	Screw, Fillister Head	43	205288	Gasket, Wtr Trf Connection	8 3, 9 3
190397	Sleeve, Wear	3	205289	Gasket, Wtr Trf Connection	80, 93
191772	Screw, Twelve Point Cap	5, 76, 90	205298	Tube, Lub Oil Transfer	5
193736	Seal, O Ring	63	205301	Shaft, Cam Follower	15 (
194037	Socket, Rocker Lever	13	205345	Pin, Roll	17, 51
197032	Screw, Hexagon Head Cap	75	205346	Spring, Compression	51
200384	Bearing, Roller	30	205347	Plunger, Bypass Valve	51
200861	Washer, Plain	44	205348	Plunger, Pst Cooling Valve	51
201048	Gasket, Connection	65, 91	205350	Plug, Retainer	51
201049	Gasket, Connection	65, 91	205363	Washer, Spring	89
201737	Thermostat	85	205366	Dowel, Diamond	5
201989	Clamp, V Band	90	205375	Screw, Twelve Point Cap	29
202159	Screw, Twelve Point Cap	71	205393	Screw, Twelve Point Cap	13
203131	Nut, Heavy Hexagon	67	205394	Screw, Twelve Point Cap	13
203310 203426	Washer, Plain	25 63	205401 205409	Plug, Expansion	69 35
203933	Pin, Roll Plug, Expansion	13, 69	205409	Screw, Hexagon Head Cap Lockwire, Cam Roller Pin	15
205021	Cap, Main Bearing	10, 09	205439	Ring, Retaining	15
205022	Cap, Main Bearing	5	205462	Link, Injector Plunger	18
205023	Cap, Main Bearing	5	205463	Adapter, Injector	63
205052	Shaft, Idler	17	205464	Spring, Compression	63
205057	Body, Lubricating Oil Pump	17	205479	Gasket, Cylinder	91, 92
205059	Washer, Plain	5, 22, 67	205498	Plug, Oil	89
205061	Gasket, Lub Oil Pump	17, 93	205791	Gasket, Scavenger Pump	93
205065	Shaft, Lub Pump Drive	17	205794	Gasket, Barring	93
205068	Pin, Cam Follower Roller	15	205827	Gasket, Barring	93
205071 205075	Pin, Cam Follower Roller	15 5	205840 205841	Bearing, Connecting Rod	60, 94 60, 04
205073	Cap, Main Bearing Plunger, Prs Regulator	17	205842	Bearing, Connecting Rod Bearing, Connecting Rod	60, 94 60, 94
205091	Collet, Valve	69	205843	Bearing, Connecting Rod	60, 94
205093	Insert, Valve	69	205852	Seal, Grommet	67, 91, 91, 92
205094	Retainer, Valve Spring	69	205855	Seal, Grommet	67, 91, 91, 92
205112	Bearing, Thrust	11	205858	Seal, Grommet	67, 91, 91, 92
205115	Seal, Crevice	7	205898	Seal, O Ring	17, 93
205126	Washer, Plain	60	206202	Nut, Jam	25
205128	Washer, Plain	13	206217	Stud	27
205129	Dowel, Ring	70	206218	Stud	27
205133 205140	Bushing Main	27 11	206224 206256	Plug, Expansion	69 79
205140	Bearing, Main Bearing, Main	11	206236	Plug, Threaded Gasket, Intake Manifold	50, 91, 92
205142	Bearing, Main	11	206277	Gasket, Connection	75, 91, 92
205143	Bearing, Main	11	206343	Support, Front Engine	27
205150	Bearing, Main	11	206389	Cover, Starter Hole	71
205151	Bearing, Main	• 11	206394	Spacer, Starting Motor	71
205152	Bearing, Main	11	206395	Gasket, Starter	71
205153	Bearing, Main	11	206397	Bushing	44
205156	Bushing	89	206446	Gasket, Wtr Trf Connection	92
205160	Bearing, Main	11	206576	Gasket, Turbocharger	65, 76, 91, 92
205161 205162	Bearing, Main	11 11	206881 206904	Capscrew, Twelve Point Key, Woodruff	22 11
205162	Bearing, Main Bearing, Main	11	206943	Union, Adapter	76
205169	Guide, Valve Crosshead	69	206948	Seal, Oil	89
205170	Bearing, Main	11	206963	Adapter, Filter Head	89
205171	Bearing, Main	11	206964	Body, Water Pump	89
205172	Bearing, Main	11	206973	Gasket, Oil Cooler Core	79, 93
205173	Bearing, Main	11	206978	Seal, Rectangular	93
205186	Manifold, Exhaust	75	206996	Belt, V	25
205200	Pin, Piston	60	206998	Tube, Water Transfer	80
205208	Spring, Valve	69	207038	Seal, O Ring	91, 92
205216	Seal, O Ring	63 15	207056	Gasket, Aftercooler	93
205227 205239	Plug, Expansion Seal Rectangular Ring	35, 93	207058 207075	Gasket, Thermostat Gasket, Flange	93 93
205239	Seal, Rectangular Ring Seal, Rectangular Strip	55, 93 59	207075	Support, Fan	30
205247	Seal, O Ring	35, 9 3	207112	Flange, Weld	41
	, - ······ 3	55, 55		· ·g-, •••	• •

Part No.	Description	Page No.	Part No.	Description	Page No.
207117	Gasket, Air Compressor	41, 9 3	3006237	Sleeve, Wear	94
207135	Seal, Rectangular Ring	17, 9 3	3006485	Cover, Flywheel Housing	35
207175	Connection, Exhaust Outlet	90	3006696	Clamp, Injector	18
207226	Bushing	13	3006774	Bracket, Alternator	25
207233	Tube, Water Transfer	8 5	3007170	Spring, Piston Cool VIv	51
207241	Valve, Intake	6 9	3007380	Gasket, Hydraulic Pump	47, 9 3
207244	Seal, Injector	18, 91, 92	3007386	Support, Water Pump	89
207245	Retainer, Injector Cup	63	3007441	Seal, O Ring	93
207248	Gear, Camshaft	61	3007517	Nozzle, Piston Cooling	5
207251	Gear, Water Pump	89	3007632	Plug, Expansion	5
207252	Gear, Lubricating Oil Pump	17	3007701	Connection, Water Inlet	83
207253	Gear, Accessory Drive	38	3007971	Bearing, Camshaft Thrust	61
207259	Gear, Crankshaft	11	3008403	Gasket, Oil Suc Connection	57, 93
207344	Bushing	13	3008466	Plug, Pipe	50, 8 9
207373	Cover, Camshaft	5, 6 1	3008468	Plug, Pipe	
207374	Baffle, Oil	35	3008469		48, 57
207376	Gasket, Oil Drain	35	3008479	Plug, Pipe	48, 89
207378	Tube, Water Transfer	48	3008470	Plug, Pipe	5, 35, 51, 57
207442	Connection, Fuel Block	41	3009512	Screen, Filter	63
207448	Seal, Grommet	67, 91, 91, 92	3009620	Support, Accessory Drive Spring, Engine Barring	38 27
207527	Screw, Twelve Point Cap	8	3009631	Cover, Camshaft	15, 37
208084	Rivet	13	3010181	Connection, Water Inlet	15, 37 89
210029	Capscrew, Twelve Point	22	3010242	Gasket Set, Fuel Pump	94
212013	Head, Fuel Filter	33	3010247	Cover, Valve	21
213559	Socket, Cam Follower	15	3010396	Cover, Rocker Lever	21
21 51 9 5	Hose, Flexible	76	3010510	Seal, O Ring	63
217322	Damper, Vibration	22	3010529	Connection, Water Inlet	89
21 90 65	Baffle, Breather	21	3010595	Screw, Captive Washer Cap	33, 35, 53, 57,
219138	Nut, Regular Hexagon	76		,,	83
553 8 56	Gasket, Drain Plug	36	30105 9 6	Screw, Captive Washer Cap	25, 29, 33, 79,
3000175	Hub, Jaw Coupling	38		·	80, 85, 89
3000204	Washer, Copper	57	3010597	Screw, Captive Washer Cap	2 5, 8 5
3000266	Shaft, Shutoff Valve	43	3010704	Tube, Water Transfer	89
3000508	Tube, Oil Gauge	52	3010915	Stud	76
3000528 3000900	Nut, Spring Clip	21	3010918	Gasket, Thermostat Hous-	0-
3001196	Bearing, Thrust	79 11	2010022	ing	8 5
3001197	Bearing, Thrust	11	3010933 3011046	Housing, Thermostat	8 5 57
3001275	Hub, Fan	30	3011076	Connection, Oil Suction Seal, D Ring	7
3001318	Gasket, Gear Cover	93	3011298	Tube, Water Bypass	7 9
3001340	Seal, O Ring	41, 91, 9 2	3011389	Pump, Water	89
3001404	Screw, Hexagon Head Cap	75	3011693	Plate, Cover	50
3001405	Lockplate	75	3011716	Screw, Captive Washer Cap	53
3001658	Seal, Injector	18	3012467	Washer, Plain	30
30016 59	Seal, Injector	18	3012470	Screw, Captive Washer Cap	86
3001660	Seal, Injector	18	3012472	Screw, Captive Washer Cap	47
3001663	Guide, Valve Spring	69	3012473	Screw, Captive Washer Cap	75
3001811	Screw, Twelve Point Cap	41	3012474	Screw, Captive Washer Cap	89
3002150	Seal, Ferrule	41, 91	3012475	Screw, Captive Washer Cap	59
3002158 3002330	Plug, Pipe	69	3012476	Screw, Captive Washer Cap	29, 89
3002331	Gasket, Seal Retainer	93	3012478	Screw, Captive Washer Cap	41, 59, 75, 79
3002331	Pulley, Alternator Cover, Hand Hole	2 53	3012481 3013265	Screw, Captive Washer Cap	59 60
3002834	Bushing	5	3013786	Screw, Connecting Rod Cap	60
3002886	Screw, Cam Follower Shaft	15	3014103	Plug, Pipe Washer, Plain	41, 51, 59 38
3002993	Dowel, Ring	15	3014226	Shim	7
3003123	Insert, Pump Drive	47	3014227	Shim	7
3003536	Coupling, Elbow Hose	76	3014228	Shim	7
3003933	Cup, Injector	63	3014229	Shim	7
3004684	Gear, Bushing Cam Idler	8	3014230	Shim	7
3004685	Gear, Bushing Wtr Pump Id	8	3014304	Seal, Rectangular Ring	50, 91
3004686	Bushing	8	3014668	Seal, D Ring	7
3005357	Crankshaft	11	3014695	Pulley, Accessory Drive	3
3005594	Washer, Plain	89	3014766	Screw, Captive Washer Cap	5, 27, 41, 61
3005885 3005886	Seal, Rear Crank	93 35	3015067	Seal, O Ring	5, 93
3006236	Seal, Oil Sleeve, Wear	35 94	3015239	Set, Single Head Gsk.	92, 94
0000200	Gieeve, vveai	94	3015283	Screw, Captive Washer Cap	79

Part No.	Description	Page No.	Part No.	Description	Page No.
3015525	Ring, Retaining	27	3034721	Retainer, Shaft	89
3015866	Flywheel	44	30 35110	Valve, Exhaust	6 9
3016140	Connection, Air Crossover	75	3 0 3534 6	Valve, Shutoff	43
3016142	Hose, Plain	75	3 035 6 24	Screw, Captive Washer Cap	59
30166 75	Injector	6 3	3036027	Bracket, Filter	3 3
3016721	Housing, Thermostat	85	3036096	Brace, Water Pump	89
3016734	Drive Accessory	38	3036805	Housing, Flywheel	3 5 (
3016788	Seal, Oil	27, 93	3037282	Gasket, Cover Plate	27, 93
3016789	Seal, Oil	3 0, 93	3037292	Barrel & Plunger	6 3
3016792	Seal, Oil	27, 93	3039163	Lever, Cam Follower	15
3016794	Seal, Oil	27	3039164	Lever, Cam Follower	15
3016825	Roller, Cam Follower	15	3040720	Gasket, Rocker Lever Cover	21, 91, 92
3016826	Roller, Cam Follower	15	3040721	Gasket, Cam Fol Housing	15, 92, 93
3017318	Cover, Gear	27	3040722	Gasket, Camshaft Cover	5, 61, 93
3017346	Washer, Plain	47	3040832	Shaft, Water Pump	89
3017961	Rod, Push	15	3040 83 7	Screw, Captive Washer Cap	15
3018914	Guide, Barring Shaft	27	3040838	Screw, Captive Washer Cap	15, 30 , 51, 57,
3018924	Wire, Ground	72		,,,	79
3019152	Gear, Engine Barring	27	3042586	Gasket, Hand Hole	5 3 , 93
3019153	Shaft, Barring	27	3042587	Gasket, Oil Pan Adapter	[′] 5 9
3019961	Nut, Plug	27	3042588	Gasket, Oil Pan	93
3021038	Motor, Starting	72	3042590	Gasket, Oil Pan	59, 9 3
3021465	Seal, Grommet	67	3042612	Gasket, Fan Hub	30, 9 3
3021466	Seal, Grommet	67	3042827	Shaft, Water Pump	89
3021467	Seal, Grommet	67	3042889	Screw, Captive Washer Cap	79
3021468	Seal, Grommet	67	3042890	Screw, Captive Washer Cap	3 0, 79
3021977	Idle Spring Pack	39	3043097	Gasket, Exhaust Manifold	75, 91, 9 2
3022920	Pump, Water	89	3043909	Bushing	60
3023066	Seal, O Ring	65, 91, 92	3043911	Rod, Engine Connecting	60
3023129	Seal, Dust	6 5	3044413	Screw, Captive Washer Cap	21, 38
3024169	Spring, Torsion	81	3044523	Plate, Gear Cover	27
3024726	Kit, Liner	7, 94	3044762	Gasket, Gear Cover	29
3025451	Ring, Oil Piston	60 5 42 51	3045136	Washer, Plain	38
3025458	Plug, Pipe	5, 43, 51	3045137	Screw, Hexagon Head Cap	38
3025460	Plug, Pipe	5, 27, 38, 41, 59	3045229 3046200	Shaft, Accessory Drive	38 41
3025482	Screw, Twelve Point Cap	5 5	3046201	Spider, Jaw Coupling Seal, O Ring	5 3 , 59
3025885	Shaft, Water Pump	89	3046202	Plug, Threaded	27, 53, 59
3026296	Insert, Valve	69	3046227	Ring, Compression Piston	60
3026421	Seal, O Ring	92	3046869	Plug, Threaded	57
3026556	Bearing, Thrust	89	3046942	Plug, Threaded	57
3026595	Ring, Compression Piston	60	3046943	Seal, O Ring	57
3028291	Seal, O Ring	48, 80, 85, 91,	3047548	Cover, Lub Oil Pump	17
	,	92, 93	3047549	Pump, Lubricating Oil	17
3028324	Valve, Check	41	3048296	Lever, Throttle	81
3028325	Valve, Check	41	3048341	Gasket, Fuel Pump	41
3028347	Barrel Plug Assembly	39	3048620	Crosshead, Valve	67
3028430	Kit, Liner	7, 94	3049543	Gear, Lubricating Oil Pump	17
3028431	Kit, Liner	7, 94	3053476	Lever, Rocker	13
3028432	Kit, Liner	7, 94	3053477	Lever, Rocker	13
3028433	Kit, Liner	7, 94	3053478	Lever, Rocker	13
3028434	Kit, Liner	7, 94	3056476	Impeller, Water Pump	89
3029820	Seal, O Ring	51, 93	3057139	Rod, Push	15
3030267	Fuel Pump Front Cover	39 43	3059831	Plug, Drive	27
3030970	Disc, Valve	43 71	3060545 3060695	Block, Cylinder	5
3031007 3031404	Gasket, Starter Connector, Tube	41	3060703	Fuel Pump Housing Assembly, Fuel Pump	39 39
3032633	Screw, Twelve Point Cap	5, 67	3060703	Gasket, Connection	79, 8 6
3032697	Screw, Crosshead Adjusting	5, 67 67	3061003	Connection, Water Outlet	79, 86 86
3032872	Union, Male	41	3062415	Spring, Compression	17
3033023	Elbow, Male Union	41	3062493	Gasket, Cylinder Head	67
3033024	Elbow, Male Union	41	3064700	Plate, Clamping	57
3033038	Screw, Captive Washer Cap	38 , 59, 79	3064701	Plate, Clamping	57
3033677	Seal, Water Pump	89	3064724	Dipstick	54
3033822	Screw, Captive Washer Cap	5	3065684	Tube, Oil Gauge	52
3034217	Fuel Pump Gear Assembly	3 9	3065723	Screw, Captive Washer Cap	59
3034578	Adapter, Filter Head	51	3065790	Gasket, Lub Oil Clr Hsg	93

Part No.	Description	Page No.	Part No.	Description	Page No.
3065791	Gasket, Tor Cnv Oil Cooler	79, 93	3202153	Adapter, Oil Pan	57
3065950	Screw, Captive Washer Cap	21	3202155	Manifold, Air Intake	48
3066528	Pulley, Alternator	25	3202172	Screw, Hexagon Head Cap	75
3066877	Camshaft	61	3202173	Manifold, Exhaust	75
3068402	Head, Cylinder	69	3202193	Housing, Rocker Lever	70
3069103	Gasket, Fuel Pump	93	3202196	Housing, Rocker Lever	70
3069844	Strip, Rectangular	93	3202206	Nut, Lock	30
3070789	Gasket, Rocker Lever	91, 92	3202210	Guide, Valve Stem	69
3070961	Screw, Hexagon Head Cap	18	3202217	Housing, Oil Cooler	79
3176773	Shaft, Rocker Lever	13	3202259	Gasket, Adapter	57, 93
3177412	Gasket, Cylinder Head	67, 91, 92	3202283	Gasket, Water Pump	89, 93
3179027	Gasket, Connection	92	3203694	Adapter, Crankshaft	22
3200069	Bracket, Check Valve	41	3251706	Screw, Head Locking	44
3200070	Brkt Check VIv	41	3279794	Seal, O Ring	43
3200103	Tube, Fuel Supply	41	3315847	Filter, Fuel	33
3200178	Tube, Tur Oil Drain	76	3318319	Resistor, Corrosion	82 65
3200211	Connection, Water Outlet	80	3502449 3503335	Seal, Rectangular Ring	65 65
3200273	Tube, Tur Oil Supply	76	3504967	Nut, Regular Hexagon Washer, Plain	65 65
3200287	Seal, Keyway	3, 93	3519535	Nut, Lock	65
3200386	Clamp, Tube	41	3519623	Collar, Thrust	65
3200387	Clamp, Tube	41	3519627	Bearing, Turbocharger	65
3200405	Tube, Fuel Supply	41	3519641	Ring, Retaining	65
3200414	Bracket, Oil Tube	37	3519783	Shield, Turbocharger Heat	65
3200425	Tube, Fuel Drain	41	3521033	Shaft & Wheel	65
3200550	Gasket, Lub Oil Clr Hsg	79	3521174	Housing, Turbine	65
3200630	Support, Thm Housing	48	3521225	Screw, Hexagon Head Set	65
3200642	Plate, Clamping	27	3521442	Seal, Split Ring	65
3200706	Clip	57	3522631	Clamp, V Band	6 5
3200707	Brace, Tube	57	3522904	Lockplate	65
3200772	Washer, Plain	8, 47	3523306	Bearing, Tur Thrust	65
3200934	Plug, Retainer	17	3523412	Seal, Split Ring	65
3200965	Lube Oil Filter Head	51 89	3523429	Housing, Tur Bearing	65
3200968 3200977	Plug, Threaded	51, 93	3523980	Slinger, Oil	65
3200977	Gasket, Lub Oil Fil Cover Cover, Lub Oil Cooler	79	3524418	Shim	65
3201060	Cover, Hand Hole	53	3524419	Baffle, Oil	6 5
3201082	Crankshaft, Engine	11	3524862	Diffuser, Turbocharger	65 65
3201115	Tube, Fuel Supply	41	3525073 3525504	Screw, Hexagon Head Set Kit, Turbo	65 65
3201125	Seal, O Ring	27, 51, 93	3801004	Set, Upper Engine Gasket	91, 94
3201128	Nut, Regular Hexagon	29	3801006	Gasket Set, Engine	93, 94
3201155	Cooler, Engine Cast	79	3801195	Shaft, Wtr Pump	89
3201185	Link, Adjusting	25	3803015	Kit, Turbo	65
3201186	Link, Adjusting	25	3803153	Kit W.P. Repair (Major)	94
3201187	Link, Adjusting	25	3803257	Hc-5a Bearing/seal Kit	65, 94
3201188	Link, Adjusting	25	3803315	Kit, Engine Piston	60, 94
3201287	Clip	79	3803472	Set, Piston Ring	60, 94
3201388	Gasket, Flange	50, 93	3818849	Shaft, Shutoff Valve	89
3201517	Gasket, Rkr Lever Housing	13	381888 5	Seal, O Ring	89, 9 2
3201583	Plug, Threaded	51	3913994	Seal, O Ring	93
3201609	Cover, Hyd Pump Flange	47	3919601	Gasket, Acc Drive Cover	93
3201614	Spacer, Mounting	41			
3201693 3201737	Gasket, Acc Drive Suppt. Tube, Fuel Drain	38, 93 41			
3201749	Gear & Shaft	30			
3201750	Hub, Fan	30			
3201759	Screw, Hexagon Head Cap	36			
3201783	Gasket, Water	93			
3201785	Core, Cooler	79			
3201850	Gasket, Air Compressor	93			
3201884	Plate, Cover	79			
3201982	Connector, Male	89			
3201983	Elbow, Male Adapter	89			
3201995	Cover, Oil Pan Adapter	57			
3202101	Plug, Threaded	79			
3202114	Shaft, Idler	5, 8			
3202117 3202152	Gasket, Connection Pan, Oil	7 6 57			
0202102	i an, on	37			